



**Firmware Release Note**

# **ZyWALL 5**

**Release 4.00(XD.2)**

**Date:**  
**Author:**  
**Project Leader:**

**October 26, 2005**  
**Jay Liu**  
**Jeffery Chen**

## **ZyXEL ZyWALL 5 Standard Version release 4.00(XD.2) Release Note**

**Date:** October 26, 2005

### **Supported Platforms:**

---

ZyXEL ZyWALL 5

### **Versions:**

---

ZyNOS Version: V4.00(XD.2) | 10/26/2005  
Bootbase Version: V1.08 | 01/28/2005 14:47:16  
Vantage Agent Version: 1.0.0

### **Note:**

---

1. Restore to Factory Defaults Setting Requirement: No.
2. The setting of ignore triangle route is on in default ROM FILE. Triangle route network topology has potential security crisis. If you are not clear about it, please refer to Appendix for the triangle route issue.
3. IKE process in phase 2 will check ID information between system and the peer. If you found that the IPSec connection is failed, please check your settings.
4. When firewall turns from "off" to "on", the firewall initialization procedure will disconnect all connections running through the ZyWALL.
5. SUA/NAT address loopback feature was enabled on ZyWALL by default, however, if users do not need it, a C/I command "ip nat loopback off" could turn it off.
6. In WLAN configuration, a switch for enable / disable WLAN is added. The default value is "**disable**" since WLAN without any security setting is vulnerable. Please configure MAC filter, WEP and 802.1X when you enable WLAN feature.
7. When UPnP is on, and then reboot the device, Windows XP will not detect UPnP and refresh "My Network Places→Local Network". Plug in network wire again can solve this problem.
8. The default port roles for LAN/DMZ setting is: port 1 to port 4 are all LAN ports.
9. In bridge mode, If LAN side DHCP clients want to get DHCP address from WAN side DHCP server, you may need to turn on the firewall rule for BOOT\_CLIENT service type in WAN→LAN direction.
10. Under Bridge Mode, all LAN ports will behave as a hub, and all DMZ ports will also

behave as another hub.

11. For users using the default ROMFILE in former release, please remove "ip nat session 1300" from autoexec.net by CI command "sys edit autoexec.net". (Upgrade from 3.62)
12. The first entry for static route is reserved for creating WAN default routes and is READ-ONLY.
13. In previous 3.64 firmware, the VID value of DPD is not correct. VID change will cause current version doesn't work with the wrong value. Please be sure to connect with devices which has updated VID, or the DPD may not work correctly.
14. In SMT menu 24.1, "WCRD" only represents the WLAN card status when you insert WLAN card into the ZyWALL. If you insert TRUBO card, you will see " WCRD" is always down.
15. If you do not want a mail to be scanned by Anti-Spam feature, you can add this mail into whitelist in eWC->Anti-Spam->Lists
16. If you want traffic redirect feature to work, you should turn on WAN ping check by "sys rn pingcheck 1".
17. The first entry for static route is reserved for creating WAN default route and is READ-ONLY.
18. If you had activated content filtering service but the registration service state is "Inactive"after upgrading to 4.00, please click "Service License Refresh" in "eWC->REGISTRATION->Registration" or wait until device synchronize with the myzyxel.com.

## **Known Issues:**

---

### **[UPnP]**

1. Sometimes on screen the "Local Area Connection" icon for UPnP disappears. The icon shows again when restarting PC.
2. When you use MSN messenger, sometimes you fail to open special applications, such as whiteboard, file transfer and video etc. You have to wait more than 3 minutes and retry these applications.

### **[Bandwidth Management]**

1. Bandwidth Management doesn't work on wireless LAN.
2. Bandwidth management H.323 service does not support Netmeeting H.323 application.
3. Using BWM in PPPoE/PPTP mode, there are two filters for FTP and H323 ALG
  - (1) If we execute FTP first then H323 cannot pass through ZyWALL.
  - (2) If we execute H323 before FTP, all functions work properly.
4. In some cases, BWM (Fairness-Based mode) cannot manage bandwidth accurately. Ex. In WAN interface, there are two subclasses for FTP service, their speed are 100Kbps and 500Kbps, the traffic match the filter which speed is 500Kbps may only use half of it's bandwidth.

### **[Content Filter]**

1. Can't block ActiveX in some case. (Sometime the ActiveX block fails. This is because the ActiveX is cached in C:\WINNT\Downloaded Program Files\ If you want to test the ActiveX block functionality. Please clear the cache in windows.)

### **[Bridge Mode]**

## ZyXEL Confidential

1. When device boots in Bridge Mode, some CI command error messages will be displayed on console. This is because some predefined CI commands in autoexec.net is forbidden to execute in Bridge Mode.
2. Don't use CI command "bridge rstp bridge enable" to enable RSTP, it will change the initial Path Cost value to an incorrect value.

### [WLAN]

1. G-100 WLAN card does not support the fragment size below 800.

### [ALG]

1. Symptom: P2002 can not connect with each other in Peer-to-Peer mode.  
Condition:  
Topology: P2002--(LAN)ZyWALL\_A(WAN, IP=172.21.2.151)--(WAN, IP=172.21.1.134)ZyWALL\_B(LAN)--P2002
  - (1) In ZyWALL\_A and ZyWALL\_B, add a "WAN to LAN" firewall rule to pass traffic with port "5060".
  - (2) In ZyWALL\_A and ZyWALL\_B, add a port forwarding rule "5060" to P2002.
  - (3) In ZyWALL\_A and ZyWALL\_B, enable SIP ALG.
  - (4) Setup both P2002 to Peer-to-Peer mode.
  - (5) Making the SIP connection by P2002 will be failed.
  - (6) Turn off firewall in ZyWALL\_A and ZyWALL\_B, sometimes the connection can be built up if we dial from P2002 which is behind ZyWALL\_A.

### [Anti-Spam]

1. Symptom: Mail cannot be delivered successfully.  
Condition:  
Topology: Mail Client ----- ZyWALL\_A---- ZyWALL\_B--- Mail Server
  - (1) Turn on Anti-Spam at ZyWALL A and B.
  - (2) Mail Client sent mail to Mail Server.
  - (3) Sometimes mail cannot be sent or received successfully.
  - (4) The situation also happens when mail client receive mail.
2. Symptom: Cannot send mail (L to W: SMTP) when device is in bridge mode and the subnet of device IP is different with mail client's.  
Condition:  
Topology:  
Mail  
Server(192.168.12.123/24)---Internet----ZyWALL(192.168.11.9/23)----PC(192.168.12.163)
  - (1) Change device to Bridge Mode, IP = 192.168.11.9, Mask = 255.255.254.0, Gateway = 192.168.10.11, DNS = 168.95.1.1.
  - (2) Edit web eWC>Anti Spam, enable Anti Spam.
  - (3) Edit web eWC>Anti Spam>External DB Enable, threshold = 0.
  - (4) PC can not send mail to MailServer.
  - (5) If disable Anti-Spam or change device's IP subnet to 192.168.12.x/24, mail can be sent.

### [VPN]

1. Symptom: VPN Relay does not work  
Condition:  
Topology: Branch\_A[ZyWALL] ----- HQ[ZyWALL] ----- Branch\_B[ZyWALL]

(1) Network Settings:

Branch\_A

WAN:10.0.0.2

LAN : 192.168.167.0/24

HQ

WAN:10.0.0.1

LAN: 192.168.168.0/24

Branch\_B

WAN:10.0.0.3

LAN: 192.168.169.0/24

(2) VPN settings:

Branch\_A has one VPN policy:

Local IP address: 192.168.167.0/24

Remote IP address: 192.168.168.0~192.168.169.255

Headquarter has two VPN policies, one is to Branch\_A, the other is to Branch\_B.

(i) Policy to Branch\_A

Local IP address: 192.168.168.0~192.168.169.255

Remote IP address: 192.168.167.0/24

(ii) Policy to Branch\_B

Local IP address: 192.168.167.0~192.168.168.255

Remote IP address: 192.168.169.0/24

Branch\_B has one VPN policy:

Local IP address: 192.168.169.0/24

Remote IP address: 192.168.167.0~192.168.168.255

(3) Dial up VPN from both Branch A and Branch B to HQ. Then you can ping Branch B from Branch A,

But you cannot login any FTP server in Branch A from Branch B.

[MISC]

1. The DMZ TxPkts counter increment at about 1 pkt/min even without any Ethernet cables ever connected.
2. At SMT24.1, the collisions for WAN, LAN and DMZ port are not really counted.
3. Under PPTP encapsulation mode, we can not access some website like <http://www.kimo.com.tw/>
4. In eWC->Statistics, Tx data for Dial Backup is not correct.
5. Symptom: LAN host can ping Internet while LAN host change cable from LAN port to DMZ port.  
Condition:
  - (1) Host connects to LAN port and gets DHCP address from router.
  - (2) Unplug LAN host cable and plug it into DMZ port.
  - (3) The host can still ping Internet using LAN DHCP address
  - (4) The scenario will continue about 30secs.
6. Symptom: PC can't ping remote gateway through VPN tunnel under this special

topology.

Condition:

PC-----LAN ZyWALL\_A WAN-----LAN ZyWALL\_B

WAN-----Internet

(192.168.1.33) (192.168.100.33) (192.168.100.1) (172.202.77.145)

(1) VPN configuration in ZyWALL\_A:

WAN IP Address=192.168.100.33, WAN IP Subnet Mask=255.255.255.0, Gateway IP Address=192.168.100.1.

Gateway policy, Name=IKE1, Remote Gateway Address=192.168.100.1, Pre-Shared Key=12345678.

Network policy for IKE1, Active=enable, Name=IPSec1, Local Network/Starting IP Address=192.168.1.33, Remote Network/Starting IP Address=0.0.0.0

(2) VPN configuration in ZyWALL\_B

WAN IP Address=172.202.77.145, WAN IP Subnet Mask=255.255.0.0, Gateway IP Address=172.202.77.1.

Gateway policy, Name=IKE1, Remote Gateway Address=192.168.100.33, Pre-Shared Key=12345678.

Network policy for IKE1, Active=enable, Name=IPSec1, Local Network/Starting IP Address=0.0.0.0, Remote Network/Starting IP Address=192.168.1.33.

(3) When we established the VPN tunnel between ZyWALL\_A and ZyWALL\_B, we can access ZyWALL\_B (192.168.100.1) with the remote management, such as Telnet, FTP..., this traffic will go through VPN tunnel. However, we can not ping ZyWALL\_B (192.168.100.1) successfully because this ICMP traffic did not go through VPN tunnel to ZyWALL\_B.

## **Features:**

---

### **Modifications in V4.00(XD.2) | 10/26/2005**

Modify for formal release.

### **Modifications in V4.00(XD.2)b2| 10/19/2005**

#### **1. [BUG FIX] 051013130**

Symptom: Convert rom file from 3.64 to 4.00, Max. Concurrent session Per Host has some problem.

Condition:

(1) Upgrade firmware from 3.64 to 4.00.

(2) In eWC->ADVANCE->NAT, Max. Concurrent Sessions Per Host is 6000, it should be 4000.

#### **2. [BUG FIX] 051014221, 051014222, 051014223**

Symptom: Spelling error in eWC->Registration page.

Condition:

(1) In eWC->REGISTRATION-> Registration page, set two different passwords.

(2) Press "Apply" button, the status shows "Password and Confirm password are

**ZyXEL Confidential**

- different".
- (3) A word "different" spells error. It should be "different".
3. [BUG FIX]
- AS fail count will not be increased even the real timeout occurs
4. [BUG FIX] 050928542, 051012075, 051012076, 051012077
- Symptom: The added source IPs of Firewall rule will be lost.
- Condition:
- (1) Go to GUI->FIREWALL->RULE EDIT page.
- (2) Edit a firewall rule.
- (3) Add a source IP(or destination IP) that exceeds its maximum size(20 for ZW5).
- (4) The added item will be lost.
5. [FEATURE CHANGE] 051018364 , 051018365, 051018366
- In eWC->Registration page, change Username field behavior.
- WAS: "-" character is not allowed to key in.
- IS: "-" character is allowed to key in.
6. [BUG FIX] 051018403
- Symptom: PPTP (GRE) cannot pass through NAT.
- Condition:
- PPTP
- Server(192.168.1.33)--(LAN:192.168.1.1)DUT(WAN:192.168.11.100)--PC(192.168.1.200)
- (1) Add PPTP Server(192.168.1.33) as Default Server in Port Forwarding
- (2) Firewall is disabled.
- (3) PC(192.168.11.200) can not dial in PPTP on 192.168.11.100
7. [BUG FIX] 051014198, 051014199, 051014200
- Symptom: Use registration wizard to enable service, and last page wording error.
- Condition:
- (1) In eWC->HOME->Internet Access button, go to the last page.
- (2) Registration status wording was wrong.

**Modifications in V4.00(XD.2)b1| 10/08/2005**

1. [BUG FIX] 050906259
- Symptom: Disable bridge mode Firewall "Log Broadcast Frame". Broadcast logs always appear.
- Condition:
- (1) In bridge mode, disable all Firewall -> Default Rule -> "Log Broadcast Frame".
- (2) Broadcast logs always appear.
2. [BUG FIX] 050825052
- Symptom: Tfggen tool causes router crash.
- Condition:
- (1) Use tfggen to send 40000 to 172.21.0.254 and turn it off.
- (2) Use "dev chan disp enet3" to make sure the sending bit is 1.
- (3) Unplug and plug wan2 and router will crash.
3. [BUG FIX] 050912438
- Symptom: Device will hang and reboot after "Email Log Now" in bridge mode.

Condition:

- (1) Topology(Public IP): PC(211.72.158.115) ---  
[LAN]ZW70\_BridgeMode(211.72.158.116)[WAN] ---  
Internet/MailServer/MailRecipient.
- (2) Set the device as Bridge mode.
- (3) Configure eWC->LOGS: "E-mail Log Settings".
- (4) Click eWC->"Email Log Now" to send log mail.
- (5) System will hang and then reboot by software watchdog.

4. [BUG FIX]050905192

Symptom: Anti-Spam causes memory leak in bridge mode.

Condition:

- (1) Topology: Mail Client --- ZyWALL --- Mail Server
- (2) Turn on Anti-Spam at ZyWALL (Bridge Mode).
- (3) Mail Client sends mail to Mail Server. (You can try 500 mails with 2 attachments, total size is about 30k).
- (4) ZyWALL memory leaks.

5. [BUG FIX] 050922955

Symptom: After updating signature, sometimes the server IP address is incorrect in centralized log.

Condition:

- (1) In SMT 24.8, type "sys update signatureUpdate".
- (2) After updating signature, type "sys log dis".
- (3) Sometimes you can see a signature update log with incorrect server IP "127.0.0.1".

6. [ENHANCEMENT]

In eWC->FIREWALL->EDIT RULE page, we added the limitation on the number of source ip address and destination ip address. The limitation is 20.

7. [ENHANCEMENT]

The device will not retry to update the signature if the update is triggered by user. Ex. CI command "sys update signatureUpdate", "idp update start", "av update start" or "Update Now" button in eWC.

8. [ENHANCEMENT]

In eWC>Anti-Spam>General>Action taken when mail sessions threshold is reached, the wording of "Discard" will mislead user to think the system will "drop the mail" when mail session reach the system's limit. In fact, the system doesn't drop the mail, it just drop the mail connection until system have an available mail session to process incoming connection. We replaced "Discard" with "Block" and the wording of "Block" will be explained in web help and User's Guide by "System will Block this mail until a mail session is available".

9. [BUG FIX]

Symptom: Sometimes device will crash when receiving special mails.

Condition:

Topology: Mail\_Client --- ZyWALL --- Mail\_Server

- (1) ZyWALL turn on Anti-Spam, turn on external DB, threshold = 0.
- (2) Mail\_Client receive mail from Mail Server
- (3) Sometimes ZyWALL will crash due to "Data Abort", "not mbuf cookie", "mbuf double free", or mail did not tagged with spam string.



**ZyXEL Confidential**

10. [BUG FIX] SPR ID: 050926383,050926384,050926385  
Symptom: AS+AV Enable, it can't send or receive mail if attached virus files.  
Condition:  
(1) AS and AV enable.  
(2) AV General Setup select all.  
(3) Send or receive a mail with attached virus files.  
(4) It will can't send or receive mail.
11. [BUG FIX] 051003282  
Symptom: PC cannot transfer file from server (172.20.0.38)  
Condition:  
Topology: PC ---- ZyWALL(WAN:172.x.x.x)(Bridge/Router) --- trunk (172.20.0.38)  
(1) Restore default romfile.  
(2) PC get file from trunk, but it always fails after several seconds.
12. [BUG FIX] SPR ID: 050930643  
Symptom: Edit NAT port forwarding default server = 192.168.1.33, then ping from DUT2 to DUT1, it should show W to L logs, but it show W to W logs.  
Condition: PC1-----LAN DUT1 WAN-----PQA LAB-----WAN DUT2 LAN  
(1) Set with CI commend "sys romr|y"  
(2) Edit web eWC/WAN/WAN1,My WAN IP Address =172.202.77.121,My WAN IP Subnet Mask=255.255.0.0 ,Gateway IP Address=172.202.77.1  
(3) Edit NAT port forwarding default server = 192.168.1.33, then ping from DUT2 to DUT1, it should show W to L logs, but it show W to W logs.  
-> If we telnet from DUT2 to DUT1, it shows W to L logs, and this right.  
-> If we ping from DUT2 to DUT1, it shows W to W logs, but it should show W to L logs.
13. [BUG FIX] 051003323  
Symptom: NAT many one to one cannot work.  
Condition:  
(1) Edit web eWC/NAT/Address Mapping,WAN Interface =WAN2,Insert a Many One-to-One rule (Local Start IP=192.168.1.41,Local End IP=192.168.1.42,Global Start IP=192.168.12.100,Global End IP=192.168.12.101) on eWC/NAT/Address Mapping page  
(2) Set with CI command "ip nat reset enif1"  
(3) 192.168.12.110 do port scan 192.168.12.100(port 1-100) and 192.168.12.101(port 1-100)  
(4) 192.168.1.41 and 192.168.1.42 cannot capture all port scan packets.
14. [BUG FIX] 050930647  
Symptom: Some mails should have SPAM tag or NoScore tag but they didn't have any tag  
Condition:  
(1) Enable AS  
(2) eWC->AS->ExternalDB-: Enable external DB, set the threshold=0, fill the tag for no spam score  
(3) MS Outlook Express received a lot of mails from the mail server  
(4) Some mails did not have any Spam/No Score tag.
15. [FEATURE CHANGE]

**ZyXEL Confidential**

WAS: Allow timeouted ConeNAT session to recreate NAT session from WAN to LAN.  
IS: Do not allow timeouted ConeNAT session traffic to recreate NAT session from WAN to LAN.

**Modifications in V4.00(XD.1) | 09/26/2005**

Modify for formal release.

**Modifications in V4.00(XD.1)b2| 09/21/2005**

1. [BUG FIX]

Symptom: Content filter was registered in router mode and changed to bridge mode without configure DNS server. One PC open a web site can make DUT crash.

Condition:

- (1) In router mode, register content filter and enable it. Edit eWC/Content Filter/Categories/Select Categories, and enable some items (Pornography, Business, Gambling, etc.)
- (2) Change DUT to bridge mode without configure DNS server.
- (3) PC1 on LAN open a website, and IE would show "block (DNS resolving failed)"
- (4) DUT crashed.

**Modifications in V4.00(XD.1)b1| 09/12/2005**

1. [ENHANCEMENT]

Add CI command "ip urlfilter bypass [LAN/DMZ/WAN] [ON/OFF]" to let traffic matches LAN->LAN, DMZ->DMZ or WAN->WAN directions can be bypassed content filtering.

NOTE: (1) This is a runtime CI command, user can add it into autoexec.net.

(2) This command only support in router mode.

2. [ENHANCEMENT]

Periodically sending the keep-alive zero window TCP ACK when the AS engine handles the mail. The default value is 5 seconds.

3. [BUG FIX] 050830189

Symptom: Enable AS "Discard SMTP mail" and send a mail with attached file will cause the device hangs up

Condition:

- (1) Enable AS "Discard SMTP mail"
- (2) Send a over 20k sized mail
- (3) The device hangs up

4. [BUG FIX] 050831205

Symptom: Device will crash if users turn on myZyxeCom debug message then process device registration and trial service activation.

Condition:

- (1) Turn on myzyxel.com debug message by "sys myZyxeCom debug type 3"
- (2) Go to eWC>REGISTRATION, register device and activate trial service for Content Filter.
- (3) Device will crash.

5. [BUG FIX] 050701018

Symptom: DHCP client gets IP failed

**ZyXEL Confidential**

Condition:

- (1) Topology: PC---(192.168.1.1) Router switch to: PC---(192.168.70.250) DUT
- (2) PC connects to the router LAN port with DHCP, and get an IP.
- (3) DUT set a static DHCP rule for the PC.
- (4) PC switch to DUT, and gets an IP failed. The user must release IP manually, then PC will get IP successfully.

6. [BUG FIX]

Symptom: ZyWALL sends [HASH][DELETE] to delete VPN tunnel after output timed-out even they keeps traffic via the tunnel.

Condition: PC1 -----ZyWALL-----PC2(Zywall VPN client)  
(L) (W) |-----PC3(Zywall VPN client)

- (1) Configure a dynamic VPN-rule in the ZyWALL.
- (2) Establish first VPN tunnel by PC2 using ZyWALL VPN client.
- (3) Establish Second VPN tunnel by PC3 using ZyWALL VPN client.
- (4) Both PC2 and PC3s' PCs keep ping to PC1.
- (5) ZyWALL sends [HASH][DEL] to 2nd VPN peer only every 2 minutes which is output Idle time-out timer.

7. [BUG FIX] 050907311

Symptom: Bridge mode VPN can't work if configure by Wizard.

Condition:

- (1) Configure bridge mode VPN with wizard.
- (2) Dial VPN rule and it always fail.

8. [BUG FIX] 050907308

Symptom: Device will hang forever when editing firewall custom service

Condition:

- (1) Enable firewall and add custom service, service name=test1, IP protocol=TCP/UDP , port range=2222-2223.
- (2) Edit eWC/firewall/rule summary, packet direction=WAN to WAN/ZyWALL, insert service "test1", Action for matched packet=permit.
- (3) Edit eWC/firewall/service and add another custom service, service name=test2, IP protocol=TCP , port range=100-200.
- (4) Edit eWC/firewall/rule summary, packet direction=LAN to WAN, insert service "test2", Action for matched packet=Drop.
- (5) Edit eWC/firewall/service and modify custom service "test2", change IP protocol to UDP then click apply.
- (6) Device will hang.

**Modifications in V4.00(XD.0) | 09/02/2005**

Modify for formal release.

**Modifications in V4.00(XD.0)b5| 09/02/2005**

1. [BUG FIX]

Device crashed sometimes when doing FTP stress test.

**Modifications in V4.00(XD.0)b4| 08/27/2005**

1. [BUG FIX] 050819823

**ZyXEL Confidential**

Symptom: Device will crash.

Condition:

- (1) Enable Anti Spam.
- (2) Enable "Discard SMTP mail. Forward POP3 mail with tag in mail subject".
- (3) Send a spam mail.
- (4) Device will crash.

2. [BUG FIX] 050822932

Symptom: CPU loading will be very heavy.

Condition:

- (1) Set two IKE rules which secure gateways are both domain name.
- (2) Go to CLI command "sys cpu display", CPU loading is 100%.

3. [BUG FIX] 050824993, 050824994, 050824995

Symptom: Sometimes system DNS cannot resolve domain name to IP address.

Condition:

- (1) In CLI, enter "ip dns query name myupdate.zywall.zyxel.com"
- (2) Try (1) more times and sometimes cannot be resolved.

4. [BUG FIX] 050819842

Symptom: ZyWALL 5 will crash when upload firmware via GUI.

Condition

- (1) Upload a very large file via GUI.
- (2) Device will crash.

5. [BUG FIX] 050823954

Symptom: The IPSec rule swap without configuring ID Content will fail (XAUTH case).

Condition:

- (1) Add one static IPSec rule with XAuth (Rule one).
- (2) Add one dynamic IPSec rule with XAuth. Keep the "Peer ID Content" and "Local ID Content" unchanged "0.0.0.0" (Rule two).
- (3) Dial the VPN tunnel from peer gateway, the device won't swap to rule two, and the connection can not be built up.

6. [BUG FIX] 050822915

Symptom: VPN can not be established if reponder has multiple rules and the correct rule's phase 2 ID type is subnet.

Condition:

Topology: ZyWALL\_A(WAN)----(Internet)----(WAN) ZyWALL\_B

- (1) IPSec policy in ZyWALL\_A:

Policy 1:

Local: 192.168.3.10/255.255.255.0

Remote: 192.168.2.7/255.255.255.0

Policy 2:

Local: 192.168.1.10/255.255.255.0

Remote: 192.168.2.6/255.255.255.0

- (2) IPSec policy in ZyWALL\_B:

Policy 1:

Local: 192.168.2.0/255.255.255.0

Remote: 192.168.1.0/255.255.255.0

**ZyXEL Confidential**

- (3) The other phase 1 and phase 2 parameters for ZyWALL\_A and ZyWALL\_B are the same.
  - (4) Establish policy 1 tunnel from ZyWALL\_B.
  - (5) ZyWALL\_A should establish VPN tunnel by using policy 2, but it fails.
7. [ENHANCEMENT]  
Add CI command "aux usrmdn [1/0]" to switch USR modem flag. If this flag is on, user can dial USR modem successfully.  
Note:  
(1) For USR modem, user should disable hardware flow control(initial string is "at&f1"); or the modem speed should be 38400 BPS.  
(2) This is a runtime CI command, and this flag is not saved into flash. User can add this command into autoexec.net.
8. [BUG FIX] 050517977  
Symptom: IPSec check rule conflict on IP 0.0.0.0 is incorrect.  
Condition:  
(1) Restore default romfile.  
(2) Configure the two IPSec rules shown as follow:  
Rule A: local: 0.0.0.0 remote: 192.168.3.33  
Rule B: local: 192.168.70.94 remote: 192.168.3.33  
These two IPSec rules conflict and we should add check for it.
9. [BUG FIX] 050823946, 050819858, 050820885  
Symptom: The UPnP discovery mechanism cannot work normally.  
Condition:  
(1) Disable the UPnP function.  
(2) Reboot device.  
(3) Enable the UPnP function.  
(4) The XP network place cannot show the UPnP icon.
10. [BUG FIX] 050822912  
Symptom: Device crashes when doing VPN stress test.  
Condition:  
(1) Create several VPN tunnels and do stress test.  
(2) Device will crash and output the following message on console.  
- Prefetch abort exception  
Fault Status = 0xFFFFFFFF  
Fault Addr = 0xFFFFFFFF

**Modifications in V4.00(XD.0)b3| 08/17/2005**

- 1. [BUG FIX] 050727190  
Symptom: Spelling invalid in IDP eWC.  
Condition:  
(1) In eWC>IDP>Signature, click the "Switch to query view".  
(2) The wording of the type selection item "Trojan Hourse" is not right. The word "Hourse" should be "Horse".
- 2. [BUG FIX] 050721992  
Symptom: Inactivate Wireless without wireless card will cause device hang.  
Condition:

**ZyXEL Confidential**

- (1) Insert wireless card, and enable wireless function.
- (2) After taking out B-100 card, upgrade firmware and disable wireless function.
- (3) Reboot the device, the device will hang and cannot finish the system booting.
3. [BUG FIX] 050715808  
Symptom: The wireless clients with 802.1x + dynamic WEP cannot ping each other.  
Condition:
  - (1) Setup 802.1x+dynamic WEP environment.
  - (2) We find that these wireless clients cannot ping each other after rebooting the device.
4. [ENHANCEMENT]  
Make AntiVirus LOG be consistent with IDP LOG in signature Release Date format.
5. [ENHANCEMENT]  
Change the strategy of the search by name to be case-insensitive in eWC->IDP->Signature->Query page.
6. [FEATURE CHANGE]  
Change the wording "WLAN ZONE" to be "WLAN" in the SMT menu 7.1.
7. [BUG FIX] 050727161  
Symptom: Output idle timer should not be disabled.  
Condition: In eWC->VPN->Global Setting page and SMT 24.8, we should not allow users to set output idle timer = 0.
8. [FEATURE CHANGE]  
In SMT 24.1, Wording change: CARD -> WCRD.
9. [BUG FIX] 050728301, 050728302, 050728303  
Symptom: Execute SMT 24.1->Press Command->"9-Reset Counters", device will crash.  
Condition:
  - (1) Insert turbo card.
  - (2) Execute SMT 24.1->Press Command->"9-Reset Counters" many times, device will crash.
10. [ENHANCEMENT] 050708441, 050708442 and 050712620
  - (1) In eWC>AV/IDP>Update, avoid a blank web page be displayed.
  - (2) In eWC>WIRELESS CARD>Wireless Card, remove "Your device must have a wireless card installed..." if the wireless card is installed.
  - (3) In eWC>AV>General/IDP>General, remove "Your device must have a turbo card installed..." if the turbo card is installed.
11. [BUG FIX] 050616759, 050708438, 050712618  
Symptom: System crashes sometimes while signature update or service license refresh.  
Condition:
  - (1) Disconnect WAN interface when you update signature. Hence, the update will fail.
  - (2) Re-connect the device WAN interface to Internet.
  - (3) After the update fail, the device will crash sometimes.
12. [ENHANCEMENT] 050808225  
Include "WLAN to WLAN" for FireWall hint message.  
WAS :In eWC>FireWall>Default Rule page, update message is "Warning:When this box is checked, all LAN to LAN, WAN to WAN, DMZ to DMZ and packets will bypass the Firewall check."  
IS : In eWC>FireWall>Default Rule page, change message to "Warning: When this

box is checked, all LAN to LAN, WAN to WAN, DMZ to DMZ and WLAN to WLAN packets will bypass the Firewall check."

13. [ENHANCEMENT] 050808256

Message in signature update needs to be update.

WAS :In eWC>IDP>signature update>waiting page, update message is "This may take up a few seconds. Please wait..."

IS :In eWC>IDP>signature update>waiting page, change message to "This may take up to minutes. Please wait..."

14. [ENHANCEMENT]

WAS: In eWC>REGISTRATION>Service page, when service is expired, the Expiration Day field and Registration Type is empty.

IS : In eWC>REGISTRATION>Service page, when service is expired, the Expiration Day field shows expired date, and Registration Type shows type of expired service.

15. [BUG FIX] 050803125

Symptom: Create two VPN rules which Remote Gateway IP are domain name, the second security gateway can't update automatically.

Condition: PC1 ---- ZW5\_1 (wan)----Internet ---- (wan) ZW5\_2 ---- PC2

(1) ZW5\_1 configuration:

- Set WAN Encapsulation = PPPoE mode.
- Set DDNS & active it.
- Create 2 IKE & 2 ipsec, both security gateway are IP address.

(2) ZW5\_2 configuration:

- Set WAN Encapsulation = Ethernet/ Static IP.
- Set DNS server= 168.95.1.1.
- Create 2 IKE & 2 ipsec, both security gateway are domain.
- eWC/ VPN/ Global Setting, Set " Gateway Domain Name

(3) Dial up 2 VPN tunnels.

(4) Drop ZW5\_1's PPPoE line then dial up again.

(5) After 2 minutes into ZW5\_2's menu 24.8, issue " ipsec ikeL" to check the security gateway IP --> The Second security gateway not update new IP .

16. [ENHANCEMENT]

Add a centralized LOG "Error: download signature file failed." for signature update fail due to not receive complete signature file. This situation most happens when the network connection is not stable so that device can not receive complete signature.

17. [BUG FIX]

Symptom: Mail can not be sent or received when device turn on Anti-Spam.

Condition:

(1) Device turn on Anti-Spam

(2) Generate a lot of mail sessions with a lot of mails from LAN side hosts at the same time.

(3) Mail can not be sent or received in the following conditions:

(3.1) If queued 20k mail can not be sent successfully after query succeed, then that mail will send fail.

(3.2) ACK packets generated by ZyWALL will cause the TCP connection between client and server abnormal.

(3.3) Re-transmit packets from mail client or server may be dropped by ZyWALL.

**ZyXEL Confidential**

18. [ENHANCEMENT]

Improve Anti-Spam external database query timeout rate by adjusting internal system parameters.

19. [BUG FIX] 050814513

Symptom: System timer will be exhausted when using TfGen to send heavy traffic to LAN interface.

Condition:

- (1) Enable AV/IDP feature.
- (2) In LAN side PC, Use TfGen to generate heavy traffic to LAN interface. (Heavy traffic : 40000 kbps/sec up.)
- (3) In SMT 24.8, type "sys updateServer signatureUpdate", the router will crash.

20. [BUG FIX]

Symptom: Device crashes in Bridge Mode when enable IDP and Content filter

Condition:

- (1) Insert Turbo card and restart device to Bridge Mode.
- (2) Download signature to device and restart.
- (3) In "eWC->IDP->General", enable IDP and activate all interface.
- (4) In CI command, type
  - (4.1) idp tune load
  - (4.2) idp tune con l7Httpasm on
  - (4.3) idp tune save
- (5) In "eWC->Content Filter->General", enable content filter.
- (6) In "eWC->Content Filter->Customization", enable customization and add a forbidden web site "www.zyxel.com".
- (7) Access <http://www.zyxel.com> from a LAN PC.
- (8) Device crashes.

21. [FEATURE CHANGE]

Change log behavior when mail session threshold is reached.

WAS: Only generate log when action is DISCARD.

IS: Generate log when action is FORWARD and DISCARD.

**Modifications in V4.00(XD.0)b2 | 07/25/2005**

1. [FEATURE CHANGE]

WAS: After deleting the white/black rule via CLI, user needs to type the save command.

IS: After deleting the white/black rule via CLI, user needn't to type the save command.

2. [BUG FIX] 050614631

Symptom: IP overlapping check function in eWC->ADVANCED->NAT->Address Mapping sometimes will malfunction in some case in NAT address mapping.

Condition:

- (1) In eWC->ADVANCED->NAT->Address Mapping->Edit a rule.
- (2) Select Type "Many-To-Many Overload", set "Local Start IP" as "0.0.0.0", "Local End IP" as "1.0.0.5" "Global Start IP" as "1.0.0.2", "Global End IP" as "6.0.0.8".
- (3) Click "Apply", this rule will be saved, it should not.

3. [ENHANCEMENT] AS GUI wordings change

In eWC>IDP>Signature>Signature Groups Table, refine "select all", "select partial" and "select none" icons in Active / Log / Alert fields.



4. [BUG FIX] 050624163

Symptom: Host traffic can't pass through VPN tunnel with dial backup

Condition: PC1-----ZW5 A-----Internet----ZW5 B-----PC2 Dial backup

- (1) ZW5A add one IKE and one Ipsec rules ,Enable Dial backup
- (2) ZW5B add one IKE and one Ipsec rules
- (3) Dial from ZW5 A, and make sure VPN tunnel build up
- (4) PC1 ping PC2 and PC2 ping PC1 is successful
- (5) Pull out ZW5A WAN line ,Dial backup will dial up ,Dial from ZW5 A, and make sure VPN tunnel is rebuild
- (6) PC1 ping PC2 is successful, but PC2 ping PC1 is fail

5. [BUG FIX] 050628469

Symptom: In bridge mode of the multiple-WAN devices, the LAN web site hits of eWC->LOGS->Reports on WAN2 have not any data.

Condition:

- (1) In Bridge mode, the WAN 1 is disconnected and WAN 2 is connected.
- (2) Enable LOGS->Reports "Collect Statistics" and "Send Raw Traffic Statistics to Syslog Server for Analysis".
- (3) A LAN PC uses IE to connect to "www.google.com".
- (4) Set "Statistics Report"->"Report type" is Web Site hits, and we cannot find any data.

6. [BUG FIX] 050701007

Symptom: After displaying the log by CI, you will see the logs related to Anti-spam are broken.

Condition:

- (1) Enable Anti-Spam and send a Email(not spam mail) through the ZyWALL.
- (2) Use CI->sys logs display to display the logs.
- (3) You will see the logs related to Anti-spam are broken like "1er1@192.168.70.20 Subject:EmailBomb".

7. [BUG FIX] 050705232

Symptom: In VPN rule name, when users key-in " ' ", GUI will corrupt.

Condition:

- (1) In eWC>VPN>VPN Rules(IKE) Summary Table, click "+" to add a gateway policy.
- (2) Fill in "Name" field with " ' ".
- (3) Key in "Pre-Shared Key" with 12345678 and click "Apply".
- (4) The GUI will refresh to VPN Rule(IKE) Summary Table page, but is abnormal.

8. [BUG FIX] 050628421

Symptom: Device will crash after testing dial backup a period time.

Condition:

- (1) Set WAN 1 as PPTP and enable Dial backup and Set Allocated Budget=1 minute, period=1 hour.
- (2) Ping 168.95.1.1 with DOS command from LAN site host successfully.
- (3) Dial backup will hang up after 1 minute.
- (4) Device will crash after pull out WAN and LAN and Dial Backup line for 10 mins.

9. [BUG FIX] 050707366

Symptom: Device cannot get DHCP IP after WAN IP is released.

Condition:

- (1) Device WAN port connects to DHCP server (WAN get DHCP IP).
- (2) Use SMT 24.4.2, "WAN DHCP Release" but not use "WAN DHCP Renewal".
- (3) LAN side PC ping outside, device cannot renew DHCP automatically.

10. [BUG FIX]

Symptom: Content filter cannot add keyword.

Condition:

- (1) Goto GUI->Content Filter->Customization page.
- (2) Add Trusted website to its maximum number.
- (3) Add Forbidden website to its maximum number.
- (4) Keyword cannot be added any more.

11. [BUG FIX] 050707368, 050708419

Symptom: In the eWC->Firewall Rule Summary page, insert a new rule and click "Back" button of IE. Then insert rule again, Firewall will have a null record rule.

Condition:

- (1) In eWC>Firewall>Rule Summary page, click "Insert" button, then click IE "Back" button.
- (2) Click "Insert" button again, and set one rule then "Apply".
- (3) Rule Summary page have an additional null record rule.

12. [BUG FIX] 050708444, 050708443

Symptom: When IDP/AV service expired, the expiration day displayed incorrect format in eWC/AV/Update page.

Condition:

- (1) Device IDP/AV service expired.
- (2) The expiration day displayed incorrect format in eWC>IDP and AV>Update.

13. [ENHANCEMENT]

Change AV>Update error message.

WAS : In eWC>AV>Update, update message is "The signature search engine is not ready".

IS : In eWC>AV>Update, change message to "Can not find the signature , please update the signature!"

14. [BUG FIX] 050706310

Symptom: Hardware watchdog wake up and sometimes device hand up.

Condition:

- (1) In SMT24.8, input "ip ping 168.95.1.1"
- (2) Use Ctrl+C to break it.
- (3) Repeat steps 1, 2 fast and you can see the watch dog wake up or device hang.

15. [ENHANCEMENT]

Add firewall predefined services: POP3S/IMAP/IMAPS

16. [BUG FIX] 050627328

Symptom: ZyWALL will log "SMTP successfully" when SMTP authentication fail.

Condition:

- (1) In "eWC->LOGS->Log Settings", set "E-mail Log Settings".
- (2) Enable "SMTP Authentication" and set wrong "Mail Sender".
- (3) In "eWC->View Log", click "Email Log Now".
- (4) There will have a log "SMTP successfully".

**ZyXEL Confidential**

- (5) Actually, the mail was not sent because SMTP server return a error code (454).
17. [BUG FIX] 050725067  
Symptom: Fail in receiving the specific mail when the AV works Condition:  
(1) Enable POP3 AV , Enable POP3 Assembly mode  
(2) Run the POP3 Based-64 AV test with a lot of mail samples  
(3) Some mails couldn't be received
18. [FEATURE CHANGE]  
WAS: When Turbo card is not inserted, and accessing IDP at the moment, it shows "The turbo card is not ready , please insert the card and reboot! ".  
IS: When Turbo card is not inserted, and accessing IDP at the moment, it shows "The turbo card is not ready. Please power down the appliance, insert the card and reboot!".
19. [FEATURE CHANGE]  
WAS: Wording "WLAN" in the network status field in SMT menu 24.1 indicates the wireless card status. Wording "ZONE" indicates the WLANZONE channel status.  
IS: "WLAN" -> "CARD", "ZONE" -> "WLAN". So that Wording "CARD" in the network status field in SMT menu 24.1 indicates the wireless card status. Wording "WLAN" indicates the WLANZONE channel status.
20. [FEATURE CHANGE]  
When the device sends registration information to MyZyXEL.com server, the router should send 3 digit country number.
21. [BUG FIX] 050713682  
Symptom: The router should filter the country code when it is "0".  
Condition:  
(1) In SMT 24.8, type "sys myZyXelCom register 123456 123456 1234@1.2.3.4 0" (the country code is 0 which is invalid).  
(2) It should not be accepted by the router.
22. [BUG FIX] 050712614  
Symptom: In eWC>WIRELESS CARD>Wireless card page, the max length of "ESSID" field is too short.  
Condition:  
In eWC>WIRELESS CARD>Wireless card page, the max length of "ESSID" field is 30 characters, but user can key in 32 characters via SMT.
23. [BUG FIX] 050715784, 050715785, 050715786  
Symptom: In eWC->UPnP page, after saving the related items by Firefox will cause device crash sometimes.  
Condition:  
(1) Open the Firefox browser and goto the eWC->UPnP page.  
(2) Disable the UPnP function, and enable some items.  
(3) Click the "Apply" button, the device will crash sometimes.
24. [ENHANCEMENT]  
Add help pages.
25. [FEATURE CHANGE]  
(1) Modify "Update Server" and "myZyXEL.com" logs.  
(2) Pop-up new browser in IDP security policy links.
26. [ENHANCEMENT]  
Add hyper link to pop up a new window to display certificate error reasons for certificate

**ZyXEL Confidential**

log message.

27. [ENHANCEMENT]

Unify eWC>Logs datetime format to ISO 8601 (YYYY-MM-DD hh:mm:ss)

28. [ENHANCEMENT]

Update G100/G110 AP F/W version from 1.0.4.3 to 1.2.8.0.

29. [ENHANCEMENT]

Add the Anti-Virus decompress option in eWC>Anti-Virus->General.

30. [BUG FIX] 050715809

Symptom: The device will reboot in bridge mode when setting wireless authentication as 802.1x.

31. [ENHANCEMENT]

In eWC>REGISTRATION>Registration page and eWC>HOME>wizard page, add username field format check for the myzyxel.com registration.

32. [ENHANCEMENT]

- (1) Add the available free memory to the eWC->Home->memory
- (2) GUI Memory bar will become red when the memory usage percentage is larger than 90%

33. [ENHANCEMENT]

- (1) Change signature version format from 001.001 to 1.001 in the eWC->IDP/AV->Update page
- (2) After signature updated, GUI shows "Get signature success". It should be "Get signature successfully."
- (3) We should provide users hidden CI commands for clearing signature files. These CI commands are "idp/av clearAllSig".
- (4) When the Turbo card is not inserted, in the console: "Current IDP Signatures: N/A" may confuse users. Change to phrase "Turbo card is not installed" when Turbo card is not installed.
- (5) The severity sorting function should perform according to the severity ,not the string case in the eWC->IDP->Signature/Query page
- (6) There should be one space after the SID in the IDP log. Was: IDP:10578,Windows Ping Is: IDP:10578, Windows Ping
- (7) In LOG "Update the signature file successfully", it should be modified as "Signature update OK - New pattern version: V1.001 Release Date: 2005-06-24".
- (8) The "idp/av update display" should be consistent to the eWC->IDP->Update page

34. [BUG FIX] 050714719 ,050714720, 050714735

Symptom: If VPN policy enable NAT Traversal, VPN tunnel can't be built up.

Condition:

PC1(192.168.33.33)-----VPN1(192.168.1.33)--(L)DUT(W)(192.168.12.100)----(192.168.12.101)VPN2--(192.168.2.33)PC2

(1) Edit DUT web eWC/NAT/Port Forwarding, index1/Incoming Port(s)=500-500, index1/Server IP Address=192.168.1.33

(2) Edit VPN1 web eWC/VPN:

- IKE: NAT-T=Enable, Name=IKE1, Remote Gateway Address=192.168.12.101, Pre-Shared Key=12345678, Local ID Content=192.168.1.33, Peer ID Content=192.168.12.101
- IPSec: Active=Yes, Name=IPSec1, Gateway Policy=IKE1, Local Network Starting

IP Address=192.168.33.33 Remote Network Starting IP Address=192.168.2.33

(3) Edit VPN2 web eWC/VPN:

- IKE: NAT-T=Enable, Name=IKE1, Remote Gateway Address=192.168.12.100, Pre-Shared Key=12345678, Local ID Content=192.168.12.101, Peer ID Content=192.168.1.33

- IPSec: Active=Yes, Name=IPSec1, Gateway Policy=IKE1, Local Network Starting IP Address=192.168.2.33, Remote Network Starting IP Address=192.168.33.33

(4) To dial up VPN policy, and it will fail.

35. [ENHANCEMENT]

(1) In eWC>AV/IDP>General, add some warning messages if turbo card is not inserted but AV/IDP is activated. The behavior is similar with WLAN.

(2) When Turbo card is not inserted, in eWC>IDP/AV>Update>Current IDP Signatures will display "Turbo card is not installed".

(3) eWC> MAINTENANCE> Backup&Restore changes to eWC> MAINTENANCE> Backup & Restore.

36. [ENHANCEMENT]

Add centralized logs for signature updating events and errors.

37. [ENHANCEMENT]

Add a centralized log when WAN ping check fails.

38. [FEATURE CHANGE]

Change signature numbers displayed in "eWC->IDP->Signature" page.

39. [ENHANCEMENT]

Display IDP action in centralized log.

40. [BUG FIX] 050715787, 050715788, 050715789.

Symptom: In eWC "HOME" page , "System Time" display error.

Condition:

(1) Go to eWC>HOME Page.

(2) "System Time" display error, the field length is too short.

41. [BUG FIX] 050719921

Symptom: Mail can't be received via POP3.

Condition: Topology:

PC ----- ZyWALL ----- Mail Server

1. Enable Anti-Spam.

2. PC receives mails from Mail Server.

3. PC sometimes can't receive mail and mail client will timeout.

42. [ENHANCEMENT] 050708486, 050712606, 050719906, 050707395, 050712605

Add protection to avoid setting unsupported security in "eWC->Wireless Card" when inserted wireless card is B100. Note: B100 does not support WPA, WPA-PSK, 802.1x + Dynamic WEP.

43. [ENHANCEMENT] Wording

WAS: The device will now reboot. As there will be no indication of when the process is complete, please wait for one minute before attempting to access the router again

IS: The system will now reboot. As there will be no indication of when the process is complete, please wait for one minute before attempting to access the system again.

44. [FEATURE CHANGE] Update registration message

WAS:

**ZyXEL Confidential**

- (1) When user upgrade IDP/AV/AS services, the LOGS shows "service upgrade successfully" but users can not know which service is upgraded"
- (2) When user activate trial service(s), the LOGS shows "trial service activation successfully" but users can not know which service is activated. IS:
  - (1) When user upgrade services, the LOGS will show "Content Filter service upgrade successfully" or "IDP/Anti-Virus service upgrade successfully" or "Anti-Spam service upgrade successfully" depends on which service license key is used.
  - (2) When user activate trial service(s), the LOGS shows which trial service is activated. Ex. "Content Filter, IDP/Anti-Virus trial service(s) activation successfully"

**Modifications in V4.00(XD.0)b1 | 07/01/2005**

1. [ENHANCEMENT]  
Change the input format of trap destination in eWC->Remote Management->SNMP from text to IP format.
2. [ENHANCEMENT]  
Support small font size on ZyWALL GUI.
3. [ENHANCEMENT]  
Replace the Cerberian logo by Blue Coat in Content Filter blocked page.
4. [ENHANCEMENT]  
Support Turbo Card (external IDP/AV signature search accelerator)
5. [ENHANCEMENT]  
Add ARP probe for DHCP server.
  - (1) Change probe type by CI command "sys probeType [icmp | arp]".
  - (2) Default type is "ICMP".
  - (3) ARP probe only works when you use arp probe type and dhcp mode should be "Server".
  - (4) This value will be saved in ROM.
6. [FEATURE CHANGE]  
Add ALG configuration in navigation panel.
7. [ENHANCEMENT]  
Re-layout ZyWALL navigation panel on GUI.
8. [ENHANCEMENT]  
Add "Service Status" and "Expiration Date" in Content Filter GUI. The modified GUIs are:  
eWC>CONTENT FILTER>Categories
9. [ENHANCEMENT]  
Add a sender email field in "E-mail Log Settings".
10. [ENHANCEMENT]  
When the daylight saving is activated, there should be a "DST" string trailed behind the time in eWC.
11. [ENHANCEMENT]  
WAS: DNS domain name is not case insensitive.  
IS: DNS domain name is case insensitive.
12. [ENHANCEMENT]  
Firewall "Available Services" add some common services which are

- (1) Microsoft RDP (remote desktop protocol) - tcp:3389
- (2) VNC (virtual network computer) - tcp:5900
- (3) NTP - tcp/udp:123
- 13. [ENHANCEMENT]  
Consolidate log "Under SYN flood attack, sent TCP RST"
- 14. [ENHANCEMENT]
  - (1) Users cannot enter characters into eWC>VPN>GATEWAY POLICY >EDIT>SA Life Time (Seconds)
  - (2) User cannot enter characters in eWC>VPN>NETWORK POLICY >EDIT>Protocol
  - (3) Users cannot enter characters into eWC>VPN>NETWORK POLICY >EDIT>SA Life Time (Seconds)
- 15. [ENHANCEMENT]  
Add IDP, Anti-Virus and Anti-Spam features.
- 16. [ENHANCEMENT]  
Add the SMTP server to the log entry.
- 17. [ENHANCEMENT]  
Add sequence number and SPI in log for ESP / AH packets.
- 18. [ENHANCEMENT]  
DHCP log shows the hostname.
- 19. [ENHANCEMENT]  
Add VPN over Bridge feature.
- 20. [ENHANCEMENT]  
Add MyZyxel.Com and Registration features.
- 21. [ENHANCEMENT]  
Add Firewall Custom Service enhancements.  
Modifications are listed below:
  - (1) Allow user to configure ICMP type and code in Firewall ACL.
  - (2) Allow user to configure IP protocol in Firewall ACL.
  - (3) Add "Any IP Protocol" in default service.(GUI only)
  - (4) Replace "PING" with "Any ICMP" in default service. (GUI only)
  - (5) Allow user to configure Firewall rule name.
  - (6) Firewall (default/rule) action supports "permit", "drop" and "reject".
  - (7) Centralized LOGS shows descriptions for matched ICMP packet instead of displaying type/code value only.
- 22. [ENHANCEMENT]  
Enhance Firewall Custom Service
  - (1) In eWC>Firewall>add new page "Service", it displays the summary of custom services and predefined services.
  - (2) In eWC>Firewall>Service>Firewall Service Edit page, add two new options: IP protocol and ICMP.
- 23. [ENHANCEMENT]  
On eWC>FIREWALL>Threshold, add a GUI option to enable/disable DoS Attack protection.
- 24. [ENHANCEMENT]  
Each static route entry should have its own "Modify" and "Delete" icons.
- 25. [ENHANCEMENT]

## **ZyXEL Confidential**

Add dial backup support for CI command.

The following is the original SPR description.

Enhance SMT "sys rn accessblock 0" debug message.

- (1) CI "sys rn load 3"
- (2) CI "sys rn accessblock 0"
- (3) CI "sys rn save"
- (4) And SMT will occur message "[-6103] Bad entry number"

### **26. [ENHANCEMENT]**

Enhance Firewall Edit GUI to make it more user-friendly.

Before: When users click Add/Modify/Delete button to configure an address or select a service from Available Service to Selected Service, the page will be submitted to the ZyWALL immediately to have a rule check and then refresh. It consumed too much time on editing a firewall rule for a user.

Now: When users click Add/Modify/Delete or select a service, the page will not be submitted to the ZyWALL immediately. The page will be submitted to the ZyWALL to have a rule check after users click "Apply" button. It reduces the refresh time and it is more convenient for the users.

### **27. [ENHANCEMENT]**

- (1) Enhance WLAN to be an independent interface so that traffic passes through WLAN can be handled by firewall.
- (2) WLAN can be bound to LAN or DMZ for user's chosen.
- (3) DHCP sever can be applied on LAN, DMZ and WLAN.

### **28. [ENHANCEMENT]**

In order to solve ZW5 available memory is not enough for 4.00, allocate a share memory for signature download and firmware upload.

### **29. [ENHANCEMENT]**

Add DDNS as My Address in VPN IKE rule. (GUI)

### **30. [ENHANCEMENT]**

Add ping check switch for single WAN products.

CI command: sys rn pingcheck [0:disable|1:enable]

Note: This will not be saved in romfile.

## **Modifications in V3.64(XD.3) | 06/21/2005**

Modify for formal release.

## **Modifications in V3.64(XD.3)b1 | 06/16/2005**

### **1. [BUG FIX]**

Symptom: Router crash.

Condition:

- (1) Use router for a long time.
- (2) Sometimes Router will crash and the console shows  
"Common TOS: Free queue session number > max session number..  
\tos.c:960 sysreset()".

### **2. [ENHANCEMENT] 050418857**

DNS domain name should be case insensitive.

### **3. [BUG FIX]**



**ZyXEL Confidential**

Symptom: IPSec check rule conflict on IP 0.0.0.0 is incorrect.

Condition:

1. Restore default romfile.
2. Configure the two IPSec rules shown as follow:  
Rule A: local:0.0.0.0                      remote:192.168.3.33  
Rule B: local:192.168.70.94      remote:192.168.3.33  
these two IPSec rules conflict and we should add check for it.

4. [BUG FIX] 050526694

Symptom: IPSec input idle timer does not work correctly.

Condition:

Topology:

PC1-ZWA--Intranet--ZWB-PC2

Add normal VPN rule in both side.

- (1) In ZWB, set "Input Idle Timeout" as "30" seconds.
- (2) Dial the tunnel up, there is no traffic in the tunnel.
- (3) In ZWB, SMT 24.8, type "ipsec sho sa", the "input idle count" in "INBOUND" will be decreasing, it works correctly.
- (4) Now, In PC1, ping PC2 from PC1 with one packet then stop the traffic in the tunnel.
- (5) In ZWB, SMT 24.8, type "ipsec sho sa", the "input idle count" in "INBOUND" stay unchanged.
- (6) The input idle timeout mechanism will not work anymore.

5. [BUG FIX]

Symptom: Output idle timer doesn't work correctly.

Condition:

PC1--(L)ZW5(W)--Intranet--(W)Router(L)--PC2

- (1) ZW5 and Router had established VPN tunnel.
- (2) Output idle timer=120 secs, input idle timer=30 secs.
- (3) Unplug the WAN link of Router, make a ICMP echo request to PC2 from PC1.
- (4) ZW5 doesn't send out "are u there" packets to peer gateway after 120 seconds.

6. [BUG FIX] 050613568

Symptom: There is no conflict check between VPN dynamic rule and static rule on local ip address.

Condition:

1. Goto CUI VPN page, add one dynmaic IKE rule and static IKE rule.
2. Add one policy with local ip set as 192.168.1.0/24 into dynamic rule.
3. Add one policy with local ip set as 192.168.1.1/32 into static rule.
4. The static rule's policy can be saved without conflict error.

7. [BUG FIX] 050615688

Symptom: The Log Consolidation Period can not configure properly.

Condition:

1. Goto eWC->LOGS->Log Settings page, input the vaule, 300, into "Log Consolidation Period" field, then apply the setting.
2. Refresh the Log Settings page, the value in "Log Consolidation Period" field show as 44.

**Modifications in V3.64(XD.2) | 06/10/2005**

Modify for formal release.

**Modifications in V 3.64(XD.2)b3 | 05/31/2005**

1. [BUG FIX] 050527748

Symptom: DNS of Dial backup had some problem if WAN's Encapsulation = PPTP mode.

Condition:

1. Restore default Rom.
2. WAN is configured as PPTP, and WAN is connected.
3. Configure Dial backup.
4. Unplug the WAN, and WAN is disconnected, and Dial backup is connected.
5. eWC/DNS/System, DNS server keep old DNS IP ( Assigned from PPTP server) .

**Modifications in V 3.64(XD.2)b2 | 05/25/2005**

1. [BUG FIX] 050414592

Symptom: Dynamic rule with more than two initiators has problem.

Condition:

1. ZyWALL 5 as responder has one dynamic rule and use XAUTH.
2. Two initiators (two devices or two vpn clients..).
3. Dial one of them, the packets can be transmitted through the tunnel correctly.
4. Dial the second, only one of them can work correctly.

2. [BUG FIX]

Symptom: Trigger dial fail in dial backup.

Condition:

1. Restore default rom file.
2. Setup dial backup account and phone number, make sure it can work.
3. Put a PC in router's LAN and ping 168.95.1.1 continually.
4. Unplug modem's phone line and wait for 5 mins.
5. Plug it and router will not dial from modem automatically.

3. [BUG FIX]

Symptom: Dial back-up does not support FULL-FEATURE NAT.

Condition:

1. Enter SMT menu 11.3 for "dial backup" remote node
2. Go to "Edit IP" and change NAT selection to FULL Feature. (will see the NAT Lookup Set= 3)
3. Go to SMT menu 15.1 and found there is no NAT\_SET 3.

4. [BUG FIX] 050502014

Symptom: VPN tunnel can't be up with dynamic rule.

Condition:

Initiator: One IKE with one policy. And in policy, local ID type = Subnet. Dest ID type = Subnet.

Responder: One dynamic IKE with two policies:

- (1) Policy 1: Encryption is wrong. Local ID type = Subnet. Local starting IP Address is wrong.

- (2) Policy 2: All settings are correct.
5. [BUG FIX] 050502014  
Symptom: Modification to existing WANtoWAN rule (with IKE and BOOTP) can not work  
Condition:  
In the example, use SSH  
1) Change SSH port to 2222 in Remote MGMT.  
2) Go to WAN to WAN / ZyWALL and create a custom service, TCP/UP 2222.  
3) Add the rule in the default rule that has IKE and Bootp.  
4) Try to connect with Putty or other preferred SSH client. It doesn't work  
5) Now add the standard SSH (or any other predefined TCP rule) service to the same firewall rule. It works.
6. [BUG FIX] 050311653  
Symptom: DNS cannot work after switching WAN and Dial backup.  
Condition:  
1. Restore default romfile.  
2. WAN is configured as PPTP, and nail-up, and WAN is connected.  
3. Configure Dial backup, and is always-on.  
4. Unplug the WAN, and WAN is disconnected, and Dial backup is connected.  
5. Plug in the WAN line again, and PPTP is connected, get an IP.  
6. Go to eWC->DNS->DHCP page, DNS from ISP is none; if PC DNS is ZyWALL, it cannot browse to the internet.
7. [BUG FIX] 050502038  
Symptom: Daylight Saving problem: Current Time is faster 2 hours than Taiwan during daylight saving.  
Condition:  
1. Restore default romfile.  
2. Go to eWC->Maintenance->TimeAndDate.  
and the problem happened only when  
3. Apply the "Time Zone" = "(GMT+08:00)", activate "Enable Daylight Saving" and set the date range include the current time.  
4. Click the "Apply" button and the page will be refreshed.  
5. The current time is faster 2 hours than Taiwan, it should be faster 1 hour only.
8. [BUG FIX]  
Symptom: Router crash.  
Condition:  
(1) Turn on firewall.  
(2) Sometimes router will crash when suffer attack.
9. [BUG FIX]  
Symptom: Dial backup will be triggered abnormally.  
Condition:  
(1) Configure a Dial Backup.  
(2) Close ping check flag by "sys rn pingcheck 0".  
(3) WAN is ethernet, gets an IP, and cannot access Gateway.  
(4) Dial backup will be triggered, it is not right.

**ZyXEL Confidential**

10. [BUG FIX]

Symptom: Dial backup will be triggered abnormally.

Condition:

- (1) Configure a Dial Backup.
- (2) WAN is ethernet.
- (3) Reset the router, Wan gets an IP but dial back-up still will be triggered.

11. [FEATURE CHANGE]

When edit a firewall rule, the source IP and destination IP rule numbers are limited to 20.

12. [FEATURE CHANGE]

At the beginning of router restart, the pingcheck is disabled.

**Modifications in V 3.64(XD.2)b1 | 05/18/2005**

1. [BUG FIX] 050414592

Symptom: Dynamic rule with more than two initiators has problem.

Condition:

1. ZyWALL 5 as responder has one dynamic rule and use XAUTH.
2. Two initiators (two devices or two vpn clients..).
3. Dial one of them, the packets can be transmitted through the tunnel correctly.
4. Dial the second, only one of them can work correctly.

2. [BUG FIX]

Symptom: Trigger dial fail in dial backup.

Condition:

1. Restore default rom file.
2. Setup dial backup account and phone number, make sure it can work.
3. Put a PC in router's LAN and ping 168.95.1.1 continually.
4. Unplug modem's phone line and wait for 5 mins.
5. Plug it and router will not dial from modem automatically.

3. [BUG FIX]

Symptom: Dial back-up does not support FULL-FEATURE NAT.

Condition:

1. Enter SMT menu 11.3 for "dial backup" remote node
2. Go to "Edit IP" and change NAT selection to FULL Feature. (will see the NAT Lookup Set= 3)
3. Go to SMT menu 15.1 and found there is no NAT\_SET 3.

4. [BUG FIX] 050502014

Symptom: VPN tunnel can't be up with dynamic rule.

Condition:

Initiator: One IKE with one policy. And in policy, local ID type = Subnet. Dest ID type = Subnet.

Responder: One dynamic IKE with two policies:

- (1) Policy 1: Encryption is wrong. Local ID type = Subnet. Local starting IP Address is wrong.
- (2) Policy 2: All settings are correct.

5. [BUG FIX] 050502014

Symptom: Modification to existing WANtoWAN rule (with IKE and BOOTP) can not

work

Condition:

In the example, use SSH

- 1) Change SSH port to 2222 in Remote MGMT.
- 2) Go to WAN to WAN / ZyWALL and create a custom service, TCP/UP 2222.
- 3) Add the rule in the default rule that has IKE and Bootp.
- 4) Try to connect with Putty or other preferred SSH client. It doesn't work
- 5) Now add the standard SSH (or any other predefined TCP rule) service to the same firewall rule. It works.

6. [BUG FIX] 050311653

Symptom: DNS cannot work after switching WAN and Dial backup.

Condition:

1. Restore default romfile.
2. WAN is configured as PPTP, and nail-up, and WAN is connected.
3. Configure Dial backup, and is always-on.
4. Unplug the WAN, and WAN is disconnected, and Dial backup is connected.
5. Plug in the WAN line again, and PPTP is connected, get an IP.
6. Go to eWC->DNS->DHCP page, DNS from ISP is none; if PC DNS is ZyWALL, it cannot browse to the internet.

7. [BUG FIX] 050502038

Symptom: Daylight Saving problem: Current Time is faster 2 hours than Taiwan during daylight saving.

Condition:

1. Restore default romfile.
2. Go to eWC->Maintenance->TimeAndDate.  
and the problem happened only when
3. Apply the "Time Zone" = "(GMT+08:00)", activate "Enable Daylight Saving" and set the date range include the current time.
4. Click the "Apply" button and the page will be refreshed.
5. The current time is faster 2 hours than Taiwan, it should be faster 1 hour only.

8. [BUG FIX]

Symptom: Router crash.

Condition:

- (1) Turn on firewall.
- (2) Sometimes router will crash when suffer attack.

9. [FEATURE CHANGE]

When edit a firewall rule, the source IP and destination IP rule numbers are limited to 20.

10. [FEATURE CHANGE]

At the beginning of router restart, the pingcheck is disabled.

**Modifications in V3.64(XD.1) | 05/03/2005**

Modify for formal release.

**Modifications in V 3.64(XD.1)b2 | 04/27/2005**

**ZyXEL Confidential**

1. [BUG FIX] 050201039  
Symptom: "Gateway Domain Name Update Timer" in eWC --> VPN --> Global Setting didn't work.  
Condition:
  - (1) Set one IKE rule which secured gateway address is domain name.
  - (2) Set "Gateway Domain Name Update Timer" to 15 minutes and apply.
  - (3) System will not update secured gateway domain name according to the setting unless system reboot.
2. [BUG FIX]  
Symptom: LAN & WAN deathed when receive UDP packets which comes from TfGen.  
Condition:
  - (1) Restore default rom file.
  - (2) In WAN side, place a PC and open TfGen tool to send packets to router's WAN.
  - (3) The TfGen's setting in my PC is: Utilization: 4kbps, Destination: "DUT's WAN IP", Port: 500.
  - (4) After a period time, DUT's LAN & WAN both deathed that all traffic can't go out.
3. [BUG FIX] 050203206  
Symptom: In bridge mode, after device synchronized the defined NTP server, the result displayed failed.  
Condition:
  - (1) PC(192.168.1.33) --- DUT(192.168.1.254) --- NAT(192.168.12.106) --- Internet.
  - (2) In eWC/Maintenance/Time and Date, get from Time Server: Time Protocol=NTP (RFC 1305), Time Server Address= a.ntp.alphazet.net, then clicked "Synchronize Now" button.
  - (3) The result displayed failed. ("System Time and Date Synchronization Fail")
  - (4) However, a successful log showed in eWC/LOGS.
  - (5) Actually, the device was successful to synchronize the defined NTP server.

**Modifications in V 3.64(XD.1)b1 | 04/22/2005**

1. [ENHANCEMENT]  
Enlarge content filter web site, forbidden key word and trusted website size to 100.
2. [ENHANCEMENT]  
Add sequence number and SPI in log for ESP / AH packets
3. [ENHANCEMENT]  
Change DNS Address Record size from 8 to 30
4. [ENHANCEMENT] 050419889  
Add IP information for my IP address and Secure Gateway address. In CI command, "ipsec ikeDisp #" will show IKE rule configuration. When my IP address or secure gateway address is domain name, the resolved IP will show after domain name.
5. [BUG FIX] 050128770  
Symptom: When users remotely manage the ZyWALL via a PPTP connection, a strange firewall session (between PPTP server and PPTP client) timeout log may be observed.

Condition:

- (1) Configure the ZyWALL's WAN port to use PPTP encapsulation.
- (2) Remotely login eWC (http/https) via the PPTP connection.
- (3) After a few minutes, check the centralized logs or syslogs, you will observe a sequence of firewall logs of http/https session timeout.

6. [BUG FIX] 040507153

Symptom: Telnet function takes too much time.

Condition:

- (1) Type the CI command "ip telnet host\_A".
- (2) When telnet from router to non-exist server host\_A, it always takes about 40 seconds or more to connect. And users cannot interrupt the router and can do nothing.

7. [BUG FIX] 050420986

Symptom: P2000W and P2000W can not talk to each other in P2P mode.

Condition:

(1) Topology:

P2000W----DUT---Internat---DUT---P2000W

(2) P2000W and P2000W can not talk to each other in P2P mode.

8. [BUG FIX] 050217478

Symptom: Netbios packet cannot pass through VPN tunnel .

Condition:

(1) Configure a VPN tunnel as follows:

1.1 local subnet mask is 192.168.1.1/255.255.0.0.

1.2 remote subnet mask is 192.169.1.1/255.255.0.0.

1.3 Enable "Netbois pass through" in local and remote gateway.

1.4 PC A(Local)-----ZyWALLA-----ZyWALLB---PC B(Remote)192.168.1.1/24  
192.169.1.1/24

(2) Establish the VPN tunnel.

(3) In PC A, Search PC B's computer name.

(4) PC A will send a broadcast packet to search PC B.

(5) ZyWALL A will change destination IP address from 192.168.255.255 to 192.169.255.255 and send to ZyWALL B after encryption. However, ZyWALL A should adjust the UDP checksum but it didn't.

(6) PCB will drop the received broadcast UDP pcket from PC A due to error UDP checksum.

9. [BUG FIX] 050214274

Symptom: VPN My IP Addr will resolving fail

Condition:

(1) Add a VPN rule and My IP Address and Remote Gateway Address are domain type.

(2) Click Dial button, it will fail to build tunnel first time (second time is ok)

(3) Check log will display "Cannot resolve My IP Addr for rule xxx"

10. [BUG FIX] 050304284

Symptom: There is no log for replay packets

Condition:

(1) Enable "Anti-Replay" function.

(2) Sniffer an ESP packet and replay it.

- (3) This ESP packet will be dropped by there is no log.  
(4) There should be log to show this action.
11. [BUG FIX] 050316859  
Symptom: ZyWALL (3.64) crashes while remote VPN software (ZyWALL VPN Client) make a VPN connection  
Condition:  
(1) ZyWALL start negotiating with remote VPN software.  
(2) The remote VPN software sends too long VID size.  
(3) device will crash.
12. [BUG FIX] 050221575  
Symptom: Max. Concurrent Sessions Per Host problem.  
Condition:  
(1) In eWC->NAT , change Max. Concurrent Sessions Per Host to 300  
(2) Use ipscan tool to make session  
(3) Log show "192.168.1.33 exceeds the max. number of session per host! " when exceeds the max. number of session per host, but Max. Concurrent Sessions Per Host (Historical high since last startup: 286), it's not reach 300.
13. [BUG FIX] 050407161  
Symptom: PC cannot ping remote secure gateway's LAN IP via VPN tunnel  
Condition:  
PC A (1.33) – (1.1)ZW5 --- LAB ---- ZW70 (2.1) ----(2.33) PC B  
(1) Add a VPN rule(ZW5), and in IPsec rule Local Network select Subnet Address, Starting IP is 192.168.1.0 / 255.255.255.0. Remote Network select Subnet Address Starting IP is 192.168.2.0 / 255.255.255.0.  
(2) ZW70 had opposite setting.  
(3) Build up this tunnel, PC A can ping PC B, but PC A can't ping 192.168.2.1(ZW70 gateway LAN IP)
14. [BUG FIX] 050302166  
Symptom: Remote gateway Address can't configure as domain type when ipsec Nail-Up option is on.  
Condition:  
(1) Add a VPN rule(Static rule) with Remote gateway Address set as domain type.  
(2) In IPsec rule, enable Nail-Up option.  
(3) Return to IKE rule page, change some fields and click Apply. The Status will show "This ipsec rule bounds to dynamic IKE rule. Please inactive nail up." and it can't be saved.
15. [BUG FIX] 050309435  
Symptom: Router crash when recieve UDP packets which comes from TfGen.  
Condition:  
(1) Restore default rom file.  
(2) In WAN side, place a PC and open TfGen tool to send packets to router's WAN.  
(3) The TfGen's setting in my PC is: Utilization: 4kbps, Destion: 192.168.70.34, Port: 500.
16. [BUG FIX] 050214258  
Symptom: DNS inverse query causes system crash.  
Condition:



- (1) Set A PC on the device LAN site.
  - (2) The DNS server of the PC sets to the device.
  - (3) The PC sends DNS inverse query continually, the device will crash sometimes.
17. [BUG FIX] 050204235  
Symptom: Responder receive duplicate package when VPN tunnel established  
Condition:  
(1) At Initiator edit one VPN rule and Extended Authentication=enable=client mode  
(2) At responder edit one VPN rule and Extended Authentication=enable=server mode  
(3) when VPN tunnel established ,Responder log show "Rule[IKE1] receives duplicate packet"
18. [BUG FIX] 050412413  
Symptom: There is no "Ping of Dead" log message when performing "Consolidate every 10 seconds ( Attack: ping of death ) "  
Condition:  
(1) Dos command "ping 192.168.1.1 -l 2000"  
(2) User can not see "ping of death" consolidation log on eWC/LOGS page  
(3) Bridge mode only.
19. [BUG FIX] 050303203  
Symptom: DNS inverse query causes memory leak.  
Condition:  
(1) Set A PC on the ZyWALL LAN site.  
(2) The DNS server of the PC sets to the ZyWALL.  
(3) The PC sends DNS inverse query continually (ex: 140.113.23.1), the system will generate memory leak.
20. [BUG FIX] 050201041  
Symptom: "Gateway Domain Name Update Timer" in eWC --> VPN --> Global Setting didn't work.  
Condition:  
(1) Set one IKE rule which secured gateway address is domain name.  
(2) Set "Gateway Domain Name Update Timer" to 15 minutes and apply.  
(3) System will not update secured gateway domain name according to the setting unless system reboot.
21. [BUG FIX] 050415693  
Symptom: Resolving a domain name which start with number (for example 4youcard.com) will fail.  
Condition: CI command "ip ping 4youcard.com" and it will fail.
22. [BUG FIX] 050406055  
Symptom: ZyWALL VPN traffic will lose from time to time  
Condition:  
(1) To create tunnel from zw5 to peer.  
(2) To ping the LAN PC of peer VPN gateway fom the LAN PC of zw5 via the tunnel.  
(3) About 1 min, it will re-key again.  
(4) The tunnel loses packet.
23. [BUG FIX] 041201001  
Symptom: Router will crash when receive an unrecognizable DNS response

Condition:

Environment:

PC(192.168.1.33)----(192.168.1.1)ZW5---Internet

(1) Set ZW5's system DNS server as "164.67.128.1"

(2) From PC, send a DNS query to ZW5. The DNS format is as following:

cf 07 01 00 00 01 00 00 00 00 00 04 75 63 6c

61 03 65 64 75 00 00 ff 00 01

(3) ZW5 will relay the DNS query to "164.67.128.1".

(4) ZW5 will crash after receive DNS response from "164.67.128.1"

24. [BUG FIX] 050311685

Symptom: Firewall WAN to DMZ Reject can't work.

Condition: PC A ---- (W)ZW5 (DMZ) 10.1.1.1 --- 10.1.1.100 ZW10W

(1) In eWC Firewall Default Action WAN to DMZ select Reject. And enable Log

(2) One ZW10W connect to ZW5 DMZ port and IP is 10.1.1.100

(3) Add default server 10.1.1.100.

(4) PC A also can ftp to DMZ ZW10W.

(5) Check Picture [ZW5]Firewall W2D item 3->1

25. [BUG FIX] 050420986

Symptom: External content filter cannot work.

Condition

(1) Enable external content filter.

(2) Use external content filter for a long time.

(3) System cannot create socket anymore and external content filter cannot work.

(4) Use CI command "ip ping 168.95.1.1", there will be a message "Can't create socket" in console.

(5) You can see there are many used sockets via CI command "sys socket".

26. [BUG FIX] 050201045

Symptom: For firewall ACL schedule, if two rules have the same policies except "schedule", only the first rule will work.

Condition:

1. Set two firewall rules have same policies except schedule.

2. Only the first rule will work.

27. [BUG FIX] 050301081

Symptom: Subclass(FTP service) can not borrow all rest of parent bandwidth in priority-base.

Condition:

1.Root bandwidth is 1000kbps

2.Add a FTP service subclass which bandwidth is 100kbps and can borrow from parent.

3.Add a Custom service subclass which bandwidth is 100kbps and can borrow from parent

4.Execute FTP , but FTP service bandwidth can not borrow all rest of parent bandwidth

5.Send lots of UDP packet , but Custom service bandwidth can not borrow all rest of parent bandwidth. Sometimes all traffic can not pass through DUT.

28. [BUG FIX] 050128718

Symptom: The VT6105 Ethernet port may fail to receive any packet.

Condition:

1. Connect ZyWALL5's LAN port (using VT6105 Ethernet chip) to an SMC hub and operate it in 100M/HALF mode.
2. Generate heavy traffic to go through the ZyWALL 5's LAN port.
3. After an indefinite period of time, the ZyWALL 5's LAN port may fail to receive any packet. When this hang condition happens, the console will show "enet0 stop NIC Rx never completed!"

29. [BUG FIX]

Symptom: DDNS failed to update when PPPoE redial.

Condition:

1. Configure the DDNS host and enable it.
2. Configure WAN as PPPoE mode and idle timeout, and connected OK.
3. When the connection is do down, and connected again, IP is change, it failed to update DDNS server.

**Modifications in V3.64(XD.0) | 03/04/2005**

Modify for formal release.

**Modifications in V3.64(XD.0)b4 | 02/23/2005**

1. [BUG FIX]

Symptom: In PPPoE/PPTP mode, BWM can not classify the traffic of FTP, H323, SIP.

2. [BUG FIX]

Symptom: Bandwidth Management, Priority based, FTP transfer speed slow down until to disconnect .

Condition:

- (1) Edit web eWC/BW MGMT , WAN/Active=enable, WAN1/Speed (kbps)=1000, Scheduler=Priority-Based
- (2) Edit web eWC/BW MGMT/Class Setup, Interface=WAN1, Add Sub-Class, Class Name=FTP, Bandwidth Budget=200, Priority=3, Borrow bandwidth from parent class=enable , Enable Bandwidth Filter=enable, Service=FTP, Destination IP Address =192.168.10.0, Destination Subnet Mask=255.255.255.0

(3) FTP upload file from LAN to WAN

3. [BUG FIX]

Symptom: Custom traffic will send over 100 kbps in bridge mode.

Condition:

- (1) In bridge mode, set WAN as 1000 kbps with fairness mode.
- (2) Create a custom class, budget=50, priority=2, no borrow.
- (3) Create a ftp class, budget=200, priority=3, no borrow.
- (4) Use tfggen to generate UDP traffic to match custom class.
- (5) Use ftp to generate TCP traffic to match ftp class.
- (6) In GUI statistics page, custom class will be over 100 kbps.

4. [BUG FIX]

Symptom: VPN XAuth rule swap fail

Condition:

DUT1:

- (1) Edit web eWC/VPN, add gateway policy, Name=IKE1, Remote Gateway Address=192.168.11.101, Pre-Shared Key=12345678, Enable Extended Authentication=enable, Client Mode/User Name=dut1, Client Mode/Password=dut1
- (2) Edit web eWC/VPN, add network policy for IKE1, Active=enable, Name=IPSec1, Local Network/Starting IP Address=192.168.1.33, Remote Network/Starting IP Address=192.168.2.33

DUT2:

- (1) Edit web eWC/AUTH SERVER/Local User Database, index1/Active=enable
- (2) Edit web eWC/VPN, add gateway policy, Name=IKE1, Remote Gateway Address=192.168.12.100, Pre-Shared Key=12345678
- (3) Edit web eWC/VPN, add gateway policy, Name=IKE2, Remote Gateway Address=0.0.0.0, Pre-Shared Key=12345678, Enable Extended Authentication=enable, Client Mode/User Name=dut1, Client Mode/Password=dut1
- (4) Edit web eWC/VPN , add gateway policy, Name=IKE3, Remote Gateway Address=0.0.0.0, Pre-Shared Key=12345678, Enable Extended Authentication=enable, Server Mode=enable
- (5) Edit web eWC/VPN, add network policy for IKE1, Active=enable, Name=IPSec1, Local Network/Starting IP Address=192.168.2.43, Remote Network/Starting IP Address=192.168.1.33
- (6) Edit web eWC/VPN , add network policy for IKE2, Active=enable, Name=IPSec2, Local Network/Starting IP Address=192.168.2.53
- (7) Edit web eWC/VPN , add network policy for IKE3, Active=enable, Name=IPSec3, Local Network/Starting IP Address=192.168.2.33

5. [BUG FIX]

Symptom: In eWC->Wireless, When select WPA or WPA PSK, the Authentication Databases field always says: Local User first then RADIUS.

Condition: Go to eWC>WLAN>Wireless, when select WPA or WPA PSK, the Authentication Databases field always says: "Local User first then RADIUS". But it shouldn't.

- (1) When selecting "WPA", we should show "Authentication Database = RADIUS" instead of "Authentication Databases Local User first then RADIUS"
- (2) When selecting "WPA+PSK", "Authentication Databases" should be hidden.

**Modifications in V3.64(XD.0)b3 | 02/03/2005**

1. [BUG FIX]

Symptom: OpenPhone H.323 traffic will be blocked by Firewall if connection is initiated from WAN side to LAN side.

Condition:

PC1(OpenPhone)------(LAN) ZyWALL (WAN) ----- PC2(OpenPhone)  
192.168.1.33

- (1) Enable Firewall, setup a WAN2LAN firewall rule for H.323 service
- (2) Enable NAT port forwarding for port 1720(H.323) to PC 192.168.1.33
- (3) Enable H.323 ALG by "ip alg enable ALG\_H323"
- (4) PC1 and PC2 use OpenPhone, PC2 call PC1.
- (5) OpenPhone application traffic will be blocked by Firewall, you will see a lot of Firewall blocked log in Centralized LOG.

2. [BUG FIX]

Symptom: DPD vendor ID is not correct.

Condition: VID value of DPD is not compatible with RFC3706.

3. [FEATURE CHANGE]

WAS: The second datagram will use the last 8 octets of the first datagram as IV. This may cause IV "predictable".

IS: All datagrams will use random IV to make IV unpredictable.

**Modifications in V3.64(XD.0)b2 | 01/31/2005**

1. [BUG FIX]

Symptom: The name of Domain name does not check properly in SMT 1.

Condition:

- (1) In SMT 1->Edit Dynamic DNS->Edit Host, fill the record 1's "domain name" with "xxx.dyndns.org". and record 2's "domain name" with "xxx.dyndns.org ". (the domain name of record 2 contains a space at the end)
- (2) The domain should not contain space, we should have a filter to check this.
- (3) Set record 1's "Update policy" with "Use WAN IP Addrsss" and record 2's "Update policy" with "Let DDNS Server Auto Detect".
- (4) After the DDNS process updating, the domain name "xxx.dyndns.org" will be resolved by the policy "Let DDNS Server Auto Detect" not "Use WAN IP Addrsss". (the first DDNS query result was overwritten by the second executed, "xxx.dyndns.org" is the first, "xxx.dyndns.org " is the second)

2. [ENHANCEMENT] On eWC>BW MGMT>Class Setup, add a popup warning message "Delete Class : class name ?" before user delete a Class.

3. [ENHANCEMENT] Add a active checkbox for ipsec rule on VPN wizard.

4. [BUG FIX]

Symptom: The wording of Dial Backup in SMT is not consistent with GUI.

Condition:

- (1) In "eWC->WAN->Dial Backup", one of the wordings in "Budget" is "Always On".
- (2) In SMT, the wording is "Nailed-Up Connection".

5. [BUG FIX]

Symptom: While performing "Chariot 128 application 48 hours stress testing", ZyWALL crashed several .

Condition: Chariot Server<-----DUT----->Chariot end point

- (1) DUT reset default romfile, and only configured WAN and LAN IP address.
- (2) Traffic direction: Server to end point.

- (3) Execute Chariot (automation.exe) after load stress file (stress-all.txt)
- (4) After a while, DUT crashed
- 6. [BUG FIX]  
Symptom: The traffic redirect should have higher priority than dial backup.  
Condition:
  - (1) In eWC>WAN>Route, set Traffic Redirect priority smaller than Dial Backup, then click Apply.
  - (2) It can be saved.
- 7. [BUG FIX]  
Symptom: Enter special url will cause device crash.  
Condition: Form LAN site, enter  
`http://192.168.1.1/Forms/rpAuth_1?ZyXEL%20ZyWALL%20Series<script>top.location.pathname=%20""</script>` on browser, the device will crash.
- 8. [BUG FIX]  
Symptom: The CI command "ip nat service irc" may display strange Enable state.  
Condition:
  - (1) Execute "ip nat service irc he\_is\_good".
  - (2) Execute "ip nat service irc 0".
  - (3) Execute "ip nat service irc he\_is\_bad".After Step 3, you will see that a strange Enable state, e.g., "IRC enable = 12".
- 9. [BUG FIX]  
Symptom: The eWC>Firewall>Rule Summary>EDIT RULE page might be corrupted.  
Condition:
  - (1) Go to eWC>Firewall>Rule Summary.
  - (2) Add or Edit a firewall rule.
  - (3) Try to delete a Source Address (or Destination Address) without first selecting an address.
  - (4) Or try to delete a Service without first selecting a service.
  - (5) With 3 or 4, you will see an error message on the status bar.
  - (6) Click on any button of this page, and then you will see that the values of some fields on this page are lost. Also you won't be able to escape this page by clicking on the Cancel button.
- 10. [ENHANCEMENT] Add SIP protocol in service list in firewall rule edit page.
- 11. [BUG FIX]  
Symptom: In SMT 15.1 address mapping rule error message not correct.  
Condition:
  - (1) In SMT 15.1, configure NAT address mapping many to many overloads(or many one to one).
  - (2) Configure local address from 0.0.0.0 to 255.255.255.255.
  - (3) Configure global address from 0.0.0.0 to 255.255.255.255.
  - (4) Save the configuration =>error message show "The end IP address must be great than the start IP address " not correct.
- 12. [BUG FIX]  
Symptom: Configure WAN page, and WAN priority will become 1.

Condition:

- (1) In "eWC->WAN->General", set WAN1 priority to 5.
  - (2) In "eWC->WAN->WAN", set encapsulation type to PPTP or PPPoE.
  - (3) Go to "eWC->WAN->General", WAN's priority will become 1.
- 13 [ENHANCEMENT] Give a warning message when user configure FTP/SIP/H.323 filter on BWM but FTP/SIP/H.323 alg is not enabled.  
GUI : Save the filter and show the warning message. Warning: This is a SIP(FTP, H.323) filter, you have to enable SIP(FTP, H.323) ALG by CI command "ip alg enable".  
CI command : After running "bm config save", the router will save the configuration and check all filters in all interface. Then show a list of filters which are conflicted.
- 14 [ENHANCEMENT] NAT address mapping need prevent user configure local IP range and global IP range overlap.
- 15 [BUG FIX]  
Symptom: SIP WiFi-Phone's voice communication failed.  
Condition:  
(1) Use following topology to test.  
WiFi A--(L)ZW35(W)----Internet(SIP server)---(W)ZW5(L)----WiFi B  
(2) Both zywall reset to default romfile.  
(3) In SMT 24.8 CI command, both type "ip alg enable ALG\_SIP" to enable SIP ALG.  
(4) WiFi A make a phone call to WiFi B, voice communication works fine.  
(5) Terminate the phone call, then WiFi B make a phone call to WiFi A, voice communication fail.  
(6) Fail status: WiFi A can hear voice, but WiFi B can't.
- 16 [BUG FIX]  
Symptom: The device crashes while the user is changing the SNMP access right configuration.  
Condition:  
(1) Restore default romfile.  
(2) Set the SNMP Access = Disable.  
(3) Use MS-SOFT to query the device.  
(4) Before the query timeout, change Access = ALL, the device will crash.
- 17 [BUG FIX]  
Symptom: In authentication server, the local user database should check if the input user name is duplicate.  
Condition:  
(1) Restore to default romfile.  
(2) In record 1, active = yes, name = test, password = 1234 In record 2, active = yes, name = test, password = 5678  
(3) Press Save and this configuration will be accept by router.
- 18 [BUG FIX]  
Symptom: BWM linear search can not find first match filter.  
Condition:  
PC1 ----- (LAN) Router (WAN) ----- PC2  
(1) In router, enable BWM on WAN, setup two classes for WAN Root class:

1000kbps

|-----Class 1: 200kbps

|-----Class 2: 200kbps

Filters table:

Class 1: FTP SrcIP = 192.168.1.0/24

Class 2: FTP DstIP = 192.168.70.0/24

(2) FTP upload file from PC1 to PC2.

(3) In this case, BWM will match Class 2's filter. But it's wrong, in linear search algorithm, we should return the first match filter for traffic.

19. [BUG FIX]

Symptom: When manual mode encapsulation is Tunnel, responder can't build up tunnel.

Condition:

(1) PC A – ZW70 ---- ZW5 – PC B

(2) On eWC/VPN/Manual add two manual rules in ZW70 and ZW5. Rule 1 is inactive. Rule 2 is active and encapsulation is Tunnel.

(3) PC A ping PC B, check SA Monitor, ZW70 tunnel had been built up but no tunnel is up in ZW5, vice versa.

(4) If PC B ping PC A this time, tunnel can be built up in both sides and traffic can be transferred.

20. [BUG FIX]

Symptom: LAN static DHCP can save the same data.

Condition:

(1) Restore default rom file.

(2) In GUI>LAN>Static DHCP, add two record as MAC: 01:01:01:01:01:01, IP: 192.168.1.33 MAC: 02:02:02:02:02:02, IP: 192.168.1.66 and apply it.

(3) Change these two record as MAC: 03:03:03:03:03:03, IP: 192.168.1.99 and apply it.

(4) It can be saved and it is wrong.

21. [BUG FIX]

Symptom: Nail up warning message does not show correctly in eWC->WAN->WAN.

Condition:

(1) Edit a VPN rule and enable nail up

(2) In eWC->WAN->WAN, set encapsulation with PPPoE and no nailed-up enabled, click "apply" to save, the status will show "Warning: VPN Nailed-Up may trigger dial WAN links."

(3) Click "apply" again, the status will show "Nothing changed; no need to perform save"

22. [BUG FIX]

Symptom: VPN tunnel cannot be disconnected.

Condition:

(1) PC1—ZW5-----HUB-----ZW10W(V362WH7)--PC2

(2) ZW5 has one IKE and two IPSec rules

(3) ZW10W has two VPN rules

(4) ZW10W initiates these two VPN rules

(5) ZW10W delete these two VPN tunnels but one of ZW5 VPN tunnels can not be



disconnected

23. [BUG FIX]  
Symptom: When out of call schedule, the device still cannot send traffic out.  
Condition:  
(1) Set WAN 1 encapsulation is Ethernet.  
(2) Edit SMT menu 24.10, Time Protocol = Manual, New Time (hh:mm:ss) = 10:00:00, New Date (yyyy-mm-dd) = 2004-06-01.  
(3) Edit SMT menu 26, enter Schedule Set Number to Configure = 1, Edit Name = FD-Once.  
    - How often = Once  
    - Once Date = 2004-06-01  
    - Start Time = 10:05  
    - Duration = 00:02  
    - Action = Force Down  
(4) Edit SMT menu 11.1, schedule = 1.  
(5) However, when out of schedule about 5 minutes, device still cannot send traffic out.
24. [ENHANCEMENT] Add "Session Table is Full!" log message, when tos session is full.
25. [BUG FIX]  
Symptom: Wireless CI command "wlan active 100" can be save.(The value should be 1 or 0)  
Condition:  
(1) Plug in B120 and reboot router.  
(2) Use "wlan active 100" and it can be save.  
(3) Go to smt3-5, router will crash.
26. [BUG FIX]  
Symptom: The centralized log shows the strange DHCP entry with hex IP address.  
Condition:  
(1) The device enables LAN DHCP server.  
(2) A PC is set on device LAN site with dynamic IP and no system hostname.  
(3) The PC sends DHCP request to device.  
(4) The device will show the strange log message have the hex IP address. (ex: 101 01/15/ 2005 10:15:50 DHCP server assigns 0xa0a01e6 to 00:0E:08:AA:B6:B3)
27. [ENHANCEMENT] When router reset, console will display the reset date and time. For example, \sys\_cmd.c:869 sysreset() ZyWALL 5 system reset at 01/18/2005 15:07:48
28. [BUG FIX]  
Symptom: VPN page cannot be configured.  
Condition:  
(1) Go to eWC>VPN>GATEWAY POLICY>EDIT to add a GATEWAY POLICY rule.  
(2) Go to eWC>VPN>NETWORK POLICY>EDIT to add 10 NETWORK POLICY rules and bind them with the GATEWAY POLICY rule which was added in Step1.  
(3) Delete the GATEWAY POLICY rule which was added in Step1 and 10

- NETWORK POLICY rules will be put into the Recycle Bin
- (4) VPN page can't be configured anymore.
29. [BUG FIX]  
Symptom: Enhance the VPN error description  
Condition:  
(1) On eWC VPN, add a IKE rule Dynamic rule (Remote Gateway Address is 0.0.0.0)  
(2) Add an Ipsec rule, and fill some value instead of 0.0.0.0 in "Remote Network" fields.  
(3) Status will show "This policy cannot bound to the dynamic rule"  
(4) User may not know where is wrong.
30. [FEATURE CHANGE] Enhance Gateway Domain Name Update Timer. If Gateway Domain Name Update Timer is enabled. The ZyWALL will resolve the IP from a VPN gateway policy whose IKE remote gateway is domain name type in every cycle. If the ZyWALL finds that the new remote gateway IP is different from the old one( which is used by tunnel now), the ZyWALL will delete this tunnel.
31. [BUG FIX]  
Symptom: Save a legal VPN gateway policy but the ZyWALL shows an error message.  
Condition:  
(1) GO to eWC>VPN>GATEWAY POLICY – EDIT  
(2) Save a GATEWAY POLICY whose name = GW, My Address = www.abc.com.tw, Remote Gateway Address = www.cde.com.tw and Pre-Shared Key = 12345678  
(3) GO to eWC>VPN>NETWORK POLICY - EDIT  
(4) Save a NETWORK POLICY whose name = NW, Active = Yes, Starting IP Address = 192.168.1.33, Starting IP Address = 192.168.2.33 and Pre-Shared Key = 12345678  
(5) Go back to eWC>VPN>Rules and edit rule "GW" and set its My Address as 0.0.0.0, then save  
(6) The ZyWALL shows an error message "This IKE rule has static policy rules.", but it should not.
32. [BUG FIX]  
Symptom: There are no logs in eWC>Logs>Log Settings when SMTP authentication fail .  
Condition:  
(1) Go to eWC>Logs>Log Settings. Configure a wrong Mail Server/Send Log to/Send Alerts to/ User Name of SMTP Authentication/Password of SMTP Authentication and save.  
(2) Go to eWC>Logs>View Log. There are no logs about SMTP Auth failures/SMTP failures.  
(3) If the configuration is correct. There is also no log to tell users that the result is successful.
33. [ENHANCEMENT] Add port information in centralized log message when a netbios packet was blocked.
34. [ENHANCEMENT] After the device rebooting, the system will synchronize Time server until any WAN is up or all WAN links are failed exceed 5 minutes. If NTP

- server is on LAN/DMZ subnet, DUT still won't sync when WAN interface is down.
35. [BUG FIX]  
Symptom: VPN tunnel can be established but traffic cannot go through tunnel.  
Condition: PC1 -- ZyWALL -- Any Router/Internet -- ZyWALL -- PC2  
(1) Configure corresponding VPN setting in both ZyWALLs.  
(2) Dial VPN tunnel  
(3) After tunnel established, PC1 cannot ping PC2 vice versa.
36. [BUG FIX]  
Symptom: The router cannot flush correctly in eWC->LOGS->Reports.  
Condition:  
(1) In Bridge Mode.  
(2) In eWC->LOGS->Reports, enable "Collect Statistics", interface = LAN, Report type= "Host IP Address".  
(3) When pressing "Flush" button, there is still one record existing "192.168.70.123 Outgoing 3913 bytes". "192.168.70.123" is router's IP address.  
(4) It has the same problem when changing interface from "LAN" to "DMZ" if we do the same action.
37. [BUG FIX]  
Symptom: In bridge mode, SIP traffic cannot be managed by BWM.  
Condition: SIP Phone1 ----- (LAN)ZyWALL(WAN) ----- SIP Phone2  
(1) Change router to Bridge Mode.  
(2) Enable BWM, and add a SIP filter at WAN interface.  
(3) SIP Phone1 call SIP Phone2.  
(4) After connection is established, go to eWC->BW MGMT->Monitor, you will see SIP traffic falls into Default class, it's wrong.
38. [BUG FIX]  
Symptom: Packet still can send out through NAT router when there is no unused port for it.  
Condition:  
(1) Configure an active port forwarding rule with incoming port range 10000 to 29999.  
(2) Send a packet out of NAT router.  
(3) The packet can still send out.
39. [BUG FIX]  
Symptom: BWM highest priority class cannot borrow residual bandwidth from parent class (using tfgen tool)  
Condition:  
(1) In WAN interface. Enable Priority-based Scheduler.  
(2) Class Setup on WAN.  
    Root 100000 Kbps  
    |----WAN 2000 Kbps (No Borrow, No Filter, Priority = 3)  
    |----WAN1-1 500 Kbps (Borrow; Filter: SrcIP:0, DestIP:0, SrcPort:0, DestPort:90; Protocol: 17; Priority = 3 )  
    |----WAN1-2 300 Kbps (Borrow, Filter: SrcIP:0, DestIP: 192.168.70.0/24, SrcPort:0, DestPort:0, Protocol: 17; Priority= 6)  
(3) From LAN host, use tfgen (UDP packet generator) to generate two session to

match class WAN1-1 and WAN1-2.

session 1: Utilization = 2000Kbps, Destination = WAN host (192.168.70.57), port=90. This will match WAN1-1 class.

session 2: Utilization = 2000Kbps, Destination = WAN host(192.168.70.57), port = default. This will match WAN1-2 class

- (4) From Monitor, WAN1-1 should be protected at 500Kbps, and WAN1-2 should borrow remaining bandwidth from parent class.

But you will see WAN1-1 still borrow remaining bandwidth and WAN1-2 almost borrows nothing from parent class.

40. [BUG FIX]

Symptom: There is no response from DMZ after set system name by SNMP.

Condition:

- (1) Reset to factory default setting.
- (2) Disable firewall.
- (3) Ping router's DMZ IP address continuity.
- (4) Set DUT's system name by SNMP tool "MG-SOFT MIB browser".
- (5) There is no response from DMZ anymore.

41. [BUG FIX]

Symptom: BM filter cannot be deleted via CI command.

Condition:

- (1) On eWC->BW MGMT->Class Setup, create 3 classes on LAN interface. all classes have filter enabled.
- (2) Go to SMT 24.8, delete the third filter by "bm filter lan del 3" and then save data by "bm config save"
- (3) By typing, "bm show filter", you will see the third filter still exists.

42. [BUG FIX]

Symptom: Device will crash.

Condition: Use IXIA to simulate 1012 ip address to access web site ( every ip has 10 sessions ), device will crash.

43. [BUG FIX]

Symptom: Memory leak in DNS query.

Condition:

- (1) Set the device as the network gateway.
- (2) Some PCs assign the DNS server to the device.
- (3) After some days, the DNS query will cause memory leak.

44. [BUG FIX]

Symptom: Executing CI command "ip nat service irc" will make the router crash.

Condition:

- (1) In SMT 24.8, type "ip nat service irc" then press enter.
- (2) The router crash.

45. [BUG FIX]

Symptom: NAT address mapping functionality fail.

Condition:

- (1) Restore to factory default.
- (2) In SMT4, set "Network Address Translation" as "Full Feature".
- (3) In SMT 15.1.1, insert a rule in rule 1. Take an example with my setting: Type: One

**ZyXEL Confidential**

- to One. Local IP: 192.168.1.33 Global IP: 192.168.70.111 (FTP server in 192.168.70.8)
- (4) In PC/192.168.1.33, ftp to server/192.168.70.8.  
In FTP server, you can find the incoming IP is 192.168.70.111. (This is right)  
Then logout the ftp.
- (5) Repeat step 3 but change the Global IP: 192.168.70.123
- (6) Repeat step 4, you can find the incoming still 192.168.70.111. This is wrong, it should be 192.168.70.123.
46. [FEATURE CHANGE] Extend "devID" field to six hexadecimal numbers(12 characters) in syslog format.
47. [BUG FIX]  
Symptom: Netmeeting H.323 traffic will be blocked by Firewall if connection is initiated from WAN side to LAN side.  
Condition:  
PC1(Netmeeting)------(LAN) ZyWALL (WAN) ----- PC2(Netmeeting)  
(1) Enable Firewall, setup a WAN2LAN firewall rule for H.323 service  
(2) Enable NAT port forwarding for port 1720(H.323) to PC 192.168.1.33  
(3) PC1 and PC2 use Netmeeting, PC2 call PC1.  
(4) Netmeeting application traffic will be blocked by Firewall, you will see a lot of Firewall blocked log in Centralized LOG.
48. [BUG FIX]  
Symptom: After VPN tunnel is established, user will see DPD packet while traffic still can be transferred through tunnel.  
Condition:  
PC1----- ZyWALL-A ===== ZyWALL-B ----- PC2 IPSec tunnel  
(1) Configure VPN tunnel between ZyWALL-A and ZyWALL-B.  
(2) In ZyWALL-A eWC->VPN->Global Setting, set Output Idle Timer = 120.  
(3) Reboot ZyWALL-A.  
(4) PC1 ping PC2 to trigger tunnel.  
(5) after tunnel is established, users will see ZyWALL-A's LOG show DPD packets.
49. [ENHANCEMENT] BWM children's bandwidth's sum will not exceed parent's.  
For example, the bandwidth of WAN interface is 50000 kbps. The sum of all children's bandwidth can not exceed 50000 kbps

**Modifications in V3.64(XD.0)b1 | 12/17/2004**

1. [ENHANCEMENT] Redesign IPSec mechanism to comply with ICSA Labs 1.1D IPSec Certification Testing.  
New feature added :  
(1) Multiple Proposal.  
(2) Support Nail Up, Dead Peer Detection, Control Ping.  
(3) Separate IPSec SA (Phase 2) from IKE SA (Phase 1), multiple IPSec SAs can bind to one the same IKE SA. (Multiple policy)  
(4) Add a "Global Setting" tab in eWC->VPN which contains some timer settings.  
(5) IKE and manual key rules have their setting pages respectively in eWC->VPN.

- (6) Remove the VPN setup page (SMT 27)
- (7) Redesign lots of IPSec CI command.
- 2. [ENHANCEMENT] Support Port Restricted Cone NAT.
- 3. [ENHANCEMENT] Redesign eWC->BW MGMT->Class Setup page.
- 4. [ENHANCEMENT] Enable "ip alg" command in bridge mode.
- 5. [ENHANCEMENT] Add the eWC>CONTENT FILTER>Cache and eWC>DNS>Cache GUI.
  - (1) Add total cache entry number info.
  - (2) Remove the "Port" info in URL Cache Entry table.
  - (3) The "Action" in URL Cache Entry table shows "Blocked" first by default.
  - (4) The URL entry in URL Cache Entry table aligns to the left.
  - (5) On the URL Cache Entry table, if the length of a URL entry is over 50, it will be truncated to 50 characters, with three trailing dots (...) appended.
  - (6) To adjust the note font size in eWC>DNS>Cache GUI.
- 6. [ENHANCEMENT] Popup message improvement: "Delete this rule?" => "Delete entry #[number] ?"
- 7. [ENHANCEMENT] DNS adds CI command "ip dns system cache flush".
- 8. [ENHANCEMENT] eWC>LOGS>Reports>Report Type>"LAN IP Address" renamed as "Host IP Address"
- 9. [ENHANCEMENT] In eWC>DNS>System>Address Record, add Wildcard.
- 10. [ENHANCEMENT] Add length checking of DNS(Peer ID Type) content in VPN.
- 11. [ENHANCEMENT] Integration of TOS & NAT information
  - (1) Current concurrent sessions = max(TOS current concurrent sessions, NAT current concurrent sessions)
  - (2) Historical high since last startup = max(TOS historical high since last startup, NAT historical high since last startup)
- 12. [ENHANCEMENT] Add FQDN support in my IP address in IKE.
- 13. [ENHANCEMENT] IPSec GUI enhancements
  - (1) On eWC>VPN>Global Settings, add IPSec timers configuration.
  - (2) On eWC>VPN>Network Policy Edit page, add Netbios passthrough field.
  - (3) On eWC>VPN>Gateway Policy Edit page, add FQDN field for My ZyWALL.
- 14. [ENHANCEMENT] Enhance ZyWALL GUI.
  - (1) To allow more than two child windows open from multiple ZyWALLs, the second parameter (windowName) of the JavaScript function Window.open() will be the MAC address of the ZyWALL that is currently being managed. The child windows include the following.
    - 1) Wizards
    - 2) Help
    - 3) Show Statistics
    - 4) Show DHCP Table
    - 5) VPN Status
    - 6) BWM statistics
  - (2) For identification purpose, the title of the eWC parent window, as well as its child windows, will contain the system FQDN of the ZyWALL that is currently being managed.
- 15. [ENHANCEMENT]

- (1) In eWC>Home>System Time, add GMT timezone + DST offset.
- (2) In eWC>Date&Time>Current Time, GMT add timezone + DST offset.
- 16. [ENHANCEMENT] Add GUI for LAN DHCP Relay feature.
- 17. [ENHANCEMENT] Auth Server/Local User Database needs long time to save all entries, enhance the saving policy to speed up this action.
- 18. [ENHANCEMENT] In SMT 24.6, the menu adds the reminding message "You can enter ctrl-x to terminate operation any time."
- 19. [ENHANCEMENT] Add a API function to move rules for NAT address mapping table. CI command: ip nat acl move <set#> <rule# from> <rule# to>
- 20. [ENHANCEMENT] For Manual IPsec rule, the "My ZyWALL" and "Remote Gateway Address" should not have FQDN fields. (Remove My Domain Name and change Secure Gateway Address into IP field)
- 21. [ENHANCEMENT]
  - (1) In eWC>MAINTENANCE>General, change the type of the "Administrator Inactivity Timer" field from ASCII to integer.
  - (2) Add a JavaScript Global function to avoid filling any character in the specific fields on both IE and Netscape. (allow number only)
- 22. [ENHANCEMENT] Add a "Log" check box for "VPN connectivity check". in eWC>VPN>NETWORK POLICY>EDIT.
- 23. [FEATURE CHANGE] Modify CI command "ip arp add" from hidden to visible.
- 24. [ENHANCEMENT] For single WAN, the WAN cannot receive an IP from DHCP server with the same subnet with other interfaces.
- 25. [ENHANCEMENT] The new DST feature allows user to know the start/end date. It will be nice if the ZyWALL shows what date '1st Sun in April' is ----. And there is some spare space on the screen on that line.
- 26. [ENHANCEMENT] User can use telnet/ping/ via VPN in SMT menu 24.8.
  - (1) If you telnet/ping/... from your ZyWALL to an IP on the VPN "remote network" and the ZyWALL's LAN IP (including alias IP) is on the VPN "local network", the ZyWALL uses LAN IP as source.
  - (2) If you telnet/ping/... from your ZyWALL to an IP on the VPN "remote network" and the ZyWALL's DMZ IP (including alias IP) is on the VPN "local network", the ZyWALL uses DMZ IP as source.
  - (3) (For future wireless enhancement) If you telnet/ping/... from your ZyWALL to an IP on the VPN "remote network" and the ZyWALL's WLAN IP (including alias IP) is on the VPN "local network", the ZyWALL uses WLAN IP as source.
  - (4) Otherwise the ZyWALL uses any appropriate interface IP as source depending on the routing table.

Note: If there are more than one appropriate local interfaces, router will use the first matched local interface IP address as the source IP address.
- 27. [ENHANCEMENT] In GUI>NAT>Port Forwarding, router will now check if the translated end port is out of 65535.
- 28. [ENHANCEMENT] On eWC>HOME>VPN wizard, My ZyWALL address support Domain name.
- 29. [ENHANCEMENT]
  - (1) In eWC>MAINTENANCE>F/W Upload, the warning message title should be red in order to be consistent with the style of other warning message.

- (2) In eWC>MAINTENANCE>Restore Configuration, the warning message title should be red in order to be consistent with the style of other warning message.
30. [ENHANCEMENT] On eWC>NAT>AddressMapping, add dynamic display for "Go To Page". If there are less than 10 address mapping rules, then hide "Go To Page", else display "Go To Page".
31. [ENHANCEMENT] When we receive a non-encrypt initial content payload in IKE, we will ignore it.
32. [ENHANCEMENT] Add payload information in IKE LOG. Besides reason, we also show which payload caused the IKE LOG.
33. [ENHANCEMENT] HOME>Internet Access, the "First DNS Server", "Second DNS Server" is inconsistent with DNS>Name Server Record. The specified "First DNS Server", "Second DNS Server" will be updated in eWC>DNS>Name Server Record.
34. [ENHANCEMENT] In GUI>WAN, add "Authentication Type" field.
35. [ENHANCEMENT] For DHCP server, if the requested client does not have a host name, the log will show MAC address instead of nothing.
36. [ENHANCEMENT]  
(1) In eWC>CONTENT FILTER>Cache, if users click Action/URL/Remaining Time to sort the cache entries, the page will not jump to the top of this page before it refreshes.  
(2) By using Firefox/Netscape in eWC>CONTENT FILTER>Cache, if users click Action/URL/Remaining Time to sort the cache entries, the page will refresh immediately.
37. [ENHANCEMENT] In the past, we can delete a tunnel in SMT 27 and can only do this in eWC. Now, Add a CI command "ipsec drop <policy index>" to delete a tunnel and "ipsec show\_runtime list" to list the active VPN tunnel.
38. [ENHANCEMENT] Consolidate "Receive IPSec packet, but no corresponding tunnel exists" logs.

**Modifications in V3.62(XD.2) | 09/24/2004**

Modify for formal release.

**Modifications in V3.62(XD.2)b3 | 09/21/2004**

1. [BUG FIX]  
Symptom: LAN host will get wrong DNS server.  
Condition:  
1. Set SMT 3.2 DNS first DNS server as user defined 1.1.1.1. Others are none.  
2. Unplug WAN port and reboot.  
3. LAN host get IP address and DNS server and the DNS server is LAN IP.

**Modifications in V3.62(XD.2)b2 | 09/17/2004**

1. [BUG FIX]



**ZyXEL Confidential**

Symptom: LAN host ping device LAN IP a period time, then PPPoE/PPTP will be triggered dial.

Condition:

1. Set WAN 1 are PPPoE.

2. LAN host ping device LAN IP a period time, then WAN 1 will be triggered dial.

2. [BUG FIX]

Symptom: Firewall sends TCP RST after it blocks traffic period of time.

Condition:

1. Configure Firewall LAN to WAN blocked and enable log

2. Generate one TCP SYN packet from LAN to WAN

3. Firewall will block this packet and generate block log

4. After period of time (30 seconds), Firewall log shows it sent TCP RST to both client and server side

3. [BUG FIX]

Symptom: System has a lot of long timeout UDP sessions.

Condition:

1. Enable firewall.

2. Display TOS sessions.

3. A lot of long timeout UDP sessions.

4. [BUG FIX]

Symptom: ZyWALL crashes very often in bridge mode.

Condition:

1. Switch to bridge mode.

2. Enable Firewall.

3. ZyWALL crashes very often.

5. [ENHANCEMENT] Enhance "cnm keepalive" ci command. Add "cnm keepalive 0" command to stop sending of keepalive packet to Vantage.

6. [BUG FIX] Symptom: Symptom: FTP from WAN to LAN does not work.

Condition:

1. Set a FTP server on a host in the LAN side and configure a default server to this host.

2. Using FTP from WAN to the default server with port mode.

3. After typing username and password, "ls" command does not work.

7. [BUG FIX] Symptom: LAN host will get wrong DNS server.

Condition:

1. Set SMT 3.2 DNS first DNS server as user defined 1.1.1.1. Others are none.

2. Unplug WAN port and reboot.

3. LAN host get IP address and DNS server and the DNS server is LAN IP.

8. [BUG FIX] Symptom: System Crash when change encryption key in Vantage.

Condition:

1. Device register to Vantage in router mode under DES and PPPoE.

2. configuration>>general>>system change the original encryption key and apply

3. Device receives data but soon the system crash.

9. [BUG FIX] Symptom: WAN Gateway will be reset to 0.0.0.0.

Condition:

1. In Vantage CNM add a device (the device have a static IP),when it register to

**ZyXEL Confidential**

- Vantage. Vantage set default value to device.
2. After the device reset, WAN Gateway will be reset to 0.0.0.0.
10. [BUG FIX] Symptom: CNM agent accepts wrong CI command "cnm keepalive -323123122222222222222222".
- Condition:
1. In SMT 24.8, type "cnm keep -323123122222222222222222".
  2. The system accepts it and saves with the value.
11. [BUG FIX] Symptom: CNM agent accepts wrong CI command "cnm encrymode 1231223".
- Condition:
1. In SMT 24.8, type "cnm encrymode 1231223".
  2. The system accepts it and read it as "65535".
12. [BUG FIX] Symptom: [Vantage] Configuration>>VPN: When delete a active VPN tunnel successfully. Device sends VPN tunnel status "Destroy" to vantage.
- Condition:
1. Create and dial up a VPN tunnel via Vantage.
  2. Delete this active rule in Vantage.
  3. Vantage server will have exception.
13. [BUG FIX]
- Symptom: eWC will fill the "Connection ID/Name" field with "C:1" when the fetch data is empty.
- Condition:
1. In eWC, set "Connection ID/Name" as empty in PPTP mode and apply it.
  2. Go go another page and go back the WAN page, the "Connection ID/Name" field is filled with "C:1" even we set the field as empty.

**Modifications in V3.62(XD.2)b1 | 08/16/2004**

1. [ENHANCEMENT]  
Add Unified ALG for SIP and H.323.
2. [ENHANCEMENT]  
Each unified ALG can be enabled/disabled. The default ALG setting for SIP and H.323 is disabled.
3. [ENHANCEMENT]  
Firewall can bypass AX.25 (protocol #93) & IPv6 (protocol #41) protocols.
4. [BUG FIX]  
Symptom: Bandwidth management with ALG\_H.323 cause system crash.  
Condition:
  1. Create a class with a Service-H.323 filter in WAN1 interface.
  2. Unplug all WAN's cable
  3. Lanch the "Openphone" application that supports H.323 and make a call.
  4. Router crashes.
5. [BUG FIX]  
Symptom: Router block trusted web content.  
Condition:
  - 1). In "eWC->CONTENT FILTER->General", enable content filter.

- 2). In "eWC->CONTENT FILTER->Customization", select check boxes of "Enable Web site customization" and "Disable all Web traffic except for trusted Web sites".
- 3). In "eWC->CONTENT FILTER->Customization", set "www.hellowork.go.jp" as trusted web site.
- 4). Open browser and access  
<http://www.hellowork.go.jp/kensaku/servlet/kensaku?pageid=001>
- 5). In the new page, select third and fourth radio button and click "search" button.
- 6). In the new page, click "next page" button.
- 7). The new page will be blocked.
6. [BUG FIX]  
Symptom: External Content Filtering cannot block the URL belonging to restricted category.  
Condition:
  - 1). In "eWC->CONTENT FILTER->Customization", unselect "Enable Web site customization".
  - 2). Add a URL to "trusted web sites".
  - 3). In "eWC->CONTENT FILTER->Customization", select "Block Web sites which contain these keywords".
  - 4). In "eWC->CONTENT FILTER->Categories", select the category which the URL belongs to.
  - 5). Access the trusted URL.
  - 6). The URL will not be blocked.
7. [BUG FIX]  
Symptom: System crash by memory leak.  
Condition:
  - 1). Enable bandwidth management.
  - 2). Into eWC->Bandwidth Management->Monitor and wait for a period time.
  - 3). System crash by memory leak.
8. [BUG FIX]  
Symptom: Remote node CI command crashes.  
Condition:
  - 1). Goto SMT 24.8
  - 2). Load dial backup remote node to working buffer.
  - 3). Type CI command "sys rn accessblock 0".
  - 4). Save this remote.
  - 5). System crashes.
9. [BUG FIX]  
Symptom: System crash when someone want to configure NAT mapping rules.  
Condition:
  1. Use the terminal program to login the console.
  2. Enter SMT 15, NAT Setup
  3. Select 1 to enter SMT 15.1, Address Mapping Sets.
  4. The system crash
10. [BUG FIX]  
Symptom: eWC>NAT>ADDRESS MAPPING edit page leaks memory.  
Condition:

1. Log on to eWC.
  2. Go to eWC>NAT>ADDRESS MAPPING edit page, and then click Cancel.
  3. Repeat Step 2 for several times.
  4. Check system memory info by the CI command: system memu ms You will observe abnormal increases of memory sections, indicating memory leaks.
11. [BUG FIX]  
Symptom: Trigger port will disappear after system reboot.  
Condition:  
1. Configure Trigger port rule.  
2. System reboot.  
3. The configured Trigger port rule disappear.
12. [BUG FIX]  
Symptom: The system might crash when enabling IPSec.  
Condition: During IKE negotiation the system might crash.
13. [BUG FIX]  
Symptom: MSN Messenger's "Ask for Remote Assistance" function causes system crash.  
Condition:  
1. Enable UPnP.  
2. Set PC(A) and router(B) in intranet and PC(C) connects to LAN port of router(B).  
3. Test MSN Messenger's "Ask for Remote Assistance" function from PC(A) to PC(C).  
4. After PC(C) accepts the PC(A) request by "Ask for Remote Assistance" then the device will crash.
14. [BUG FIX]  
Symptom: System out of memory.  
Condition:  
1. Let the ZyWALL be a DNS proxy for LAN hosts.  
2. Do a lot of DNS inverse queries by running IPScan tool continuously from LAN host.  
3. After a long time, the ZyWALL will out of memory.
15. [FEATURE CHANGE]  
Change UPnP device name for ZyWALL35 and ZyWALL5  
WAS: "ZyXEL ZyWALL 35 Internet Security Gateway"  
IS: "ZyXEL ZyWALL 35 Internet Security Appliance"
16. [BUG FIX]  
Symptom: Packets cannot pass through NAT router to LAN hosts.  
Condition:  
1. NAT default server is on  
2. Protocol of the packet is not TCP, UDP, ICMP, ESP, GRE.  
3. Packets from WAN to router.  
4. Packets cannot pass through NAT router to LAN hosts (NAT default server)
17. Symptom: External Content filtering cannot register.  
Condition:  
1. In "eWC->content filter->categories", click "register" to connect to ZSSW.  
2. Do the registration on ZSSW.

3. The registration will fail in the final step.
18. [ENHANCEMENT]  
External content filtering support full URL checking.  
Was: External content filtering only take domain name or IP address of URL into category checking.  
Is: External content filtering put entire URL into category checking.
19. [ENHANCEMENT]  
CI command to turn off triangle route log, multicast log and broadcast log.  
1. Add CI commands:  
a. "sys logs switch".  
b. "sys logs switch display".  
c. Triangle route log switch: "sys logs switch bmlog <0:no|1:yes>"  
d. Broadcast/Multicast log switch: "sys logs switch trilog <0:no|1:yes>".
20. [BUG FIX]  
Symptom: System time problem.  
Condition:  
1. enter SMT24.10, configure time server.  
2. open daylight saving, configure the start time and end time so that current time is within the daylight saving time.  
3. after writing to rom file, router ask you to calibrate the system clock, answer yes.  
4. If system failed to connect time server, system time will add one hour, every time you enter smt 24.1,system time add 1 hour automatically.
21. [FEATURE CHANGE]  
Change external content filtering message on centralized log and blocked page for some error events.
22. [BUG FIX]  
Symptom: Router will crash.  
Condition: When user continuously accesses eWC and press "Apply" button, sometimes router will crash.
23. [BUG FIX]  
Symptom: The system crashes after it receives a url that contains more than three "/"s behind the ip address (or domain name).
24. [BUG FIX]  
Symptom: Sometimes when connect to router by TCP, FTP or HTTP will fail.  
Condition:  
1. One user connects to router by FTP, TELNET or HTTP.  
2. In TCP handshake, client doesn't receive SYN ACK. i.e., router is in SYN RECEIVE state.  
3. Client timeout and send RESET to router.  
4. Related socket in router is still alive and other users can't login router until this socket timeout.
25. [BUG FIX]  
Symptom: eWC spelling error: eWC->Firewall→Default Rule: Allow Asymmetrical should be "Asymmetric"
26. [BUG FIX]  
Symptom: System out of memory and reboot when firewall enable.

**ZyXEL Confidential**

Condition:

1. Enable firewall, then generate traffic.
2. The memory will slowly leak until it uses up all the memory, then reboot.

27. [BUG FIX]

Symptom: Generate a lot of TCP port 80 sessions to ZyWALL will cause device to hang and reboot by hardware watchdog.

Condition:

1. Use session.exe to generate a lot of TCP port 80 sessions to ZyWALL's LAN or WAN interface
2. After several hundreds of sessions are established, the ZyWALL will hang and finally reboot.

28. [ENHANCEMENT]

1. Support user config for SIP session timeout value.
2. Support SIP SDP multiple RTP port.
3. Delete unused ALG type.
4. Command for ALG enable/disable and sip timeout.

29. [BUG FIX]

Symptom: Sometimes the ZyWALL reboots by software watchdog.

Condition:

1. Put the ZyWALL on the network for a long time.
2. Sometimes the ZyWALL will reboot by software watchdog.

30. [BUG FIX]

Symptom: XAUTH with rule swap doesn't work.

Condition:

1. In initiator, set up a VPN rule with XAUTH in client mode.
2. In responder, there are three VPN rules:
  - a. Rule 1 is XAUTH off.
  - b. Rule 2 is XAUTH with client mode.
  - c. Rule 3 is XAUTH with server mode (this rule corresponds to client rule).
3. Dial from initiator, and the tunnel will never be up.

31. [BUG FIX]

Symptom: Content filter timeout problem.

Condition:

1. A router is register the content filter (CF) server.
2. Enable the CF feature.
3. Enable the external database content filtering.
4. The router log often record "Waiting content filter server (server name) timeout!".
5. A PC in lan fetch web from internet often hang for a while.

**Modifications in V3.62(XD.1) | 06/25/2004**

1. Formal release.

**Modifications in V3.62(XD.1)b1 | 06/16/2004**

**ZyXEL Confidential**

1. [ENHANCEMENT] Support Vantage CNM 2.0 (Vantage Centralized Network Management).

**Modifications in V3.62(XD.0) | 05/18/2004**

1. Formal release.

**Modifications in V3.62(XD.0)b5 | 05/14/2004**

1. [BUG FIX] Symptom: The ZyWALL might crash or hang when users browse eWC→Firewall→Rule Summary.  
Condition:
  - (1) Log on to eWC.
  - (2) Browse Ewc→Firewall→Rule Summary
  - (3) The ZyWALL might crash or hang.

**Modifications in V3.62(XD.0)b4 | 04/27/2004**

1. [FEATURE CHANGE]  
Remove Policy Route feature from ZyWALL 5 because Policy Route is not defined in product specification.
2. [FEATURE CHANGE]  
Maximum concurrent VPN tunnel number is changed from 5 to 10.
3. [FEATURE CHANGE]  
The following default settings is changed:
  - (1) eWC→Firewall→Anti-Probing  
WAS: Anti-Probing Respond Ping to LAN  
IS: Anti-Probing Response Ping to LAN&WAN&DMZ
  - (2) eWC→Firewall→Threshold  
WAS: TCP Maximum Incomplete Sessions = 10  
IS: TCP Maximum Incomplete Sessions = 30
  - (3) eWC→WAN→Route  
WAS: WAN Priority = 2  
IS: WAN Priority = 1
4. [BUG FIX]  
Symptom: External Content Filtering cannot be registered.  
Condition:
  - (1) In eWC→CONTENT FILTER→Categories", click "register" to connect to ZSSW.
  - (2) Do the registration on ZSSW.
  - (3) Browser display "Please wait....." and the page of "Register successfully" does not appear.
5. [BUG FIX]

Symptom: Traffic Redirect does not work.

Condition:

Internet ----- Router A ----- ZyWALL ----- gateway B ----- Internet  
                                WAN            LAN

- (1) Let ZyWALL WAN port connect to another router A and A is connected to Internet.
- (2) Setup Traffic Redirect to backup gateway B located at LAN side.
- (3) Disconnect the connection between router A and Internet.
- (4) The ZyWALL can not do Traffic Redirect to gateway B located at LAN side.

- ## 6. [BUG FIX]

CI command “ip igmp” is lost.

- ## 7. [BUG FIX]

Symptom: The behavior in priority-based Bandwidth Management is not correct.

Condition:

- (1) In eWC→BW MGMT→Summary, activates WAN1 root class with Speed = 1500 kbps and Scheduler = Priority-Based
- (2) In eWC→BW MGMT→Class Setup, Adds two sub-classes under WAN1 root class. Where WAN1-1 : Bandwidth Budget = 200, Priority = 7(higher than WAN1-2), and “Borrow bandwidth from parent class” is selected; WAN1-2 : Bandwidth Budget = 500, Priority = 1, “Borrow bandwidth from parent class” is also selected.
- (3) First generates traffic that satisfies WAN1-2 class, users will find WAN1-2 borrow the whole available bandwidth from parent, and the traffic is bound at about 1500kbps.
- (4) Then generates traffic that satisfies WAN1-1 class. Users will find WAN1-1 can not borrow bandwidth from parent class and bandwidth is bound at about 200kbps even though WAN1-1 has higher priority than WAN1-2.

- ## 8. [BUG FIX]

Symptom: In eWC→MAINTENANCE→General, set a number which is bigger than 1000 for Administrator Inactivity Timer. The label string 'Administrator Inactivity Timer' will disappear.

Condition:

- (1) Go to eWC→MAINTENANCE→General, set a number which is bigger than 1000 for Administrator Inactivity Timer.
- (2) Click 'Apply'.
- (3) The label string 'Administrator Inactivity Timer' will disappear.

- ## 9. [BUG FIX]

Symptom: ZyWALL ping sometimes fails.

Condition:

- (1) Turn on Firewall.
- (2) Go to SMT 24.8
- (3) Ping to exist host, but it sometimes fails.

- ## 10. [BUG FIX]

Symptom: In SMT 3.2, the subnet of ZyWALL LAN IP can be different from the subnet of DHCP client ip and ZyWALL LAN IP can be set within DHCP Client IP pool range.

Condition:

First case:



- (1) Go to SMT 3.2
- (2) Set DHCP client IP Starting address to be 192.168.2.3
- (3) Set LAN IP Address to be 192.168.1.1, then confirm to save.
- (4) These setting can be saved and no error message.

Second case:

- (1) In SMT 3.2, set DHCP client ip Starting address to be 192.168.1.3
- (2) Set Size of Client IP Pool to be 10
- (3) Set LAN IP Address to be 192.168.1.3, then confirm to save.
- (4) These setting can be saved and no error message.

11. [BUG FIX]

Symptom: Remote access control cannot work properly.

Condition:

- (1) Turn on bridge mode
- (2) Configure telnet server access control from WAN only by SMT 24.11
- (3) Telnet to device via WAN side
- (4) The telnet connection fails.

12. [BUG FIX]

Symptom: System crashes.

Condition: Configure device by eWC sometimes cause crash.

13. [BUG FIX]

Symptom: In bridge mode ZyWALL at eWC→Bridge, Bridge IP address settings can not be saved successfully.

Condition:

- (1) Switch the ZyWALL to bridge mode.
- (2) Go to eWC→Bridge page.
- (3) Change "IP Address", "IP Subnet Mask", or "Gateway IP Address" then click "Apply"
- (4) Status shows "Configuration updated successfully" but the changes was not really saved.

14. [BUG FIX]

Symptom: In SMT 24.11, the setting of DNS Service is displayed under bridge mode

Condition:

- (1) Go to SMT 1, change Device Mode to bridge mode.
- (2) After reboot, go to SMT 24.11, DNS Service incorrectly appear.

**Modifications in V3.62(XD.0)b3 | 04/04/2004**

1. [BUG FIX]

Symptom: CI command error, ZyWALL will show some CI commands which don't belong to current command set.

Condition:

- (1) Go to SMT 24.8, CI command mode.
- (2) Type "ip dns system", ZyWALL will correctly print two available commands, "edit" and "display".
- (3) Type "ip dns sys", ZyWALL will unexpectedly print nine available commands

instead of two. Those extra seven commands are not under "ip dns system".

2. [BUG FIX]

Symptom: DHCP client cannot get address from router.

Condition:

(1) In eWC→LAN→LAN, configure router as a DHCP server and set IP pool starting address as 192.168.1.33.

(2) In eWC→LAN→Static DHCP, configure all rules in static DHCP table and the IP addresses are 192.168.1.33~192.168.1.40.

(3) Use a PC which MAC address is not in the static DHCP table to get a IP address from router.

(4) The PC cannot get the IP address.

3. [BUG FIX]

Symptom: The ZyWALL will reset the current eWC HTTP session even when the LAN IP configuration is not successfully changed. Under this situation, users have to re-log in the ZyWALL.

Condition:

(1) Log in ZyWALL eWC, and go to eWC→LAN.

(2) Deliberately configure the LAN IP address as within the WAN subnet.

(3) Click Apply, then the status will show an error message indicating address conflict.

(4) The ZyWALL will then automatically break the current eWC HTTP session. To access the ZyWALL, users have to log in again.

4. [BUG FIX]

Symptom: Router will crash when entering SMT menu 3.5

Condition:

(1) Insert WLAN card.

(2) In CI command, enter "wlan active 11" instead of "wlan active 1" to activate WLAN on router.

(3) Enter SMT 3.5, router will crash.

5. [ENHANCEMENT]

Supports Vantage CNM 2.0(Vantage Centralized Network Management)

6. [BUG FIX]

Symptom: The Content Filtering blocks cookies even if it is not in the blocked schedule.

Condition:

(1) In eWC→CONTENT FILTER→General, select "Block Cookies".

(2) In eWC→CONTENT FILTER→General, set "Schedule to Block" with a time period NOT including the current time.

(3) Access a web site which contains cookies.

(4) The cookies will be blocked by the Content Filtering.

7. [BUG FIX]

Symptom: WAN status in SMT 24.1 shows wrong information in bridge mode.

Condition:

(1) Configure Internet access as PPTP or PPPoE encapsulation in router mode.

(2) Switch ZyWALL to bridge mode.

(3) WAN status in SMT 24.1 shows idle and IP address is "0.0.0.0".

8. [BUG FIX]

Symptom: Device cannot transfer Ethernet frame in bridge mode.

Condition:

- (1) ZyWALL enables bridge mode.
- (2) The Internet connection is under DMZ port.
- (3) Plug Ethernet cable between one host and ZyWALL DMZ port.
- (4) This host starts to transfer packets to Internet.
- (5) Unplug the Ethernet cable from DMZ port and plug in LAN port.
- (6) This host cannot transfer packets to Internet anymore.

9. [BUG FIX]

Symptom: PPPoE connection sometimes fails in France.

Condition: Since France Telecom changes their core network setup to BRAS, ZyWALL PPPoE connection on authentication phase most of the time fails.

10. [ENHANCEMENT]

Updates help pages for ZyWALL 5.

11. [BUG FIX]

Symptom: On the eWC→WIZARD→Internet Access page, the System DNS Servers configuration is not available when the ZyWALL is not a DHCP server for its LAN hosts.

Condition:

- (1) Log onto eWC, and go to eWC→LAN. Uncheck the "DHCP Server" option to stop ZyWALL from being a DHCP server to its LAN hosts.
- (2) Go to eWC→HOME→WIZARD→Internet Access. The System DNS Servers configuration is not available in the wizard.

12. [ENHANCEMENT]

The ZyWALL 5 Firewall GUI are enhanced as follows.

- (1) On eWC→Firewall→Rule Summary→Edit Rule, a basic sanity check on the firewall rule is performed.
- (2) On eWC→Firewall→Rule Summary→Edit Rule, the selected service for a new rule is empty by default.
- (3) On eWC→Firewall→Rule Summary→Edit Rule, the useless headers "##### Source IP Address #####" and "##### Destination IP Address #####" are removed.
- (4). On eWC→Firewall→Rule Summary→Edit Rule, when a specific address is added to the Source/Destination Address list, the "Any" address will automatically be deleted.
- (5) On eWC→Firewall→Rule Summary→Edit Rule, the firewall action radio buttons are replaced by a dropdown list.
- (6) On eWC→Firewall→Threshold, the "Cancel" button is replaced by "Reset" button.
- (7) On eWC→Firewall→Default Rule, the wording "Default Rule Settings" is replaced by "Default Rule Setup".
- (8) On eWC→Firewall→Anti-Probing, the wording "Anti-Probing Settings" is replaced by "Anti-Probing Setup".
- (9) "ACCESS POLICY" is renamed as "FIREWALL".
- (10) "CUSTOM PORT" is renamed as "CUSTOM SERVICE".
- (11) Users can expand or collapse "Source Address", "Destination Address" and "Service Type" drop down lists by clicking the [+]/[-] icon at the beginning of each rule in Firewall Rule Summary Table.

**Modifications in V3.62(XD.0)b2 | 03/26/2004**

1. [BUG FIX]

Symptom: In eWC→FIREWALL→ACCESS POLICY→EDIT RULE, Action for Matched Packets can't be saved correctly.

Condition:

(1) Go to eWC→FIREWALL→ACCESS POLICY→EDIT RULE

(2) Choose the type of Action for Matched Packets as Block, and then click Apply.

(3) Leave this page and then re-enter this page again, Action for Matched Packets always shows Forward.

2. [ENHANCEMENT]

Supports Intel TE28F640 J3C120 Flash ROM.

**Modifications in V3.62(XD.0)b1 | 03/11/2004**

First Release.

## **Appendix 1 Remote Management Enhancement (Add SNMP & DNS Control)**

### **New function**

- (1) You can change the server port.
- (2) You can set the security IP address for each type of server.
- (3) You can define the rule for server access. (WAN only/LAN only, None, ALL).
- (4) The secure IP and port of the SNMP server is read only
- (5) The port of the SNMP and DNS server is read only.
- (6) The default server access of the SNMP and DNS is ALL.

### **Modification**

- (1) The default value for Server access rule is **ALL**.
- (2) Under the default setting: You can setup the Menu 15 to forwarding the server to LAN IP address. Thus you can configure the router through the WAN and you don't need to modify the server management or filter.

### **Note**

- (1) DNS Service is not available in Bridge Mode.

#### **Menu 24.11 - Remote Management Control**

```
TELNET Server:  Port = 23      Access = ALL
                  Secure Client IP = 0.0.0.0
FTP Server:     Port = 21      Access = ALL
                  Secure Client IP = 0.0.0.0
SSH Server:     Certificate = auto_generated_self_signed_cert
                  Port = 22      Access = ALL
                  Secure Client IP = 0.0.0.0
HTTPS Server:   Certificate = auto_generated_self_signed_cert
                  Authenticate Client Certificates = No
                  Port = 443      Access = ALL
                  Secure Client IP = 0.0.0.0
HTTP Server:    Port = 80      Access = ALL
                  Secure Client IP = 0.0.0.0
SNMP Service:   Port = 161      Access = ALL
                  Secure Client IP = 0.0.0.0
DNS Service:    Port = 53      Access = ALL
                  Secure Client IP = 0.0.0.0
Press ENTER to Confirm or ESC to Cancel:
```

## Appendix 2 Trigger Port

### Introduction

Some routers try to get around this "one port per customer" limitation by using "triggered" maps. Triggered maps work by having the router watch **outgoing** data for a specific port number and protocol. When the router finds a match, it remembers the IP address of the computer that sent the matching data. When the requested data wants to come back **in** through the firewall, the router uses the port mapping rules that are linked to the trigger, and the IP address of the computer that "pulled" the trigger, to get the data back to the proper computer.


These triggered events can be timed so that they erase the port mapping as soon as they are done with the data transfer, so that the port mapping can be triggered by another Client computer. This gives the **illusion** that multiple computers can use the same port mapping at the same time, but the computers are really just taking turns using the mapping.

### How to use it

Following table is a configuration table.

Name	Incoming	Trigger
<b>Napster</b>	<b>6699</b>	<b>6699</b>
<b>Quicktime 4 Client</b>	<b>6970-32000</b>	<b>554</b>
<b>Real Audio</b>	<b>6970-7170</b>	<b>7070</b>
<b>User</b>	<b>1001-1100</b>	<b>1-100</b>

### How it works

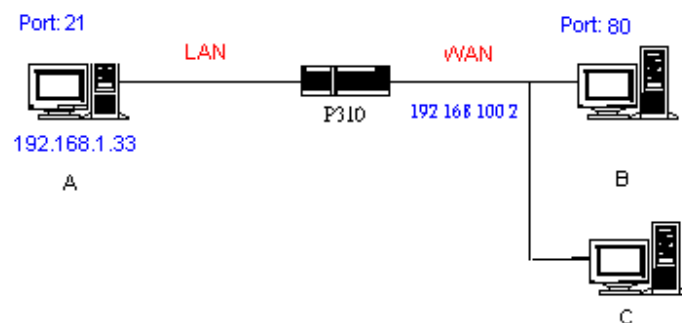

For example, you are running a FTP Server on port 21 of machine A. And you may want this server accessible from the Internet without enabling NAT-based firewall. There are one Web Server on port 80 of machine B and another client C on the Internet.

- (1) As Prestige receives a packet from a local client A destined for the outside Internet machine B, it will check the destination port in the TCP/UDP header to see if it matches the setting in "Trigger Port" (80). If it matches, Prestige records the source IP of A (192.168.1.33) in its internal table.
- (2) Now client C (or client B) tries to access the FTP server in machine A. When Prestige to forward any un-requested traffic generated from Internet, it will first check the rules in port forwarding set. When no matches are found, it will then check the "Incoming Port". If it matches, Prestige will forward the packet to the recorded IP address in the

internal table for this port. (This behavior is the same as we did for port forwarding.)

- (3) The recorded IP in the internal table will be cleared if machine A disconnect from the sessions that matches the "Trigger Port".

**Notes**

- (1) Trigger events can't happen on data coming from *outside* the firewall because the NAT router's sharing function doesn't work in that direction.
- (2) Only one computer can use a port or port range at a time on a given real (ISP assigned) IP address.

### **Appendix 3 Hard-coded packet filter for "NetBIOS over TCP/IP" (NBT)**

The new set C/I commands is under "sys filter netbios" sub-command. Default values of any direction are "Forward", and trigger dial is "Disabled".

There are two CI commands:

- (1) "sys filter netbios disp": It will display the current filter mode.

Example output:

```
===== NetBIOS Filter Status =====  
LAN to WAN:          Block  
WAN to LAN:          Forward  
IPSec Packets:       Forward  
Trigger Dial:        Disabled
```

- (2) "sys filter netbios config <type> {on|off}": To configure the filter mode for each type. Current filter types and their description are:

Type	Description	Default mode
0	LAN to WAN	Forward
1	WAN to LAN	Forward
6	IPSec pass through	Forward
7	Trigger dial	Disabled

Example commands:

```
sys filter netbios config 0 on  => block LAN to WAN NBT packets  
sys filter netbios config 1 on  => block WAN to LAN NBT packets  
sys filter netbios config 6 on  => block IPSec NBT packets  
sys filter netbios config 7 off => disable trigger dial
```



## Appendix 4 Traffic Redirect/Static Route Application Note

### Why traffic redirect/static route be blocked by ZyWALL

ZyWALL is the ideal secure gateway for all data passing between the Internet and the LAN. For some reasons (load balance or backup line), users want traffics be re-routed to another Internet access devices while still be protected by ZyWALL. The network topology is the most important issue. Here is the common example that people misemploy the LAN traffic redirect and static route.

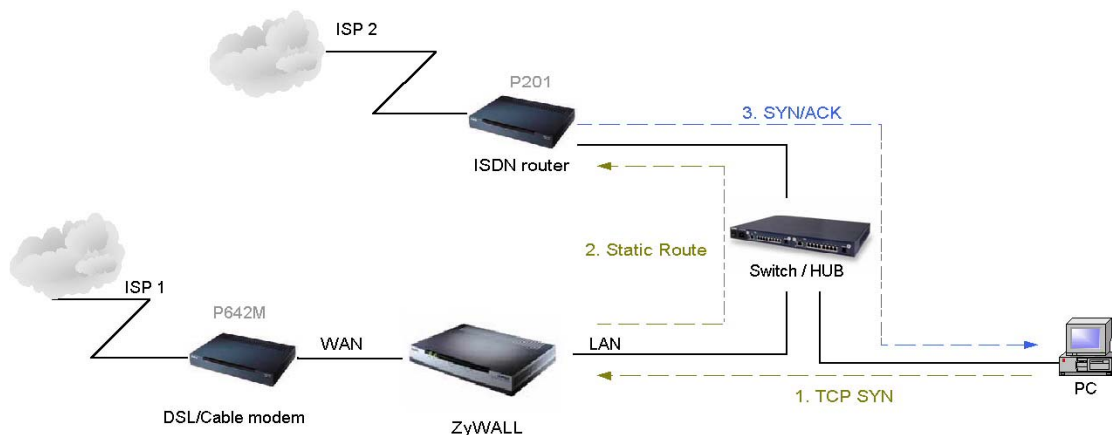


Figure 4-1 Triangle Route

Figure 4-1 indicates the triangle route topology. It works fine with turn off firewall. Let's take a look into the perspective toward this situation.

- Step 1. PC sends outgoing traffics through ZyWALL because default gateway assigned to it.
- Step 2. Then, ZyWALL will redirect the traffics to another gateway (ISDN/Router) as we expect.
- Step 3. But the return traffics do not go through ZyWALL because the gateway (say, P201) and the PC are on the same IP network. **Any traffic will easily inject into the protected network area through the unprotected gateway.**
- Step 4. When firewall turns on, it could be worse. ZyWALL will check the outgoing traffics by ACL and create dynamic sessions to allow legal return traffics. For Anti-DoS reason, ZyWALL will send RST packets to the PC and the peer because it never received TCP SYN/ACK packet.

That causes all of outgoing TCP traffics being reset!

### How traffic redirect/static route works under protection - Solutions

#### (1) Gateway on alias IP network

IP alias allows you to partition a physical network into different logical IP networks over the same Ethernet interface. The ZyWALL supports three logical LAN interfaces via its single physical Ethernet interface with the ZyWALL itself as the gateway for each LAN network. Division of protected LAN and the other gateway into different subnets will trigger the incoming traffic back to ZyWALL and it can work as normal function.

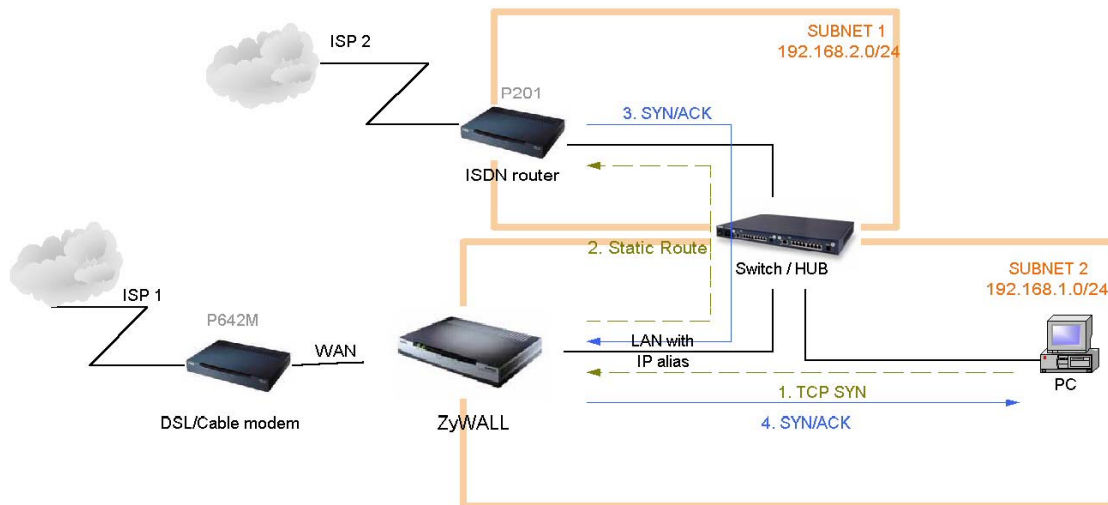


Figure 4-2 Gateway on alias IP network

## (2) Gateway on WAN side

A working topology is suggested as below.

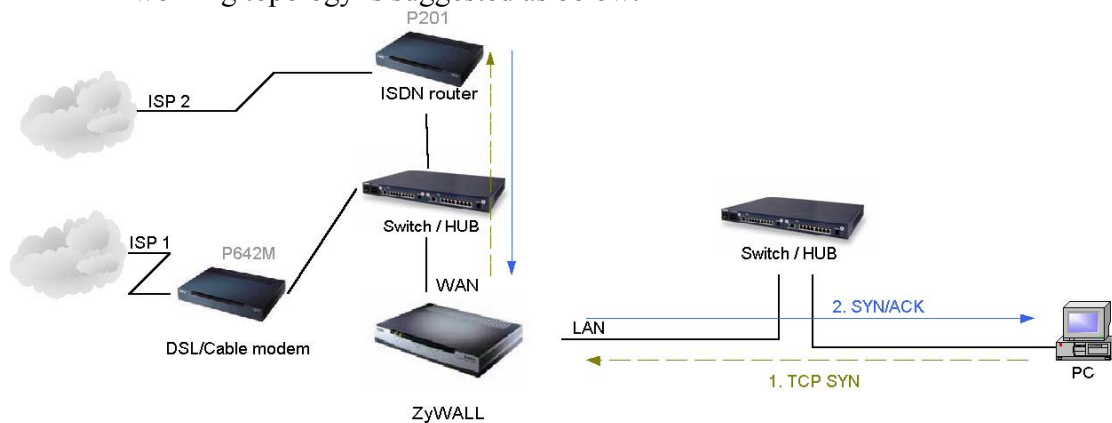


Figure 5-3 Gateway on WAN side

## Appendix 5 IPSec FQDN support

ZyWALL A-----Router C (with NAT) -----ZyWALL B  
(WAN) (WAN) (LAN) (WAN)

If ZyWALL A wants to build a VPN tunnel with ZyWALL B by passing through Router C with NAT, A can not see B. It has to secure gateway as C. However, ZyWALL B will send it packet with its own IP and its ID to ZyWALL A. The IP will be NATed by Router C, but the ID will remain as ZyWALL B sent.

In FQDN design, all three types, IP, DNS, E-Mail, can set ID content. For ID type is DNS or E-mail, the behavior is simple. ZyWALL A and ZyWALL B only checks the ID contents are consistent and they can connect.

### ZyXEL Confidential

Basically the story is the same when ID type is IP. If user configures ID content, then ZyWALL will use it as a check. So the ID content also has to match each other. For example, ID type and ID content of incoming packets must match “Peer ID Type” and “Peer ID content”. Or ZyWALL will reject the connection.

However, user can leave “ID content” blank if the ID type is IP. ZyWALL will put proper value in it during IKE negotiation. This appendix describes all combinations and behaviors of ZyWALL.

We can put all combinations in to these two tables:

(Local ID Type is IP):

Configuration		**Run-time status	
My IP Addr	Local ID Content	My IP Addr	Local ID Content
0.0.0.0	*blank	My WAN IP	My WAN IP
0.0.0.0	a.b.c.d (it can be 0.0.0.0)	My WAN IP	a.b.c.d ( 0.0.0.0, if user specified it)
a.b.c.d (not 0.0.0.0)	*blank	a.b.c.d	a.b.c.d
a.b.c.d (not 0.0.0.0)	e.f.g.h (or 0.0.0.0)	a.b.c.d	e.f.g.h (or 0.0.0.0)

\*Blank: User can leave this field as empty, doesn't put anything here.

\*\*Runtime status: During IKE negotiation, ZyWALL will use “My IP Addr” field as source IP of IKE packets, and put “Local ID Content” in the ID payload.

(Peer ID Type is IP):

Configuration		*Run-time check
Secure Gateway Addr	Peer ID Content	
0.0.0.0	blank	Just check ID types of incoming packet and machine's peer ID type. If the peer's ID is IP, then we accept it.
0.0.0.0	a.b.c.d	System checks both type and content
a.b.c.d	blank	1. System will check the ID type and the content. 2. The contents will match only if the ID content of coming packet is a.b.c.d because system will put Secure Gateway Address as Peer ID content.
a.b.c.d	e.f.g.h	1. System will check the ID type and the content. 2. The contents will match only if the ID content of coming packet is e.f.g.h.

\*Runtime Check: During IKE negotiation, we will check ID of incoming packet and see if it matches our setting of “Peer ID Type” and “Peer ID Content”.

### **Summary:**

1. When Local ID Content is blank which means user doesn't type anything here, during IKE negotiation, my ID content will be "My IP Addr" (if it's not 0.0.0.0) or local's WAN IP.
2. When "Peer ID Content" is not blank, ID of incoming packet has to match our setting. Or the connection request will be rejected.
3. When "Secure Gateway IP Addr" is 0.0.0.0 and "Peer ID Content" is blank, system can only check ID type. This is a kind of "dynamic rule" which means it accepts incoming request from any IP, and these requests' ID type is IP. So if user put a such kind of rule in top of rule list, it may be matched first. To avoid this problem, we will enhance it in the future.

## **Appendix 6 Embedded HTTPS proxy server**

HTTPS (Hypertext Transfer Protocol over Secure Socket Layer, or HTTP over SSL) is a Web protocol developed by Netscape and built into its browser that encrypts and decrypts user page requests as well as the pages that are returned by the Web server. HTTPS is really just the use of Netscape's Secure Socket Layer (SSL) as a sublayer under its regular HTTP application layering.

The ZyWALL's embedded HTTPS proxy server is basically an SSL server which performs SSL transactions, on behalf of the embedded HTTP server, with an SSL client such as MSIE or Netscape. As depicted by the figure below, when receiving a secure HTTPS request from an SSL-aware Web browser, the HTTPS proxy server converts it into a non-secure HTTP request and sends it to the HTTP server. On the other hand, when receiving a non-secure HTTP response from the HTTP server, the HTTPS proxy server converts it into a secure HTTPS response and sends it to the SSL-aware Web browser.


By default, the HTTPS proxy server listens on port 443 instead of the HTTP default port 80. If the ZyWALL's HTTPS proxy server port is changed to a different number, say 8443, then the URL for accessing the ZyWALL's Web user interface should be changed to <https://hostname:8443/> accordingly.

## **Appendix 7 Wi-Fi Protected Access**

Wi-Fi Protected Access(WPA) is a subset of the IEEE 802.11i. WPA improves data encryption by using TKIP, MIC and IEEE 802.1X. Because WPA applies 802.1X to authenticate WLAN users by using an external RADIUS server, so you can not use the Local User Database for WPA authentication.

For those users in home or small office, they have no RADIUS server, WPA provides the benefit of WPA through the simple "WPA-PSK". Pre-Shared Key(PSK) is manually entered in the client and ZyWALL for authentication. ZyWALL will check the client PSK and allow it join the network if it's PSK is matched. After the client pass the authentication, ZyWALL will derived and distribute key to the client, and both of then will use TKIP process to encrypt exchanging data.

## Appendix 8 IPSec IP Overlap Support

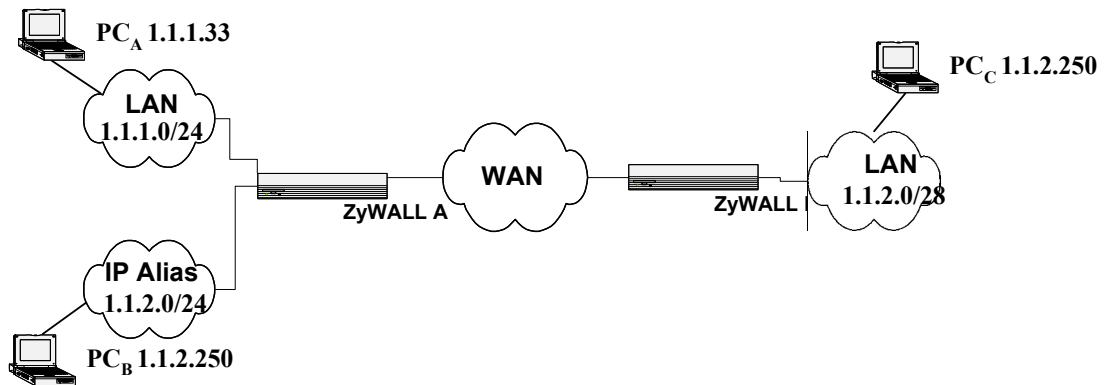

*Figure 1*

The ZyWALL uses the network policy to decide if the traffic matches a VPN rule. But if the ZyWALL finds that the traffic whose local address overlaps with the remote address range, it will be confused if it needs to trigger the VPN tunnel or just route this packet.

So we provide a CI command “`ipsec swSkipOverlapIp`” to trigger the VPN rule. For example, you configure a VPN rule on the ZyWALL A as below:

Local IP Address Start= 1.1.1.1    End= 1.1.2.254  
Remote IP Address Start= 1.1.2.240    End = 1.1.2.254

You can see that the Local IP Address and the remote IP address overlap in the range from 1.1.2.240 to 1.1.2.254.

- (1) Enter “`ipsec swSkipOverlapIp off`”:  
To trigger the tunnel for packets from 1.1.1.33 to 1.1.2.250. If there is traffic from LAN to IP Alias (Like the traffic from PC<sub>A</sub> to PC<sub>B</sub> in Figure 1), the traffic still will be encrypted as VPN traffic and routed to WAN, you will find their traffic disappears on LAN.
- (2) Enter “`ipsec swSkipOverlapIp on`”:  
Not to trigger the tunnel for packets from 1.1.1.33 to 1.1.2.250. Even the tunnel has been built up, the traffic in this overlapped range still cannot be passed.

[Note]


If you configure a rule on the ZyWALL A whose

Local IP Address Start= 0.0.0.0

Remote IP Address Start= 1.1.2.240 End = 1.1.2.254

No matter `swSkipOverlapIp` is on or off, any traffic from any interfaces on the ZyWALL A will match the tunnel. Thus `swSkipOverlapIp` is not applicable in this case.

## Appendix 9 VPN Local IP Address Limitation

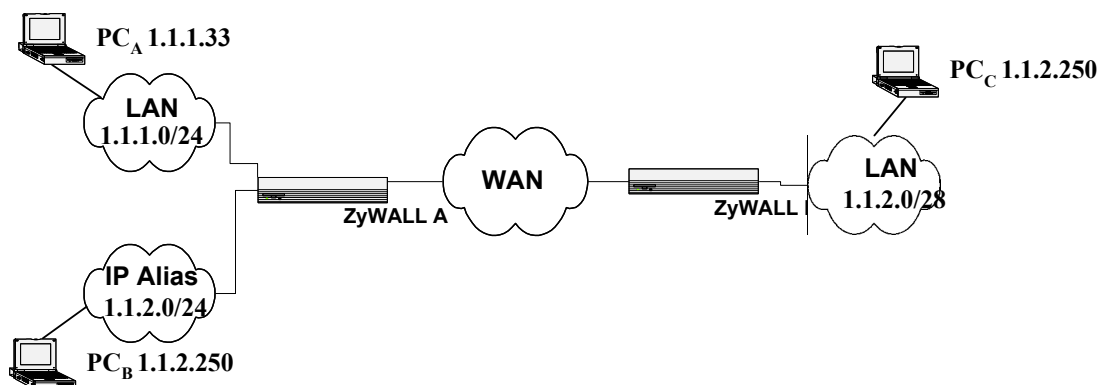

**Figure 1**

There is a limitation when you configure the VPN network policy to use any Local IP address. When you set the Local address to 0.0.0.0 and the Remote address to include any interface IP of the ZyWALL at the same time, it may cause the traffic related to remote management or DHCP between PCs and the ZyWALL to work incorrectly. This is because the traffic will all be encrypted and sent to WAN.

For example, you configure a VPN rule on the ZyWALL A as below:

Local IP Address Start= 1.1.1.1    End= 1.1.2.254  
 Remote IP Address Start= 1.1.2.240    End = 1.1.2.254

ZyWALL LAN IP = 1.1.1.10

ZyWALL LAN IP falls into the Local Address of this rule, when you want to manage the ZyWALL A from PC<sub>A</sub>, you will find that you cannot get a DHCP Client IP from the ZyWALL anymore. Even if you set your IP on PC<sub>A</sub> as static one, you cannot access the ZyWALL.

## Appendix 10 VPN rule swap limitation with VPN Client on XAuth

Example 1:

ZyWALL (WAN)----- VPN Client  
 (IP:1.1.1.1)                      (IP:1.1.1.2)

ZyWALL VPN Rule: Two IKE rule	
<p>➤ Dynamic IKE rule:</p> <p>Security Gateway: 0.0.0.0</p> <p>X-Auth: Server</p> <p>I. Policy one:</p> <ul style="list-style-type: none"> <li>- Name: "Rule_A"</li> <li>- Local: 192.168.2.0/24</li> <li>- Remote: 0.0.0.0</li> </ul>	<p>➤ Static IKE rule:</p> <p>Security Gateway: 1.1.1.2</p> <p>X-Auth: None</p> <p>I. Policy one:</p> <ul style="list-style-type: none"> <li>- Name: "Rule_B"</li> <li>- Local: 192.168.1.0/24</li> <li>- Remote: 1.1.1.2/32</li> </ul>

ZyXEL VPN Client
Security Gateway: 1.1.1.1
Phase one Authentication method: Preshare Key
Remote: 192.168.1.0/24

In example 1, user may wonder why ZyWALL swap to dynamic rule even VPN client only set authentication method as “Preshare Key” not “Preshare Key+XAuth”. The root cause is that currently ZyXEL VPN Client will send XAuth VID no matter what authentication mode that him set. Because of the XAuth VID, ZyWALL will swap to dynamic rule.

This unexpected rule swap result is a limitation of our design. For ZyWALL, when we got initiator’s XAuth VID in IKE Phase One period, we know initiator can support XAuth. To take account of security, we will judge that initiator want to do XAuth, and we will search one matched IKE Phase One rule with XAuth server mode as the top priority. To our rule swap scheme, we search static rule first then dynamic rule. In example 1, we will find the static rule, named “Rule\_B”, to build phase one tunnel at first. After finished IKE phase one negotiation, we known initiator want to do XAuth. Since Rule\_B has no XAuth server mode, we try to search another rule with correct IKE Phase One parameter and XAuth server mode. The search result will lead us to swap rule to dynamic rule, named “Rule\_A”. Thus to build VPN tunnel will fail by Phase Two local ip mismatch.

To avoid this scenario, the short-term solution is that we recommend user to set two IKE rule with different Phase One parameter. The long-term solution is that VPN Client needs to modify the XAuth VID behavior. VPN Client should not send XAuth VID when authentication method is “Preshare key”, but send XAuth VID when authentication method is “Preshare key+XAuth”.

**Annex A CI Command List**

Last Updated: 2005/08/01

Command Class List Table		
<a href="#">System Related Command</a>	<a href="#">Exit Command</a>	<a href="#">Device Related Command</a>
<a href="#">Ethernet Related Command</a>	<a href="#">POE Related Command</a>	<a href="#">PPTP Related Command</a>
<a href="#">AUX Related Command</a>	<a href="#">Configuration Related Command</a>	<a href="#">IP Related Command</a>
<a href="#">IPSec Related Command</a>	<a href="#">Bridge Related Command</a>	<a href="#">Bandwidth Management</a>
<a href="#">Firewall Related Command</a>	<a href="#">Certificate Management (PKI) Command</a>	<a href="#">mvZyXEL.com Command</a>
<a href="#">IDP Command</a>	<a href="#">Anti-Virus Command</a>	<a href="#">Anti-Spam Command</a>

Flag :

R: This command can be used in Router Mode

B: This command can be used in Bridge Mode

## System Related Command

[Home](#)

Command				Flag	Description
sys					
	adjtime			R + B	retrieve date and time from Internet
	cbuf				
		cnt			cbuf static
		display		R + B	display cbuf static
	callhist				
		display		R	display call history
		remove	<index>	R	remove entry from call history
	countrycode		[countrycode]	R + B	set country code
	date		[year month date]	R + B	set/display date
	debug			R + B	
		romfile		R + B	
			cert [0:reserve/1:erase]	R + B	erase all the certificates
			display	R + B	display romfile debug settings
			isp [0:reserve/1:erase]	R	erase the account and password of ISP
			prekey [0:reserve/1:reset]	R	reset the system IPSec pre-shared key
			profile [0:reserve/1:erase]	R + B	erase the accounts and passwords of 802.1X and XAUTH
			pwd [0:reserve/1:reset]	R + B	reset system password
			radius	R + B	erase Authentication and Accounting keys
			update [0:reserve/1:erase]	R + B	update romfile depend on current configuration
			wep [0:reserve/1:erase]	R + B	erase all WEP encryption keys
	domainname			R + B	display domain name
	edit		<filename>	R + B	edit a text file
	extraphnum			R	maintain extra phone numbers for outcalls
		add	<set 1-3> <1st phone num> [2nd phone num]	R	add extra phone numbers
		display		R	display extra phone numbers
		node	<num>	R	set all extend phone number to remote node <num>
		remove	<set 1-3>	R	remove extra phone numbers
		reset		R	reset flag and mask
	feature			R + B	display feature bit
	hostname		[hostname]	R + B	display system hostname



**ZyXEL Confidential**

	logs			R + B	
		category		R + B	
			access [0:none/1:log/2:alert/3:both]	R + B	record the access control logs
			attack [0:none/1:log/2:alert/3:both]	R + B	record and alert the firewall attack logs
			display	R + B	display the category setting
			error [0:none/1:log/2:alert/3:both]	R + B	record and alert the system error logs
			ipsec [0:none/1:log/2:alert/3:both]	R	record the access control logs
			ike [0:none/1:log/2:alert/3:both]	R	record the access control logs
			javablocked [0:none/1:log]	R + B	record the java etc. blocked logs
			mten [0:none/1:log]	R + B	record the system maintenance logs
			packetfilter [0:none/1:log]	R + B	record the packet filter logs
			pki [0:none/1:log/2:alert/3:both]	R	record the pki logs
			tcpreset [0:none/1:log]	R + B	record the tcp reset logs
			upnp [0:none/1:log]	R	record upnp logs
			urlblocked [0:none/1:log/2:alert/3:both]	R + B	record and alert the web blocked logs
			urlforward [0:none/1:log]	R + B	record web forward logs
		clear		R + B	clear log
		display	[access attack error ipsec ike java blocked mten packetfilter pki tcp reset urlblocked urlforward]	R + B	display all logs or specify category logs
		errlog		R + B	
			clear	R + B	display log error
			disp	R + B	clear log error
			online	R + B	turn on/off error log online display
		load		R + B	load the log setting buffer
		mail		R + B	
			alertAddr [mail address]	R + B	send alerts to this mail address
			display	R + B	display mail setting
			logAddr [mail address]	R + B	send logs to this mail address
			schedule display	R + B	display mail schedule
			schedule hour [0-23]	R + B	hour time to send the logs
			schedule minute [0-59]	R + B	minute time to send the logs
			schedule policy [0:full/1:hourly/2:daily/3:weekly/ 4:none]	R + B	mail schedule policy
			schedule week [0:sun/1:mon/2:tue/3:wed/4:thu/5 :fri/6:sat]	R + B	weekly time to send the logs
			server [domainName/IP]	R + B	mail server to send the logs
			subject [mail subject]	R + B	mail subject
		save		R + B	save the log setting buffer
		syslog		R + B	
			active [0:no/1:yes]	R + B	active to enable unix syslog
			display	R + B	display syslog setting
			facility [Local ID(1-7)]	R + B	log the messages to different files
			server [domainName/IP]	R + B	syslog server to send the logs
		updateSvrIP	<minute>	R + B	If there is one parameter <minute>, it will change the dns timer task timeout value. Otherwise, do dns resolve to find email log server and syslog server IP.

**ZyXEL Confidential**

		consolidate		R + B	
			switch <0:on 1:off>	R + B	active to enable log consolidation
			period	R + B	consolidation period (seconds)
			msglist	R + B	display the consolidated messages
		switch			
			bmlog <0:no 1:yes>	R + B	active to enable broadcast/multicast log
			display	R + B	display switch setting
			trilog <0:no 1:yes>	R + B	active to enable triangle route log
	mbuf			R + B	
		link	link	R + B	list system mbuf link
		pool	<id> [type][num]	R + B	list system mbuf pool
		status		R + B	display system mbuf status
		disp	<address>[1 0]	R + B	display mbuf status
		cnt		R + B	
			disp	R + B	display system mbuf count
			clear	R + B	clear system mbuf count
		debug	[on off]	R + B	
	mode	<router/bridge>		R + B	switch router and bridge mode
	pwderrtm		[minute]	R + B	Set or display the password error blocking timeout value.
	rn			R	
		load	<entry no.>	R	load remote node information
		disp	<entry no.>(0:working buffer)	R	display remote node information
		nat	<none sua full_feature>	R	config remote node nat
		nailup	<no yes>	R	config remote node nailup
		mtu	<value>	R	set remote node mtu
		save	[entry no.]	R	save remote node information
		pingcheck	[on off]	U + R	enable/disable WAN pingcheck
	smt			R + B	not support in this product
	stdio		[second]	R + B	change terminal timeout value
	time		[hour [min [sec]]]	R + B	display/set system time
	tos			R + B	
		display		R + B	display all runtime TOS
		listPerHost		R + B	display all host session count
		debug	[on off]	R + B	turn on or off TOS debug message
		sessPerHost	<number>	R + B	configure session per host value
		timeout		R + B	
			display	R + B	display all TOS timeout information
			icmp <idle timeout>	R + B	set idle timeout value
			igmp <idle timeout>	R + B	set idle timeout value
			tcpsyn <idle timeout>	R + B	set idle timeout value
			tcp <idle timeout>	R + B	set idle timeout value
			tcpfin <idle timeout>	R + B	set idle timeout value
			udp <idle timeout>	R + B	set idle timeout value
			gre <idle timeout>	R + B	set idle timeout value
			esp <idle timeout>	R + B	set idle timeout value
			ah <idle timeout>	R + B	set idle timeout value
			other <idle timeout>	R + B	set idle timeout value
		tempTOSDisplay		R + B	display temporal TOS records.
		tempTOSTimeout	[timeout value]	R + B	set/display temporal timeout value
	trcdisp	parse, brief,		R + B	monitor packets

**ZyXEL Confidential**

		disp			
	trclog			R + B	
	trcpacket			R + B	
	syslog			R + B	
		server	[destIP]	R + B	set syslog server IP address
		facility	<FacilityNo>	R + B	set syslog facility
		type	[type]	R + B	set/display syslog type flag
		mode	[on/off]	R + B	set syslog mode
	version			R + B	display RAS code and driver version
	view		<filename>	R + B	view a text file
	wdog			R + B	
		switch	[on/off]	R + B	set on/off wdog
		cnt	[value]	R + B	display watchdog counts value: 0-34463
	romreset			R + B	restore default romfile
	server				
		access	<telnet ftp web icmp snmp dns> <value>	R + B	set server access type
		load		R + B	load server information
		disp		R + B	display server information
		port	<telnet ftp web snmp> <port>	R + B	set server port
		save		R + B	save server information
		secureip	<telnet ftp web icmp snmp dns> <ip>	R + B	set server secure ip addr
		certificate	<https ssh> [certificate name]	R + B	set server certificate
		auth_client	<https> [on/off]	R + B	specifies whether the server authenticates the client
	fwnotify			R + B	
		load		R + B	load fwnotify entry from spt
		save		R + B	save fwnotify entry to spt
		url	<url>	R + B	set fwnotify url
		days	<days>	R + B	set fwnotify days
		active	<flag>	R + B	turn on/off fwnotify flag
		disp		R + B	display firmware notify information
		check		R + B	check firmware notify event
		debug	<flag>	R + B	turn on/off firmware notify debug flag
	cmgr			R + B	
		trace		R + B	
			disp <ch-name>	R + B	show the connection trace of this channel
			clear <ch-name>	R + B	clear the connection trace of this channel
		cnt	<ch-name>	R + B	show channel connection related counter
	socket			R + B	display system socket information
	filter			R + B	
		netbios		R + B	
			disp	R + B	display netbios filter status
			config <0:Between LAN and WAN, 1: Between LAN and DMZ, 2: Between WAN and DMZ, 3:IPSec passthrough, 4:Trigger Dial> <on/off>	R + B	config netbios filter
	roadrunner			R	
		debug	<level>	R	enable/disable roadrunner service 0: diable <default> 1: enable
		display	<iface name>	R	display roadrunner information

**ZyXEL Confidential**

					iface-name: enif0, wanif0
		restart	<iface name>	R	restart roadrunner
	ddns			R + B	
		debug	<level>	R + B	enable/disable ddns service
		display	<iface name>	R + B	display ddns information
		restart	<iface name>	R + B	restart ddns
		logout	<iface name>	R + B	logout ddns
	cpu			R + B	
		display		R + B	display CPU utilization
	upnp			R	
		active	[0:no/1:yes]	R	Activate or deactivate the saved upnp settings
		config	[0:deny/1:permit]	R	Allow users to make configuration changes. through UPnP
		display		R	display upnp information
		firewall	[0:deny/1:pass]	R	Allow UPnP to pass through Firewall.
		load		R	save upnp information
		reserve	[0:no/1:yes]	R	Reserve UPnP NAT rules in flash after system bootup.
		save		R	save upnp information

**Exit Command**[Home](#)

Command				Flag	Description
exit				R + B	exit smt menu

**Device Related Command**[Home](#)

Command				Flag	Description
dev					
	channel				
		drop	<channel_name>	R + B	drop channel
	dial		<node#>	R + B	dial to remote node

**Ethernet Related Command**[Home](#)

Command				Flag	Description
ether				R + B	
	config			R + B	display LAN configuration information
	driver			R + B	
		cnt		R + B	
			disp <name>	R + B	display ether driver counters
		ioctl	<ch_name>	R + B	Useless in this stage.
		status	<ch_name>	R + B	see LAN status
	version			R + B	see ethernet device type
	pkttest				
		disp			
			packet <level>	R + B	set ether test packet display level
			event <ch> [on off]	R + B	turn on/off ether test event display
		sap	[ch_name]	R + B	send sap packet
		arp	<ch_name> <ip-addr>	R + B	send arp packet to ip-addr
	debug				
		disp	<ch_name>	R + B	display ethernet debug information
		level	<ch_name> <level>	R + B	set the ethernet debug level level 0: disable debug log level 1:enable debug log (default)

**ZyXEL Confidential**

	edit			R + B	
		load	<ether no.>	R + B	load ether data from spt
		mtu	<value>	R + B	set ether data mtu
		speed	<speed>	R + B	set ether data speed
		save		R + B	save ether data to spt
	dynamicPort				
		dump		U+R+B	display the relation between physical port and channel.
		set	<port> <type>	U+R+B	set physical port belongs to which channel.
		spt		U+R+B	display channel setting stored in SPT.

**POE Related Command(All commands can only be used in Router Mode)**[Home](#)

Command				Description
poe				
	status		[ch name]	see poe status
	dial		<node>	dial a remote node
	drop		<node>	drop a pppoe call
	ether		[rfc 3com]	set /display pppoe ether type
	proxy	disp		Display PPPoE proxy client session table
		active	[on   off]	Turn on / off PPPoE proxy function
		debug	[on   off]	Turn on / off PPPoE proxy debug function
		time	<interval>	Set the time out interval, it's a count. Actual time is count * 5 seconds.
		init		Initialize PPPoE proxy client session table
		flush		Clear PPPoE proxy client session table

**PPTP Related Command (All commands can only be used in Router Mode)**[Home](#)

Command				Description
pptp				
	dial		<rn-name>	dial a remote node
	drop		<rn-name>	drop a remote node call
	tunnel		<tunnel id>	display pptp tunnel information

**AUX Related Command (All commands can only be used in Router Mode)**[Home](#)

Command				Description
aux				
	atring		<device name>	Command the AT command to the device.
	cnt			
		disp	<device name>	display aux counter information
		clear	<device name>	clear aux counter information
	drop		<device name>	disconnect
	init		<device name>	initialize aux channel
	mstatus		<device name>	display modem last call status
	mtype		<device name>	display modem type
	netstat		<device name>	prints upper layer packet information
	rate		<device name>	show tx rx rate
	redirect		<device name>	invalid
	signal		<device name>	show aux signal

**Configuration Related Command**

(All commands can be used in both Router Mode and Bridge Mode)

[Home](#)

Command	Description
---------	-------------

**ZyXEL Confidential**

config					The parameters of config are listed below.
edit	firewall	active <yes no>			Activate or deactivate the saved firewall settings
	custom -service <entry# >	name <string>			Configure selected custom-service with name = <string>
		ip-protocol   < icmp   tcp   udp   tcp/udp   user-defined>			Configure IP Protocol Type for selected custom-service
		port-range <start port> <end port>			When ip-protocol = “tcp   udp   tcp/udp “. configure port range for custom-service entry #. For single port configuration, start port equals to end port.
		user-defined-ip <1~65535 >			When ip-protocol = “user-defined”. Configure user defined IP protocol.
		icmp-type <0~255>			When ip-protocol = “icmp”, configure ICMP type.
		icmp-code <0~255>			When ip-protocol = “icmp”, configure ICMP code. This field is optional for ICMP.
retrieve	firewall				Retrieve current saved firewall settings
save	firewall				Save the current firewall settings
	custom -service <entry# >				Save the custom service entry specified by <entry#>
	all				Save all working SPT buffer into flash.
display	firewall				Displays all the firewall settings
		set <set#>			Display current entries of a set configuration; including timeout values, name, default-permit, and number of rules in the set.
		set <set#>	rule <rule#>		Display current entries of a rule in a set.
		attack			Display all the attack alert settings in PNC
		e-mail			Display all the e-mail settings in PNC
		?			Display all the available sub commands
	custom -service e				Display all configured custom services.
	custom -service e <entry #>				Display custom service <entry #>
edit	firewall	e-mail	mail-server <mail server IP>		Edit the mail server IP to send the alert
			return-addr		Edit the mail address for returning an email alert

			<e-mail address>		
			e-mail-to <e-mail address>		Edit the mail address to send the alert
			policy <full   hourly  daily   weekly>		Edit email schedule when log is full or per hour, day, week.
			day <sunday   monday   tuesday   wednesday   thursday   friday   saturday>		Edit the day to send the log when the email policy is set to Weekly
			hour <0~23>		Edit the hour to send the log when the email policy is set to daily or weekly
			minute <0~59>		Edit the minute to send to log when the email policy is set to daily or weekly
			Subject <mail subject>		Edit the email subject
		attack	send-alert <yes no>		Activate or deactivate the firewall DoS attacks notification emails
			block <yes no>		Yes: Block the traffic when exceeds the tcp-max-incomplete threshold
					No: Delete the oldest half-open session when exceeds the tcp-max-incomplete threshold
			block-minute <0~255>		Only valid when sets 'Block' to yes. The unit is minute
			minute-high <0~255>		The threshold to start to delete the old half-opened sessions to minute-low
			minute-low <0~255>		The threshold to stop deleting the old half-opened session
			max-incomplete-high <0~255>		The threshold to start to delete the old half-opened sessions to max-incomplete-low
			max-incomplete-low <0~255>		The threshold to stop deleting the half-opened session
			tcp-max-incomplete <0~255>		The threshold to start executing the block field
		set <set#>	name <desired name>		Edit the name for a set
			default-permit <forward block>		Edit whether a packet is dropped or allowed when it does not match the default set
			icmp-timeout <seconds>		Edit the timeout for an idle ICMP session before it is terminated
			udp-idle-timeout <seconds>		Edit the timeout for an idle UDP session before it is terminated
			connection-timeout <seconds>		Edit the wait time for the SYN TCP sessions before it is terminated
			fin-wait-timeout <seconds>		Edit the wait time for FIN in concluding a TCP session before it is terminated

**ZyXEL Confidential**

			tcp-idle-timeout <seconds>		Edit the timeout for an idle TCP session before it is terminated
			pnc <yes no>		PNC is allowed when 'yes' is set even there is a rule to block PNC
			log <yes no>		Switch on/off sending the log for matching the default permit
			logone <yes no>		Switch on/off for one packet that create just one log message.
			rule <rule#>	action <permit   drop   reject>	Edit whether a packet is permitted, dropped or rejected when it matches this rule
				name <string>	Edit/Update rule name with <string>
				active <yes no>	Edit whether a rule is enabled or not
				protocol <0~255>	Edit the protocol number for a rule. 1=ICMP, 6=TCP, 17=UDP...
				log <none match not-match both>	Sending a log for a rule when the packet none matches not match both the rule
				alert <yes no>	Activate or deactivate the notification when a DoS attack occurs or there is a violation of any alert settings. In case of such instances, the function will send an email to the SMTP destination address and log an alert.
				srcaddr-single <ip address>	Select and edit a source address of a packet which complies to this rule
				srcaddr-subnet <ip address> <subnet mask>	Select and edit a source address and subnet mask if a packet which complies to this rule.
				srcaddr-range <start ip address> <end ip address>	Select and edit a source address range of a packet which complies to this rule.
				destaddr-single <ip address>	Select and edit a destination address of a packet which complies to this rule
				destaddr-subnet <ip address> <subnet mask>	Select and edit a destination address and subnet mask if a packet which complies to this rule.
				destaddr-range <start ip address> <end ip address>	Select and edit a destination address range of a packet which complies to this rule.
				tcp destport-single <port#>	Select and edit the destination port of a packet which comply to this rule. For non-consecutive port numbers, the user may repeat this command line to enter the multiple port numbers.
				tcp destport-range <start port#> <end port#>	Select and edit a destination port range of a packet which comply to this rule.
				udp destport-single <port#>	Select and edit the destination port of a packet which comply to this rule. For non-consecutive port numbers, users may repeat this command line to enter the multiple port numbers.
				udp destport-range <start port#> <end port#>	Select and edit a destination port range of a packet which comply to this rule.
				desport-custom <desired custom port name>	Type in the desired custom port name
				custom-ip <desired custom service name>	Type in the desired User Defined IP Protocol custom service.
				custom-icmp <desired custom service name>	Type in the desired ICMP custom service



**ZyXEL Confidential**

delete	firewall	e-mail			Remove all email alert settings
		attack			Reset all alert settings to defaults
		set <set#>			Remove a specified set from the firewall configuration
		set <set#>	rule <rule#>		Remove a specified rule in a set from the firewall configuration
insert	firewall	e-mail			Insert email alert settings
		attack			Insert attack alert settings
		set <set#>			Insert a specified rule set to the firewall configuration
		set <set#>	rule <rule#>		Insert a specified rule in a set to the firewall configuration
cli					Display the choices of command list.

## IP Related Command

[Home](#)

Command				Flag	Description
ip					
	address		[addr]		display host ip address
	alias		<iface>	R	alias iface
	aliasdis		<0 1>	R	disable alias
	alg				
		disp			Show ALG enable disable status
		enable	<ALG FTP ALG H323 ALG SIP>		Enable ALG command
		disable	<ALG FTP ALG H323 ALG SIP>		Disable ALG command
		siptimeout	<timeout in second> or 0 for no timeout		Configure SIP timeout command
	arp				
		status	<iface>		display ip arp status
	dhcp		<iface>	R	
		client		R	
			release	R	release DHCP client IP
			renew	R	renew DHCP client IP
			release <entry num>	R	release specific entry of the dhcp server pool
		status	[option]	R	show dhcp status
	dns			R	
		query		R	
			address <ipaddr> [timeout]	R	resolve ip-addr to name
			Debug <num>	R	enable dns debug value
			Name <hostname> [timeout]	R	resolve name to multiple IP addresses
			Status	R	display dns query status
			Table	R	display dns query table
		server	<primary> [secondary] [third]	R	set dns server
		stats		R	
			Clear	R	clear dns statistics
			Disp	R	display dns statistics
		table		R	display dns table
		default	<ip>	R	Set default DNS server
		system			
			display		display dns system information
			edita <record idx> <name> <0:FQDN 1:wildcard> <0:from ISP group 1:user defined> <isp group idx ip address>		edit dns A record
			editns <record idx> <*> domain name>		edit dns NS record

			<0:from ISP 1:user defined(public) 2: user defined(private)> <isp group idx dns server ip>		
			inserta <before record idx -1:new> <name> <0:FQDN 1:wildcard> <0:from ISP group 1:user defined> <isp group idx ip address>		insert dns A record
			insertns <before record idx -1:new> <*<domain name> <0:from ISP 1:user defined(public) 2: user defined(private)> <isp group idx dns server ip>		insert dns NS record
			movea <record idx> <record idx>		move dns A record
			movens <record idx> <record idx>		move dns NS record
			dela <record idx>		delete DNS A record
			delns <record idx>		delete DNS NS record
		system cache			
			disp <0:none 1:name 2:type 3:IP 4:refCnt 5:ttl> [0:increase 1:decrease]		display DNS cache table
			flush		flush DNS cache
			negaperiod <second(60 ~ 3600)>		set negative cache period
			negative <0: disable 1: enable>		enable/disable dns negative cache
			positive <0: disable 1: enable>		enable/disable dns positive cache
			ttl <second(60 ~ 3600)>		set positive cache maximum ttl
	Httpd			R + B	
		debug	[on/off]	R + B	set http debug flag
	icmp				
		status		R + B	display icmp statistic counter
		discovery	<iface> [on/off]	R + B	set icmp router discovery flag
	ifconfig		[iface] [ipaddr] [broadcast <addr>  mtu <value> dynamic]	R + B	configure network interface
	ping		<hostid>	R + B	ping remote host
	route			R	
		status	[if]	R	display routing table
		add	<dest_addr default>[/<bits>] <gateway> [<metric>]	R	add route
		addiface	<dest_addr default>[/<bits>] <gateway> [<metric>]	R	add an entry to the routing table to iface
		drop	<host addr> [/<bits>]	R	drop a route
	status			R + B	display ip statistic counters
	stroute			R	
		display	[rule #   buf]	R	display rule index or detail message in rule.
		load	<rule #>	R	load static route rule in buffer
		save		R	save rule from buffer to spt.
		config		R	
			name <site name>	R	set name for static route.
			destination <dest addr>[/<bits>] <gateway> [<metric>]	R	set static route destination address and gateway.
			mask <IP subnet mask>	R	set static route subnet mask.
			gateway <IP address>	R	set static route gateway address.
			metric <metric #>	R	set static route metric number.
			private <yes no>	R	set private mode.
			active <yes no>	R	set static route rule enable or disable.
	udp			R + B	

**ZyXEL Confidential**

		status		R + B	display udp status
	tcp			R + B	
		status	[tcb] [<interval>]	R + B	display TCP statistic counters
	telnet		<host> [port]	R + B	execute telnet client command
	tracert		<host> [ttl] [wait] [queries]	R + B	send probes to trace route of a remote host
	xparent			R	
		join	<iface1> [<iface2>]	R	join iface2 to iface1 group
		break	<iface>	R	break iface to leave ipxparent group
	urlfilter			R + B	
		customize		R + B	
			display	R + B	display customize action flags
			actionFlags [filterList/disableAllExceptTrusted/unblock RWFToTrusted/keywordBlock/fullPath/cas eInsensitive/fileName][enable/disable]	R + B	set action flags
			logFlags [type(1-3)][enable/disable]	R + B	set log flags
			add [string] [trust/untrust/keyword]	R + B	add url string
			delete [string] [trust/untrust/keyword]	R + B	delete url string
			reset	R + B	clear all information
		general		R + B	
			enable	R + B	enable/disable url filter function
			display	R + B	display content filter's general setting
			webFeature	R + B	[block/nonblock] [activex/java/cookei/webproxy]
			timeOfDay[always/hh:mm] [hh:mm]	R + B	set block time
			exemptZone display	R + B	display exemptzone information
			exemptZone actionFlags [type(1-3)][enable/disable]	R + B	set action flags
			exemptZone add [ip1] [ip2]	R + B	add exempt range
			exemptZone delete [ip1] [ip2]	R + B	delete exempt range
			exemptZone reset	R + B	clear exemptzone information
			reset	R + B	reset content filter's general setting
		webControl		R + B	
			enable	R + B	enable cbr_filter
			display	R + B	display cbr_filter's setting
			logAndBlock [log/block/both]	R + B	set log or block on matched web site
			category	R + B	set blocked categories
			serverList display	R + B	display current cbr_filter servers
			serverList refresh	R + B	refresh cbr_filter servers
			queryURL [url][Server/localCache]	R + B	query url need to block or forward according the database on server or local cache
			cache display	R + B	display the local cache entries
			cache delete [entrynum/All]	R + B	delete the local cache entries
			cache timeout [hour]	R + B	Set timeout value of cache entries
			blockonerror [log/block][on/off]	R + B	choose log or block when server is unavailable
			unratedwebsite[block/log][on/off]		choose log or block for unrated web site
			waitingTime [sec]	R + B	set waiting time for server
			reginfo display	R + B	display the license key with cerberian
			reginfo refresh	R + B	Check whether device had been registered and write the original license key to flash

**ZyXEL Confidential**

			zssw	R + B	change the zssw's URL
	tredir			R	
		failcount	<count>	R	set tredir failcount
		partner	<ipaddr>	R	set tredir partner
		target	<ipaddr>	R	set tredir target
		timeout	<timeout>	R	set tredir timeout
		checktime	<period>	R	set tredir checktime
		active	<on off>	R	set tredir active
		save		R	save tredir information
		disp		R	display tredir information
		debug	<value>	R	set tredir debug value
	rpt			R + B	
		active	[0:lan 1:dmz][1:yes 0:no]	R + B	active report
		start		R + B	start report
		stop		R + B	stop report
		url	[num]	R + B	top url hit list
		ip	[num]	R + B	top ip addr list
		srv	[num]	R + B	top service port list
	dropIcmp		[0   1]	R + B	to drop ICMP fragment packets
	nat			R	
		period	[period]	R	set nat timer period
		port	[port]	R	set nat starting external port number
		checkport		R	verify all server tables are valid
		timeout		R	
			gre [timeout]	R	set nat gre timeout value
			iamt [timeout]	R	set nat iamt timeout value
			generic [timeout]	R	set nat generic timeout value
			reset [timeout]	R	set nat reset timeout value
			tcp [timeout]	R	set nat tcp timeout value
			tcpother [timeout]	R	set nat tcp other timeout value
			udp [port] <value>	R	set nat udp timeout value of specific port
		update		R	create nat system information from spSysParam
		iamt	<iface>	R	display nat iamt information
		iface	<iface>	R	show nat status of an interface
		lookup	<rule set>	R	display nat lookup rule
		new-lookup	<rule set>	R	display new nat lookup rule
		loopback	[on off]	R	turn on/off nat loopback flag
		reset	<iface>	R	reset nat table of an iface
		server		R	
			disp	R	display nat server table
			load <set id>	R	load nat server information from ROM
			save	R	save nat server information to ROM
			clear <set id>	R	clear nat server information
			edit active <yes no>	R	set nat server edit active flag
			edit svrport <start port> [end port]	R	set nat server server port
			edit intport <start port> [end port]	R	set nat server forward port
			edit remotehost <start ip> [end ip]	R	set nat server remote host ip
			edit leasetime [time]	R	set nat server lease time
			edit rulename [name]	R	set nat server rule name
			edit forwardip [ip]	R	set nat server server ip
			edit protocol [protocol id]	R	set nat server protocol
			edit clear	R	clear one rule in the set

		service		R	
			irc [on/off]	R	turn on/off irc flag
			xboxlive [on/off]	R	turn on/off xboxlive flag
			aol [on/off]	R	Turn on/off aol flag
		resetport		R	reset all nat server table entries
		incikeport	<iface>[on/off]	R	turn on/off increase ike port flag
		session	[session per host]	R	set nat session per host value
		deleteslot	<iface> <slot>	R	delete specific slot of iface
		routing	[0:LAN 1:DMZ] [0:no 1:yes]	R	set NAT routing attributes
	igmp			R	
		debug	[level]	R	set igmp debug level
		forwardall	[on/off]	R	turn on/off igmp forward to all interfaces flag
		querier	[on/off]	R	turn on/off igmp stop query flag
		iface		R	
			<iface> grouptm <timeout>	R	set igmp group timeout
			<iface> interval <interval>	R	set igmp query interval
			<iface> join <group>	R	join a group on iface
			<iface> leave <group>	R	leave a group on iface
			<iface> query	R	send query on iface
			<iface> rsptime [time]	R	set igmp response time
			<iface> start	R	turn on of igmp on iface
			<iface> stop	R	turn off of igmp on iface
			<iface> ttl <threshold>	R	set ttl threshold
			<iface> v1compat [on/off]	R	turn on/off v1compat on iface
		robustness	<num>	R	set igmp robustness variable
		status		R	dump igmp status

## IPSec Related Command (All commands can only be used in Router Mode)

[Home](#)

Command				Description
ipsec				
	debug	type	<0:Disable   1:Original on/off   2:IKE on/off   3: IPsec [SPI] on/off   4:XAUTH on/off   5:CERT on/off   6: All>	Turn on/off trace for IPsec debug information
		level	<0:None   1:User   2:Low   3:High>	Set the debug level. Higher number means more detailed.
		display		Show debugging information, include type and level.
	route	dmz	<on/off>	After a packet is IPsec processed and will be sent to DMZ side, this switch is to control if this packet can be applied IPsec again.
				Remark: Only supported in ZyWALL100
		lan	<on/off>	After a packet is IPsec processed and will be sent to LAN side, this switch is to control if this packet can be applied IPsec again.
				Remark: Command available since 3.50(WA.3)
		wan	<on/off>	After a packet is IPsec processed and will be sent to WAN side, this switch is to control if this packet can be applied IPsec again.
	show_run time	sa		display runtime phase 1 and phase 2 SA information
		spd		When a dynamic rule accepts a request and a tunnel is established, a runtime SPD is created according to

**ZyXEL Confidential**

				peer local IP address. This command is to show these runtime SPD.
		List		Display brief runtime phase 1 and phase 2 SA information
	switch	<on off>		As long as there exists one active IPSec rule, all packets will run into IPSec process to check SPD. This switch is to control if a packet should do this. If it is turned on, even there exists active IPSec rules, packets will not run IPSec process.
	timer	chk_conn.	<0~255>	- Adjust auto-timer to check if any IPsec connection has “only outbound traffic but no inbound traffic” for certain period. If yes, system will disconnect it.
				- Interval is in minutes
				- Default is 2 minuets
				- 0 means never timeout
		update_peer	<0~255>	- Adjust auto-timer to update IPSec rules which use domain name as the secure gateway IP.
				- Interval is in minutes
				- Default is 30 minutes
				- 0 means never update
		chk_input	<0~255>	- Adjust input timer to check if any IPSec connection has no inbound traffic for a certain period. If yes, system will disconnect it.
				- Interval is in minutes
				- Default is 2 minuets
				- 0 means never timeout
	updatePeerIp			Force system to update IPSec rules which use domain name as the secure gateway IP right away.
	dial	<rule index> <policy index>		Initiate IPSec rule <#> policy <#> from ZyWALL box
	ikeDisplay	<rule #>		Display IKE rule #, if no rule number assigned, this command will show current working buffer. NOTE: If working buffer is null, it will show error messages. Please ADD or EDIT an IKE rule before display.
	ikeAdd			Create a working buffer for IKE rule.
	ikeEdit	<rule #>		Edit an existing IKE rule #
	ikeSave			Save working buffer of IKE rule to romfile.
	ikeList			List all IKE rules
	ikeDelete	<rule #>		Delete IKE rule #
	ikeConfig	name	<string>	Set rule name (max length is 31)
		negotiationMode	<0:Main   1:Aggressive>	Set negotiation mode
		natTraversal	<Yes  No>	Enable NAT traversal or not.
		multiPro	<Yes No>	Enable multiple proposals in IKE or not
		lclDType	<0:IP   1:DNS   2:Email>	Set local ID type
		lclDContent	<string>	Set local ID content
		myIpAddr	<IP address>	Set my IP address
		peerIdType	<0:IP   1:DNS   2:Email>	Set peer ID type
		peerIdContent	<string>	Set peer ID content
		secureGwAddr	<IP address   Domain name>	Set secure gateway address or domain name
		authMethod	<0:PreSharedKey   1:RSASignature   2:preShare Key+XAUTH   3:RSASignature+XAUTH>	Set authentication method in phase 1 in IKE

**ZyXEL Confidential**

		preShareKey	<ASCII   0xHEX>	Set pre shared key in phase 1 in IKE
		certificate	<certificate name>	Set certificate file if using RSA signature as authentication method.
		encryAlgo	<0:DES   1:3DES   2:AES>	Set encryption algorithm in phase 1 in IKE
		authAlgo	<0:MD5   1:SHA1>	Set authentication algorithm in phase 1 in IKE
		saLifeTime	<seconds>	Set sa life time in phase 1 in IKE
		keyGroup	<0:DH1   1:DH2>	Set key group in phase 1 in IKE
		xauth	type <0:Client Mode   1:Server Mode>	Set client or server mode.
			username <name>	Set xauth user name
			password <password>	Set xauth password
			radius <username> <password>	Set radius username and password
	ipsecDisplay	<rule #>		Display IPSec rule #, if no rule number assigned, this command will show current working buffer. NOTE: If working buffer is null, it will show error messages. Please ADD or EDIT an IPSec rule before display.
	ipsecAdd			Create a working buffer for IPSec rule.
	ipsecEdit	<rule #>		Edit IPSec rule #
	ipsecSave			Save working buffer of IPSec rule to romfile.
	ipsecList			List all IPSec rules
	ipsecDelete	<rule #>		Delete IPSec rule #
	ipsecConfig	name	<string>	Set rule name. (max length is 31)
		active	<Yes   No>	Set active or not
		saIndex	<index>	Bind to which IKE rule.
		multiPro	<Yes   No>	Enable multiple proposals in IPSec or not
		nailUp	<Yes   No>	Enable nailed-up or not
		activeProtocol	<0:AH   1:ESP>	Set active protocol in IPSec
		encryAlgo	<0:Null   1:DES   2:3DES   3:AES>	Set encryption algorithm in IPSec
		encryKeyLen	<0:128   1:192   2:256>	Set encryption key length in IPSec
		authAlgo	<0:MD5   1:SHA1>	Set authentication algorithm in IPSec
		saLifeTime	<seconds>	Set sa life time in IPSec
		encap	<0:Tunnel   1:Transport>	set encapsulation in IPSec
		pfs	<0:None   1:DH1   2:DH2>	set pfs in phase 2 in IPSec
		antiReplay	<Yes   No>	Set antireplay or not
		controlPing	<Yes No>	Enable control ping or not
		logControlPing	<Yes No>	Enable logging control ping events or not
		controlPingAddr	<IP>	Set control ping address
		protocol	<1:ICMP   6:TCP   17:UDP>	Set protocol
		lcAddrType	<0:single   1:range   2:subnet>	Set local address type
		lcAddrStart	<IP>	Set local start address
		lcAddrEndMask	<IP>	Set local end address or mask
		lcPortStart	<port>	Set local start port
		lcPortEnd	<port>	Set local end port
		rmAddrType	<0:single   1:range   2:subnet>	Set remote address type
		rmAddrStart	<IP>	Set remote start address
		rmAddrEndMask	<IP>	Set remote end address or mask
		rmPortStart	<port>	Set remote start port
		rmPortEnd	<port>	Set remote end port

**ZyXEL Confidential**

	policyList			List all IPSec policies
	manualDisplay	<rule #>		Display manual rule #
	manualAdd			Add manual rule
	manualEdit	<rule #>		Edit manual rule #
	manualSave			Save IPSec rules
	manualList			List all IPSec rule
	manualDelete	<rule #>		Delete IPSec rule #
	manualConfig	name	<string>	Set rule name
		active	<Yes   No>	Set active or not
		myIpAddr	<IP address>	Set my IP address
		secureGwAddr	<IP address>	Set secure gateway
		protocol	<1:ICMP   6:TCP   17:UDP>	Set protocol
		lcAddrType	<0:single   1:range   2:subnet>	Set local address type
		lcAddrStart	<IP>	Set local start address
		lcAddrEndMask	<IP>	Set local end address or mask
		lcPortStart	<port>	Set local start port
		lcPortEnd	<port>	Set local end port
		rmAddrType	<0:single   1:range   2:subnet>	Set remote address type
		rmAddrStart	<IP>	Set remote start address
		rmAddrEndMask	<IP>	Set remote end address or mask
		rmPortStart	<port>	Set remote start port
		rmPortEnd	<port>	Set remote end port
		activeProtocol	<0:AH   1:ESP>	Set active protocol in manual
		ah	encap <0:Tunnel   1:Transport>	Set encapsulation in ah in manual
			spi <decimal>	Set spi in ah in manual
			authAlgo <0:MD5   1:SHA1>	Set authentication algorithm in ah in manual
			authKey <string>	Set authentication key in ah in manual
		esp	encap <0:Tunnel   1:Transport>	Set encapsulation in esp in manual
			spi <decimal>	Set spi in esp in manual
			encryAlgo <0:Null   1:DES   2:3DES>	Set encryption algorithm in esp in manual
			encryKey <string>	Set encryption key in esp in manual
			authAlgo <0:MD5   1:SHA1>	Set authentication algorithm in esp in manual
			authKey < string>	Set authentication key in esp in manual
	manualPolicyList			List all manual policy
	swSkipOverlapIp		<on off>	<ul style="list-style-type: none"> <li>- When a VPN rule with remote range overlaps with local range, the switch decides if a local to local packet should apply this rule.</li> <li>- Default value is “off” which means “no skip”.</li> </ul>
	adjTcpMss		<off auto user defined value>	<ul style="list-style-type: none"> <li>- After a tunnel is established, system will automatically adjust TCP MSS.</li> <li>- After all tunnels are drops, the MSS will adjust to the original value.</li> <li>- The default value is auto.</li> </ul>
	Drop		<policy index>	Drop a active tunnel.



Firewall Related Command (All command can be used in both Router Mode and Bridge Mode) [Home](#)

Command					Description
sys	Firewa ll				
		acl			
			disp		Display specific ACL set # rule #, or all ACLs.
		active	<yes no>		Active firewall or deactivate firewall
		clear			Clear firewall log
		cnt			
			disp		Display firewall log type and count.
			clear		Clear firewall log count.
		disp			Display firewall log
		online			Set firewall log online.
		dynamic rule			
			display		Display firewall dynamic rules
		tcpreset			
			reset		Set TCP reset sending on/off.
			reset 113		Set TCP reset sending for port 113 on/off.
			display		Display TCP reset sending setting.
		dos			
			smtp		Set SMTP DoS defender on/off
			display		Display SMTP DoS defender setting.
			ignore		Set if firewall ignore DoS in lan/wan/dmz/wlan
		ignore			
			triangle		Set if firewall ignore triangle route in lan/wan/dmz/wlan
		schedule			
			load [ set # rule #]		Load firewall ACL schedule by rule.
			display		Display ACL schedule in buffer.
			save		Save buffer date and update runtime firewall ACL rule.
			week		
				monday [on/off]	Set schedule on or off by day – Monday.
				tuesday [on/off]	Set schedule on or off by day – Tuesday.
				wednesday [on/off]	Set schedule on or off by day – Wednesday.
				thursday [on/off]	Set schedule on or off by day – Thursday.
				friday [on/off]	Set schedule on or off by day – Friday.
				saturday [on/off]	Set schedule on or off by day – Saturday.
				sunday [on/off]	Set schedule on or off by day – Sunday.
				allweek [on/off]	Quick set schedule on or off by week.
			timeOfDay [always/hh:mm]		Set firewall ACL schedule block time of day.

Certificate Management (PKI) Command  
(All commands can be used in both Router Mode and Bridge Mode)[Home](#)

Command				Description
certificates				
	my_certificate			
		create		
			selfsigned <name> <subject> [key size]	Create a self-signed local host certificate. <name> specifies a descriptive name for the generated certificate. <subject> specifies a subject name (required) and alternative name (required). The format is "subject-name-dn; {ip,dns,email}=value". If the name contains spaces, please put it in quotes. [key size] specifies the key size. It has to be an integer from 512 to 2048. The default is 1024 bits.
			request <name> <subject> [key size]	Create a certificate request and save it to the router for later manual enrollment. <name> specifies a descriptive name for the generated certification request. <subject> specifies a subject name (required) and alternative name (required). The format is "subject-name-dn; {ip,dns,email}=value". If the name contains spaces, please put it in quotes. [key size] specifies the key size. It has to be an integer from 512 to 2048. The default is 1024 bits.
			scep_enroll <name> <CA addr> <CA cert> <auth key> <subject> [key size]	Create a certificate request and enroll for a certificate immediately online using SCEP protocol. <name> specifies a descriptive name for the enrolled certificate. <CA addr> specifies the CA server address. <CA cert> specifies the name of the CA certificate. <auth key> specifies the key used for user authentication. If the key contains spaces, please put it in quotes. To leave it blank, type "". <subject> specifies a subject name (required) and alternative name (required). The format is "subject-name-dn; {ip,dns,email}=value". If the name contains spaces, please put it in quotes. [key size] specifies the key size. It has to be an integer from 512 to 2048. The default is 1024 bits.
			cmp_enroll <name> <CA addr> <CA cert> <auth key> <subject> [key size]	Create a certificate request and enroll for a certificate immediately online using CMP protocol. <name> specifies a descriptive name for the enrolled certificate. <CA addr> specifies the CA server address. <CA cert> specifies the name of the CA certificate. <auth key> specifies the id and key used for user authentication. The format is "id:key". To leave the id and key blank, type ":". <subject> specifies a subject name (required) and alternative name (required). The format is "subject-name-dn; {ip,dns,email}=value". If the name contains spaces, please put it in quotes. [key size] specifies the key size. It has to be an integer from 512 to 2048. The default is 1024 bits.
		import [name]		Import the PEM-encoded certificate from stdin. [name] specifies the descriptive name (optional) as which the imported certificate is to be saved. For my certificate importation to be successful, a certification request corresponding to the imported certificate must already exist on ZyWALL. After the importation, the certification request will automatically be deleted. If a descriptive name is not specified for the imported certificate, the certificate will adopt the descriptive name of the certification request.
		export <name>		Export the PEM-encoded certificate to stdout for user to copy and paste. <name> specifies the name of the certificate to be exported.
		view <name>		View the information of the specified local host certificate. <name> specifies the name of the certificate to be viewed.
		verify <name> [timeout]		Verify the certification path of the specified local host certificate. <name> specifies the name of the certificate to be verified.

				[timeout] specifies the timeout value in seconds (optional). The default timeout value is 20 seconds.
		delete <name>		Delete the specified local host certificate. <name> specifies the name of the certificate to be deleted.
		list		List all my certificate names and basic information.
		rename <old name> <new name>		Rename the specified my certificate. <old name> specifies the name of the certificate to be renamed. <new name> specifies the new name as which the certificate is to be saved.
		def_selfsigned [name]		Set the specified self-signed certificate as the default self-signed certificate. [name] specifies the name of the certificate to be set as the default self-signed certificate. If [name] is not specified, the name of the current self-signed certificate is displayed.
	ca_trusted			
		import <name>		Import the PEM-encoded certificate from stdin. <name> specifies the name as which the imported CA certificate is to be saved.
		export <name>		Export the PEM-encoded certificate to stdout for user to copy and paste. <name> specifies the name of the certificate to be exported.
		view <name>		View the information of the specified trusted CA certificate. <name> specifies the name of the certificate to be viewed.
		verify <name> [timeout]		Verify the certification path of the specified trusted CA certificate. <name> specifies the name of the certificate to be verified. [timeout] specifies the timeout value in seconds (optional). The default timeout value is 20 seconds.
		delete <name>		Delete the specified trusted CA certificate. <name> specifies the name of the certificate to be deleted.
		list		List all trusted CA certificate names and basic information.
		rename <old name> <new name>		Rename the specified trusted CA certificate. <old name> specifies the name of the certificate to be renamed. <new name> specifies the new name as which the certificate is to be saved.
		crl_issuer <name> [on off]		Specify whether or not the specified CA issues CRL. <name> specifies the name of the CA certificate. [on off] specifies whether or not the CA issues CRL. If [on off] is not specified, the current crl_issuer status of the CA.
	remote_trusted			
		import <name>		Import the PEM-encoded certificate from stdin. <name> specifies the name as which the imported remote host certificate is to be saved.
		export <name>		Export the PEM-encoded certificate to stdout for user to copy and paste. <name> specifies the name of the certificate to be exported.
		view <name>		View the information of the specified trusted remote host certificate. <name> specifies the name of the certificate to be viewed.
		verify <name> [timeout]		Verify the certification path of the specified trusted remote host certificate. <name> specifies the name of the certificate to be verified. [timeout] specifies the timeout value in seconds (optional). The default timeout value is 20 seconds.
		delete <name>		Delete the specified trusted remote host certificate. <name> specifies the name of the certificate to be deleted.
		list		List all trusted remote host certificate names and basic information.
		rename <old name> <new name>		Rename the specified trusted remote host certificate. <old name> specifies the name of the certificate to be renamed. <new name> specifies the new name as which the certificate is to be saved.

	dir_service			
		add <name> <addr[:port]> [login:pswd]		Add a new directory service. <name> specifies a descriptive name as which the added directory server is to be saved. <addr[:port]> specifies the server address (required) and port (optional). The format is "server-address[:port]". The default port is 389. [login:pswd] specifies the login name and password, if required. The format is "[login:password]".
		delete <name>		Delete the specified directory service. <name> specifies the name of the directory server to be deleted.
		view <name>		View the specified directory service. <name> specifies the name of the directory server to be viewed.
		edit <name> <addr[:port]> [login:pswd]		Edit the specified directory service. <name> specifies the name of the directory server to be edited. <addr[:port]> specifies the server address (required) and port (optional). The format is "server-address[:port]". The default port is 389. [login:pswd] specifies the login name and password, if required. The format is "[login:password]".
		list		List all directory service names and basic information.
		rename <old name> <new name>		Rename the specified directory service. <old name> specifies the name of the directory server to be renamed. <new name> specifies the new name as which the directory server is to be saved.
	cert_manager			
		reinit		Reinitialize the certificate manager.

## Bandwidth management Related Command

(All commands can be used in both Router Mode and Bridge Mode)

[Home](#)

Command					Description
bm	interface	lan	enable	<bandwidth xxx>	Enable bandwidth management in LAN with bandwidth xxx bps. If the user doesn't set the bandwidth, the default value is 100Mbps.
				<wrr pr>	Select fairness-based(WRR) or priority-based(PRR) mechanism. the default value is fairness-based.
				<efficient>	Enable work-conserving feature.
			disable		Disable bandwidth management in LAN
		wan	enable	<bandwidth xxx>	Enable bandwidth management in WAN with bandwidth xxx bps. If the user doesn't set the bandwidth, the default value is 100Mbps.
				<wrr pr>	Select fairness-based(WRR) or priority-based(PRR) mechanism. the default value is fairness-based.
				<efficient>	Enable work-conserving feature.
			disable		Disable bandwidth management in WAN
		dmz	enable	<bandwidth xxx>	Enable bandwidth management in DMZ with bandwidth xxx bps. If the user doesn't set the bandwidth, the default value is 100Mbps.
				<wrr pr>	Select fairness-based(WRR) or priority-based(PRR) mechanism. the default value is fairness-based.
				<efficient>	Enable work-conserving feature.
			disable		Disable bandwidth management in DMZ

**ZyXEL Confidential**

		wlan	enable	<bandwidth xxx>		Enable bandwidth management in WLAN with bandwidth xxx bps. If the user doesn't set the bandwidth, the default value is 100Mbps.
				<wrr pr>		Select fairness-based(WRR) or priority-based(PRR) mechanism. the default value is fairness-based.
				<efficient>		Enable work-conserving feature.
			disable			Disable bandwidth management in WLAN
	class	lan	add #	bandwidth xxx	<name xxx>	Add a class with bandwidth xxx bps in LAN. The name is for users' information.
					<priority x>	Set the class' priority. The range is between 0 (the lowest) to 7 (the highest). The default value is 3.
					<borrow on off>	The class can borrow bandwidth from its parent class when the borrow is set on, and vice versa. The default value is off.
			mod #	<bandwidth xxx>		Modify the parameters of the class in LAN. The bandwidth is unchanged if the user doesn't set a new value.
				<name xxx>		Set the class' name.
				<priority x>		Set the class' priority. The range is between 0 (the lowest) to 7 (the highest). The priority is unchanged if the user doesn't set a new value.
				<borrow on off>		The class can borrow bandwidth from its parent class when the borrow is set on, and vice versa. The borrow is unchanged if the user doesn't set a new value.
			del #			Delete the class # and its filter and all its children class and their filters in LAN.
		wan	add #	bandwidth xxx	<name xxx>	Add a class with bandwidth xxx bps in WAN. The name is for users' information.
					<priority x>	Set the class' priority. The range is between 0 (the lowest) to 7 (the highest). The default value is 3.
					<borrow on off>	The class can borrow bandwidth from its parent class when the borrow is set on, and vice versa. The default value is off.
			mod #	<bandwidth xxx>		Modify the parameters of the class in WAN. The bandwidth is unchanged if the user doesn't set a new value.
				<name xxx>		Set the class' name.
				<priority x>		Set the class' priority. The range is between 0 (the lowest) to 7 (the highest). The priority is unchanged if the user doesn't set a new value.
				<borrow on off>		The class can borrow bandwidth from its parent class when the borrow is set on, and vice versa. The borrow is unchanged if the user doesn't set a new value.
			del #			Delete the class # and its filter and all its children class and their filters in WAN.
		dmz	add #	bandwidth xxx	<name xxx>	Add a class with bandwidth xxx bps in DMZ. The name is for users' information.
					<priority x>	Set the class' priority. The range is between 0 (the lowest) to 7 (the highest). The default value is 3.
					<borrow on off>	The class can borrow bandwidth from its parent class when the borrow is set on, and vice versa. The default value is off.
			mod #	<bandwidth xxx>		Modify the parameters of the class in DMZ. The bandwidth is unchanged if the user doesn't set a new value.
				<name xxx>		Set the class' name.
				<priority x>		Set the class' priority. The range is between 0 (the lowest) to 7 (the highest). The priority is unchanged if the user doesn't set a new value.
				<borrow on off>		The class can borrow bandwidth from its parent class when the borrow is set on, and vice versa. The borrow is

**ZyXEL Confidential**

						unchanged if the user doesn't set a new value.
			del #			Delete the class # and its filter and all its children class and their filters in DMZ.
		wlan	add #	bandwidth xxx	<name xxx>	Add a class with bandwidth xxx bps in WLAN. The name is for users' information.
					<priority x>	Set the class' priority. The range is between 0 (the lowest) to 7 (the highest). The default value is 3.
					<borrow on/off>	The class can borrow bandwidth from its parent class when the borrow is set on, and vice versa. The default value is off.
			mod #	<bandwidth xxx>		Modify the parameters of the class in WLAN. The bandwidth is unchanged if the user doesn't set a new value.
				<name xxx>		Set the class' name.
				<priority x>		Set the class' priority. The range is between 0 (the lowest) to 7 (the highest). The priority is unchanged if the user doesn't set a new value.
				<borrow on/off>		The class can borrow bandwidth from its parent class when the borrow is set on, and vice versa. The borrow is unchanged if the user doesn't set a new value.
			del #			Delete the class # and its filter and all its children class and their filters in WLAN.
	filter	lan	add #	Daddr <mask Dmask> Dport Saddr <mask Smask> Sport protocol		Add a filter for class # in LAN. The filter contains destination address (netmask), destination port, source address (netmask), source port and protocol. You may set the value as 0 if you do not care the item.
			del #			Delete a filter which belongs to class # in LAN.
		wan	add #	Daddr <mask Dmask> Dport Saddr <mask Smask> Sport protocol		Add a filter for class # in WAN. The filter contains destination address (netmask), destination port, source address (netmask), source port and protocol. You may set the value as 0 if you do not care the item.
			del #			Delete a filter which belongs to class # in WAN.
		dmz	add #	Daddr <mask Dmask> Dport Saddr <mask Smask> Sport protocol		Add a filter for class # in DMZ. The filter contains destination address (netmask), destination port, source address (netmask), source port and protocol. You may set the value as 0 if you do not care the item.
			del #			Delete a filter which belongs to class # in DMZ.
		wlan	add #	Daddr <mask Dmask> Dport Saddr <mask Smask> Sport protocol		Add a filter for class # in WLAN. The filter contains destination address (netmask), destination port, source address (netmask), source port and protocol. You may set the value as 0 if you do not care the item.
			del #			Delete a filter which belongs to class # in WLAN.
	show	interface	lan			Show the interface settings of LAN
			wan			Show the interface settings of WAN
			dmz			Show the interface settings of DMZ
			wlan			Show the interface settings of WLAN
		class	lan			Show the classes settings of LAN
			wan			Show the classes settings of WAN
			dmz			Show the classes settings of DMZ
			wlan			Show the classes settings of WLAN
		filter	lan			Show the filters settings of LAN
			wan			Show the filters settings of WAN
			dmz			Show the filters settings of DMZ
			wlan			Show the filters settings of WLAN
		statistics	lan			Show the statistics of the classes in LAN
			wan			Show the statistics of the classes in WAN

**ZyXEL Confidential**

			dmz			Show the statistics of the classes in DMZ
			wlan			Show the statistics of the classes in WLAN
	monitor	lan	<#>			Monitor the bandwidth of class # in LAN. If the class is not specific, all the classes in LAN will be monitored. The first time you key the command will set it on; the second time you will set it off, and so on.
		wan	<#>			Monitor the bandwidth of class # in WAN. If the class is not specific, all the classes in WAN will be monitored. The first time you key the command will set it on; the second time you will set it off, and so on.
		dmz	<#>			Monitor the bandwidth of class # in DMZ. If the class is not specific, all the classes in DMZ will be monitored. The first time you key the command will set it on; the second time you will set it off, and so on.
		wlan	<#>			Monitor the bandwidth of class # in WLAN. If the class is not specific, all the classes in WLAN will be monitored. The first time you key the command will set it on; the second time you will set it off, and so on.
	config	save				Save the configuration.
		load				Load the configuration.
		clear				Clear the configuration.

## Bridge Related Command

[Home](#)

Command				Flag	Description
bridge				R + B	
	cnt			R + B	related to bridge routing statistic table
		disp		R + B	display bridge route counter
		clear		R + B	clear bridge route counter
	iface			R + B	Related to "bridge mode" access interface
		active	<yes/no>	R + B	Active bridge mode iface or not
		address	[ip]	B	Remote access IP address
		dns1	[ip]	B	First DNS server
		dns2	[ip]	B	Second DNS server
		dns3	[ip]	B	Third DNS server
		mask	[network mask]	B	Network mask
		gateway	[gateway ip]	B	Network gateway
		display		B	Display whole interface information
	stat			R + B	related to bridge packet statistic table
		disp		R + B	display bridge route packet counter
		clear		R + B	clear bridge route packet counter

## myZyXEL.com Command

[Home](#)

Command				Description	Flag
sys					U+R
	myZyxe1Com				U+R

**ZyXEL Confidential**

		checkUserName	<username>	Check the username exists or not	U+R
		register	<username> <password> <email> <countryCode>	Inout the registration information, include username, password, email, and country code.	U+R
		trialService	<service>, 1 : CF, 2 : 3in1, 3 : CF + 3in1	Input the service that to be tried.	U+R
		serviceUpgrade	<licence key>	Inout license key that you want to let service from trial to standard	U+R
		serviceRefresh	NULL	Refresh the myZyXEL.com service status	U+R
		display	NULL	Display all myZyXEL.com setting	U+R
		serviceDisplay	NULL	Display all service status, include expired day.	U+R

## IDP Command

[Home](#)

Command					Description	Flag
idp					IDP CI commands	U+R+B
	display				Display the enable setting and the protected interface setting	U+R+B
	load				Load the enable setting and the protected interface setting	U+R+B
	config				Config the enable setting and the protected interface setting	U+R+B
		enable	<on/off>		Config the enable setting.	U+R+B
		wan1	<on/off>		Config the protected interface setting.	U+R+B
		wan2	<on/off>		Config the protected interface setting.	U+R+B
		lan	<on/off>		Config the protected interface setting.	U+R+B
		dmz	<on/off>		Config the protected	U+R+B



					interface setting.	
		wlan	<on/off>		Config the protected interface setting.	U+R+B
		wan	<on/off>		Config the protected interface setting.	U+R+B
	save				Save the enable setting and the protected interface setting	U+R+B
	commonDebug				The debug command for IDP/Anti-Virus/Anti-Spam	I+R+B
		display			Show the debug setting for IDP/Anti-Virus/Anti-Spam	H+R+B
		tos	<on/off>		Set the tos debug flag for IDP/Anti-Virus/Anti-Spam	H+R+B
		ipfrag	<on/off>		Set the ipfrag flag for IDP/Anti-Virus/Anti-Spam	H+R+B
		tcpasm	<on/off>		Set the tcpasm debug flag for IDP/Anti-Virus/Anti-Spam	H+R+B
		tcpprocess	<on/off>		Set the tcpprocess debug flag for IDP/Anti-Virus/Anti-Spam	H+R+B
		l7process	<on/off>		Set the l7process debug flag for IDP/Anti-Virus/Anti-Spam	H+R+B
		autoupdate	<on/off>		Set the autoupdate debug flag for the IDP/Anti-Virus signature autoupdate	H+R+B
		reengine	<on/off>		Set the reengine debug flag for the IDP/Anti-Virus SW/HW search engine	H+R+B
		bwengine	<on/off>		Set the bwengine debug flag for IDP backend process	H+R+B
		reLibDbg	<on/off>		Set the reLibDbg debug flag for the Lionic resoft library	H+R+B
		showIaCb			Show the runtime debug information for IDP/Anti-Virus	H+R+B
		showMemUseInfo			Show the memory usage information for IDP/Anti-Virus	H+R+B
	tune				The tune command for IDP/Anti-Virus/Anti-Spam	U+R+B
		load			Load the tune configuration	U+R+B

**ZyXEL Confidential**

		save			Save the tune configuration	U+R+B
		display			Display the tune configuration	U+R+B
		config			Config the tune configuration	U+R+B
			14Udpcksum	<on off>	Enable/Disable UDP checksum check	U+R+B
			14Icmpcksum	<on off>	Enable/Disable ICMP checksum check	U+R+B
			14Tcpcksum	<on off>	Enable/Disable TCP checksum check	U+R+B
			14Tcpwindowck	<on off>	Enable/Disable TCP window check	U+R+B
			14Tcptomssck	<on off>	Enable/Disable TCP mss check	U+R+B
			17Smtasm	<on off>	Enable/Disable TCP assembly for SMTP	U+R+B
			17Pop3asm	<on off>	Enable/Disable TCP assembly for POP3	U+R+B
			17Httpasm	<on off>	Enable/Disable TCP assembly for HTTP	U+R+B
			17Ftpasm	<on off>	Enable/Disable TCP assembly for FTP	U+R+B
			17Ftpdataasm	<on off>	Enable/Disable TCP assembly for FTPDATA	U+R+B
			17Otherasm	<on off>	Enable/Disable TCP assembly for other protocols	U+R+B
	update				The command about signature and signature update stuffs	U+R+B
		display			Show the signature information and the update setting	U+R+B
		load			Load the signature update setting	U+R+B
		save			Save the signature update setting	U+R+B
		displayMinute			Display the current update minute setting	I+R+B
		configMinute	[00-59]		Config the current update minute setting	I+R+B
		start			Start the signature update	U+R+B
		config			Config the signature update setting	U+R+B
			autoupdate	<on off>	Enable/Disable the	U+R+B

					autoupdate	
			method	<1-3>	Config the update method	U+R+B
			dailyTime	<00-23>	Config the daily hour update schedule	U+R+B
			weeklyDay	<1-7>	Config the weekly day update schedule	U+R+B
			weeklyTime	<00-23>	Config the weekly hour update schedule	U+R+B
	signature				The command about signature post-process setting	U+R+B
		display			Display the current signature setting	U+R+B
		load	<Signature_ID>		Load the signature setting that its ID is SignatureIID	U+R+B
		save			Save the signature setting	U+R+B
		config			Config the current signature setting	U+R+B
			active	<on/off>	Enable/Disable the active option	U+R+B
			log	<on/off>	Enable/Disable the log option	U+R+B
			alert	<on/off>	Enable/Disable the alert option	U+R+B
			action	<1-6>	Set the post action	U+R+B
		reset			Reset the signature setting to the default setting	U+R+B
		listFullRef			List the IDP reference table of the full version signature	I+R+B
		listDeltaRef			List the IDP reference table of the delta version signature	I+R+B
		listUserConf			List the all signature setting	I+R+B
		reinit			Re-initialize the search engine/backend process engine	I+R+B
		clearFullSig			Clear the full version signature file from the flash	I+R+B
		clearDeltaSig			Clear the delta version signature file from the flash	I+R+B
		configAll			Config all signature	I+R+B

					settings	
			active	<on/off>	Enable/Disable the active option to all signature settings	I+R+B
			log	<on/off>	Enable/Disable the log option to all signature settings	I+R+B
			alert	<on/off>	Enable/Disable the alert option to all signature settings	I+R+B
			action	<1-6>	Set the post action to all signature settings	I+R+B

## Anti-Virus Command

[Home](#)

Command					Description	Flag
av					Anti-Virus CI commands	U+R+B
	display				Show the anti-virus setting	U+R+B
	load				Load the anti-virus setting	U+R+B
	config				Config the anti-virus setting	U+R+B
		enable			Enable/Disable the anti-virus function	U+R+B
		httpScanAllMime	<on/off>		Enable/Disable scanning all mime type files. If we don't enable this option , ZyWall will just scan files with the application type	U+R+B
		pop3ScanAllMime	<on/off>		Enable/Disable scanning all mime type files. If we don't enable this option , ZyWall will just scan files with the application type	U+R+B
		smtpScanAllMime	Mon/off>		Enable/Disable scanning all mime type files. If we don't enable this option , ZyWall will just scan files with the application type	U+R+B
		decompress	<on/off>		Enable/Disable the decompress on the fly. You should also enable tcp assembly to support the decompress on the fly.	U+R+B
		ftp			Config the anti-virus	U+R+B

					setting for FTP	
			display		Show the anti-virus setting for FTP	U+R+B
			active	<on/off>	Enable/Disable the anti-virus function for FTP	U+R+B
			log	<on/off>	Enable/Disable the log option	U+R+B
			alert	<on/off>	Enable/Disable the alert option	U+R+B
			breakfile	<on/off>	Enable/Disable the breakfile option	U+R+B
			sendmsg	<on/off>	Enable/Disable the sendmsg option	U+R+B
			wan1	<on/off>	Config the protected interface setting.	U+R+B
			wan2	<on/off>	Config the protected interface setting	U+R+B
			wan	<on/off>	Config the protected interface setting	U+R+B
			lan	<on/off>	Config the protected interface setting	U+R+B
			dmz	<on/off>	Config the protected interface setting	U+R+B
			wlan	<on/off>	Config the protected interface setting	U+R+B
		http			Config the anti-virus setting for HTTP	U+R+B
			display		Show the anti-virus setting for HTTP	U+R+B
			active	<on/off>	Enable/Disable the anti-virus function for HTTP	U+R+B
			log	<on/off>	Enable/Disable the log option	U+R+B
			alert	<on/off>	Enable/Disable the alert option	U+R+B
			breakfile	<on/off>	Enable/Disable the breakfile option	U+R+B
			sendmsg	<on/off>	Enable/Disable the sendmsg option	U+R+B
			wan1	<on/off>	Config the protected interface setting.	U+R+B
			wan2	<on/off>	Config the protected interface setting	U+R+B
			wan	<on/off>	Config the protected interface setting	U+R+B
			lan	<on/off>	Config the protected	U+R+B

					interface setting	
			dmz	<on/off>	Config the protected interface setting	U+R+B
			wlan	<on/off>	Config the protected interface setting	U+R+B
		smtp			Config the anti-virus setting for SMTP	U+R+B
			display		Show the anti-virus setting for SMTP	U+R+B
			active	<on/off>	Enable/Disable the anti-virus function for SMTP	U+R+B
			log	<on/off>	Enable/Disable the log option	U+R+B
			alert	<on/off>	Enable/Disable the alert option	U+R+B
			breakfile	<on/off>	Enable/Disable the breakfile option	U+R+B
			sendmsg	<on/off>	Enable/Disable the sendmsg option	U+R+B
			wan1	<on/off>	Config the protected interface setting.	U+R+B
			wan2	<on/off>	Config the protected interface setting	U+R+B
			wan	<on/off>	Config the protected interface setting	U+R+B
			lan	<on/off>	Config the protected interface setting	U+R+B
			dmz	<on/off>	Config the protected interface setting	U+R+B
			wlan	<on/off>	Config the protected interface setting	U+R+B
		pop3			Config the anti-virus setting for POP3	U+R+B
			display		Show the anti-virus setting for POP3	U+R+B
			active	<on/off>	Enable/Disable the anti-virus function for POP3	U+R+B
			log	<on/off>	Enable/Disable the log option	U+R+B
			alert	<on/off>	Enable/Disable the alert option	U+R+B
			breakfile	<on/off>	Enable/Disable the breakfile option	U+R+B
			sendmsg	<on/off>	Enable/Disable the sendmsg option	U+R+B
			wan1	<on/off>	Config the protected	U+R+B

					interface setting.	
			wan2	<on/off>	Config the protected interface setting	U+R+B
			wan	<on/off>	Config the protected interface setting	U+R+B
			lan	<on/off>	Config the protected interface setting	U+R+B
			dmz	<on/off>	Config the protected interface setting	U+R+B
			wlan	<on/off>	Config the protected interface setting	U+R+B
	save				Save the anti-virus setting	U+R+B
	update				The command about signature and signature update stuffs	U+R+B
		display			Show the signature information and the update setting	U+R+B
		load			Load the signature update setting	U+R+B
		save			Save the signature update setting	U+R+B
		displayMinute			Display the current update minute setting	I+R+B
		configMinute	[00-59]		Config the current update minute setting	I+R+B
		start			Start the signature update	U+R+B
		config			Config the signature update setting	U+R+B
			autoupdate	<on/off>	Enable/Disable the autoupdate	U+R+B
			method	<1-3>	Config the update method	U+R+B
			dailyTime	<00-23>	Config the daily hour update schedule	U+R+B
			weeklyDay	<1-7>	Config the weekly day update schedule	U+R+B
			weeklyTime	<00-23>	Config the weekly hour update schedule	U+R+B
	commonDebug				The debug command for IDP/Anti-Virus/Anti-Spam	I+R+B
		display			Show the debug setting for IDP/Anti-Virus/Anti-Spam	H+R+B
		tos	<on/off>		Set the tos debug flag for IDP/Anti-Virus/Anti-Spam	H+R+B
		ipfrag	<on/off>		Set the ipfrag flag for IDP/Anti-Virus/Anti-Spam	H+R+B

		tcpasm	<on off>		Set the tcpasm debug flag for IDP/Anti-Virus/Anti-Spam	H+R+B
		tcpprocess	<on off>		Set the tcpprocess debug flag for IDP/Anti-Virus/Anti-Spam	H+R+B
		l7process	<on off>		Set the l7process debug flag for IDP/Anti-Virus/Anti-Spam	H+R+B
		autoupdate	<on off>		Set the autoupdate debug flag for the IDP/Anti-Virus signature autoupdate	H+R+B
		reengine	<on off>		Set the reengine debug flag for the IDP/Anti-Virus SW/HW search engine	H+R+B
		bwengine	<on off>		Set the bwengine debug flag for IDP backend process	H+R+B
		reLibDbg	<on off>		Set the reLibDbg debug flag for the Lionic resoft library	H+R+B
		showIaCb			Show the runtime debug information for IDP/Anti-Virus	H+R+B
		showMemUseInfo			Show the memory usage information for IDP/Anti-Virus	H+R+B
	tune				The tune command for IDP/Anti-Virus/Anti-Spam	U+R+B
		load			Load the tune configuration	U+R+B
		save			Save the tune configuration	U+R+B
		display			Display the tune configuration	U+R+B
		config			Config the tune configuration	U+R+B
			l4Udpcksum	<on off>	Enable/Disable UDP checksum check	U+R+B
			l4Icmpcksum	<on off>	Enable/Disable ICMP checksum check	U+R+B
			l4Tcpcksum	<on off>	Enable/Disable TCP checksum check	U+R+B
			l4Tcpwindowck	<on off>	Enable/Disable TCP window check	U+R+B
			l4Tcptomssck	<on off>	Enable/Disable TCP mss check	U+R+B



			17Smtpasm	<on/off>	Enable/Disable TCP assembly for SMTP	U+R+B
			17Pop3asm	<on/off>	Enable/Disable TCP assembly for POP3	U+R+B
			17Httpasm	<on/off>	Enable/Disable TCP assembly for HTTP	U+R+B
			17Ftpasm	<on/off>	Enable/Disable TCP assembly for FTP	U+R+B
			17Ftpdataasm	<on/off>	Enable/Disable TCP assembly for FTPDATA	U+R+B
			17Otherasm	<on/off>	Enable/Disable TCP assembly for other protocols	U+R+B
	listFullRef				List the virus reference table of the full version signature	I+R+B
	listDeltaRef				List the virus reference table of the delta version signature	I+R+B
	debug				The debug flag for the anti-virus	I+R+B
		display			Display the debug flag setting	I+R+B
		smtppop3	<on/off>		The debug flag for the SMTP/POP3 attachment process	I+R+B
		ftpdata	<on/off>		The debug flag for the FTPDATA process	I+R+B
		http	<on/off>		The debug flag for the HTTP process	I+R+B
		decompress	<on/off>		The debug flag for the decompress on the fly	I+R+B
		maildecode	<on/off>		The debug flag for the uuencode/base64 decode process	I+R+B
		mailinsertion	<on/off>		The debug flag for the mail text insertion process	I+R+B

## Anti-Spam Command

[Home](#)

Command					Description	Flag
as					Anti-Spam CI commands	U+R+B
	asAction	[0 1]			Forward/Block exceeding mails sessions.	U+R+B
	cleanServerList	[index   all]			Delete one or all rating	I+R+B

					servers from the server list.	
	debug				Debug for AntiSpam	U+R+B
		customListServ			Set custom server list server	U+R+B
			ip	[IP address]	Set custom server list server IP address	U+R+B
			enable	[0:disable 1:enable]	Enable/Disable custom server list server	U+R+B
		customRateServ			Set custom rating server server.	U+R+B
			ip	[IP address]	Set custom rating server IP address	U+R+B
			enable	[0:disable 1:enable]	Enable/Disable custom rating server	U+R+B
		envelope	[on off]		Enable/Disable envelope debug message.	H+R+B
		http	[on off]		Enable/Disable http debug message.	H+R+B
		mail	[on off]		Enable/Disable mail debug message.	H+R+B
		pop3	[on off]		Enable/Disable pop3 debug message.	H+R+B
		smtp	[on off]		Enable/Disable smtp debug message.	H+R+B
	delete				Delete AntiSpam static filter.	U+R+B
		blackRule	<num start> [num end]		Delete black rule filter. User can delete one or a set of filter.	U+R+B
		whiteRule	<num start>		Delete white rule filter.	U+R+B

			[num end]		User can delete one or a set of filter.	
	display					
		antispam			Display AntiSpam configuration.	U+R+B
		serverlist			Display rating server list.	U+R+B
	enable	<0:disable   1:enable>			Enable/Disable AntiSpam.	U+R+B
	failTolerance	[time]			Set rating server fail tolerance time. If the rating server timeout interval over this tolerance, this server will be removed from server list.	U+R+B
	fill				Fill the white/black list.	I+R+B
		blackRule			Fill the black list.	I+R+B
			ip	<start IP address>	Fill the black list with IP filter.	I+R+B
			email		Fill the black list with Email filter.	I+R+B
			mime		Fill the black list with MIME filter.	I+R+B
		blackRule			Fill the white list.	I+R+B
			ip	<start IP address>	Fill the white list with IP filter.	I+R+B
			email		Fill the white list with Email filter.	I+R+B
			mime		Fill the white list with MIME filter.	I+R+B

**ZyXEL Confidential**

	freeSession				Free all mail sessions.	U+R+B
	getServerList	<Y:Yes N:No>			Send server list request manually.	U+R+B